


Connection examples evaluation unit CMS-E-BR

Connection example 1

 One read head on one evaluation unit CMS-E-BR (without feedback loop)

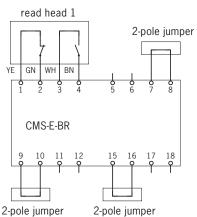

Connection examples for automatic start

With feedback loop
+24Vo


Page 13 Page 14 Page 14 Page 14 Page 15 Page

Without feedback loop



Connection example 2


 Two read heads on one evaluation unit CMS-E-BR (without feedback loop)

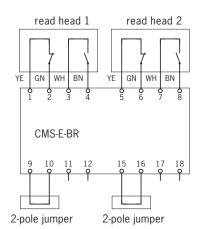



Connection example 3

 Four read heads on one evaluation unit CMS-E-BR (without feedback loop)

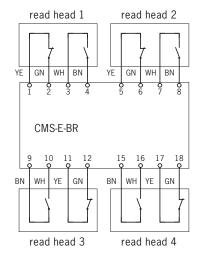

Notes

The following applies to all the illustrations:

Evaluation unit electrically isolated, actuator not in the operating distance.