




Conforming to
OSHA / ANSI



JIS

Protection structure IP67

New version with improved environmental
resistance performance

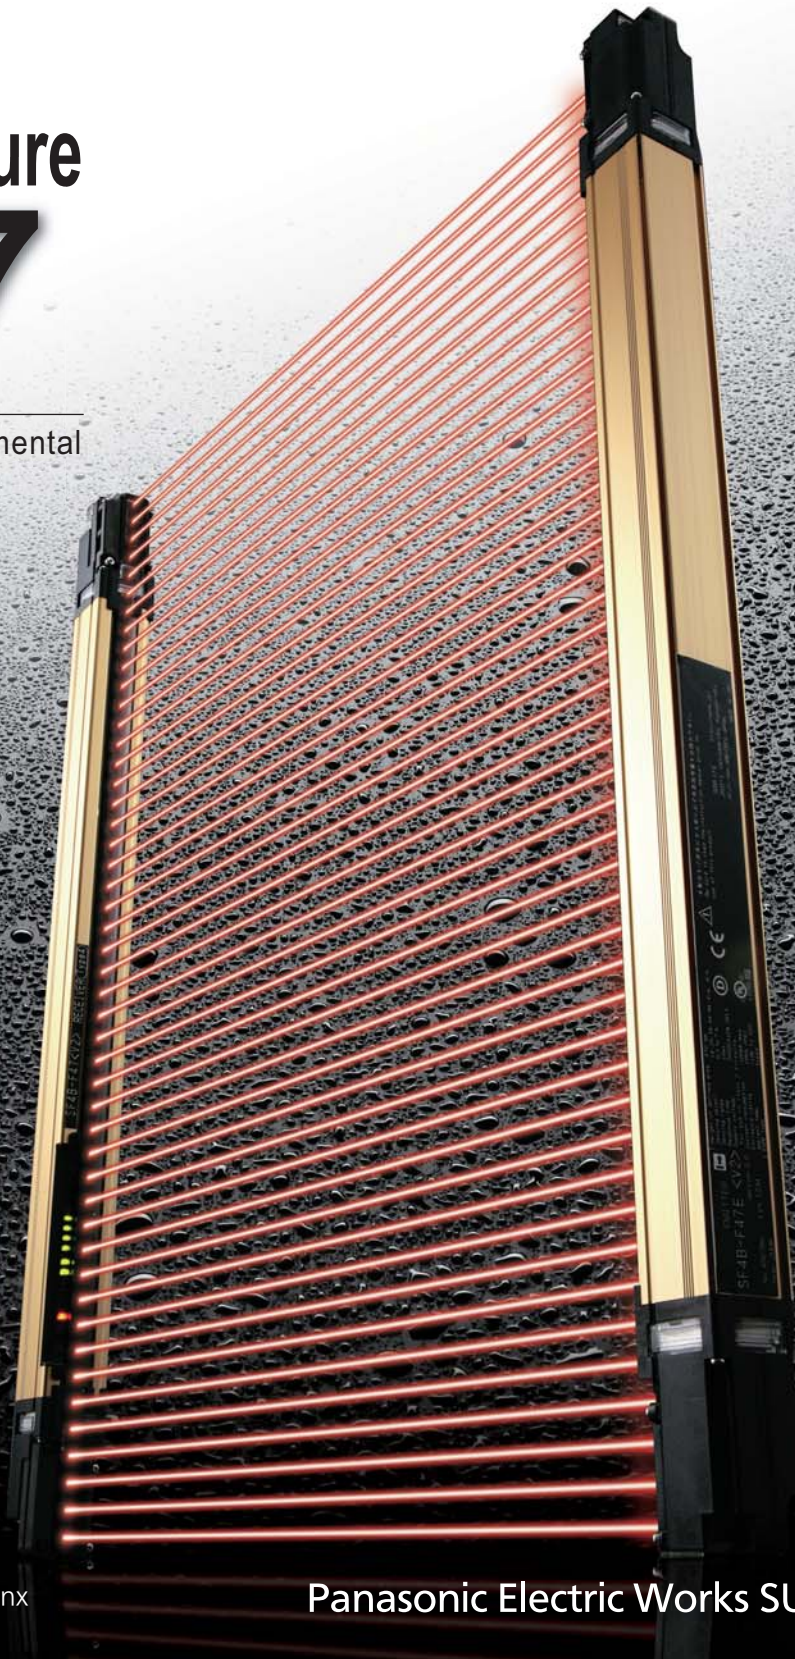

Advanced light curtains at the forefront of the industry



Protection structure IP67 is achieved in such size

Improved environmental resistance performance and easier operability

New structure

A seamless structure with least seam area possible is newly developed. The inner unit is protected by a cylindrical inner case. Seams such as unit and lens surfaces have been greatly reduced, so that particles such as oil mists and dust are prevented from getting in, rising its environmental resistance performance.

SF4B series has passed the tests of IP65 and IP67 as specified by IEC / JIS standards. (Ver.2 only)

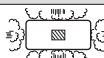IEC / JIS	Description	
IP65	No harmful effect due to direct water jet from any direction	
IP67	No water penetration due to immersion in water under specified conditions	

* Refer to each standard for details of test conditions.

Inner case

Cylindrical inner case protects the internal unit.


This new structure does not use adhesive or double-sided tape on the joints like with the previous models. There is no need to worry about water immersion or corrosion such as a coolant causing the adhesive to strip off.



Error details can be understood at a glance

Equipped with a digital error indicator

The system constantly checks the light curtain for problems such as incorrect cable wiring, disconnection, short-circuits, internal circuit problems, and incoming light problems. Details of any electrical problems such as at equipment startup will appear on the digital display. The inconvenience of the previous method of counting the number of LED blinks is no longer needed.

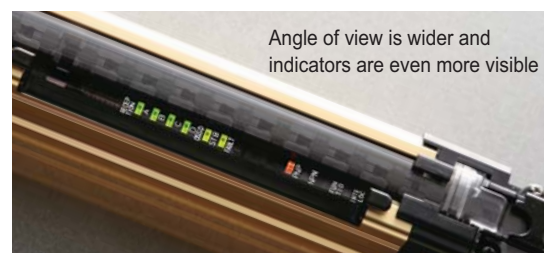

Angle of view is wider and
indicators are even more visible

Error number notification means
smooth support via telephone



Normal operation

Breaking out error

Digital error
indicator






Achieving protection structure IP67 while keeping its slim body.

Locate problems easily and quickly

Light curtain diagnosis software

Simply select the error no. that is displayed on the light curtain on the PC screen, and the section of error will be displayed visually. Coping process is also displayed for a quick resolution of the problem.

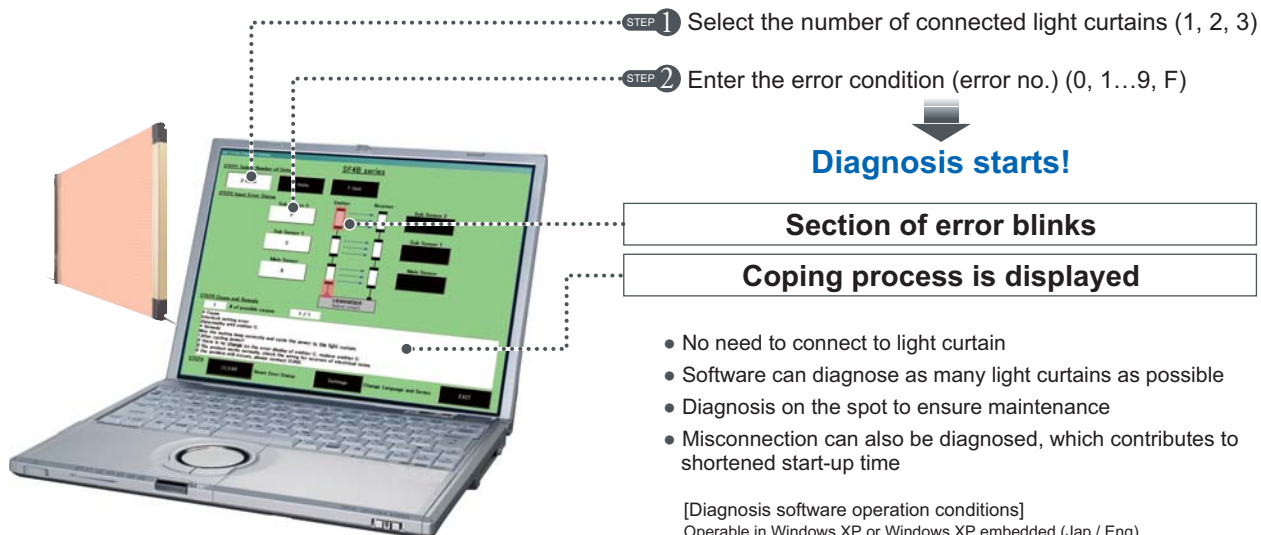


* Free download available from our website.

* Windows® is a registered trademark of Microsoft Corporation in the United States and other countries.

A unified response time of 14 ms for all models makes setup easy

A fast response time of 14 ms has been achieved regardless of the number of beam channels, the beam axis pitches and the number of units connected in series. This reduces calculation work required for the safety distance.

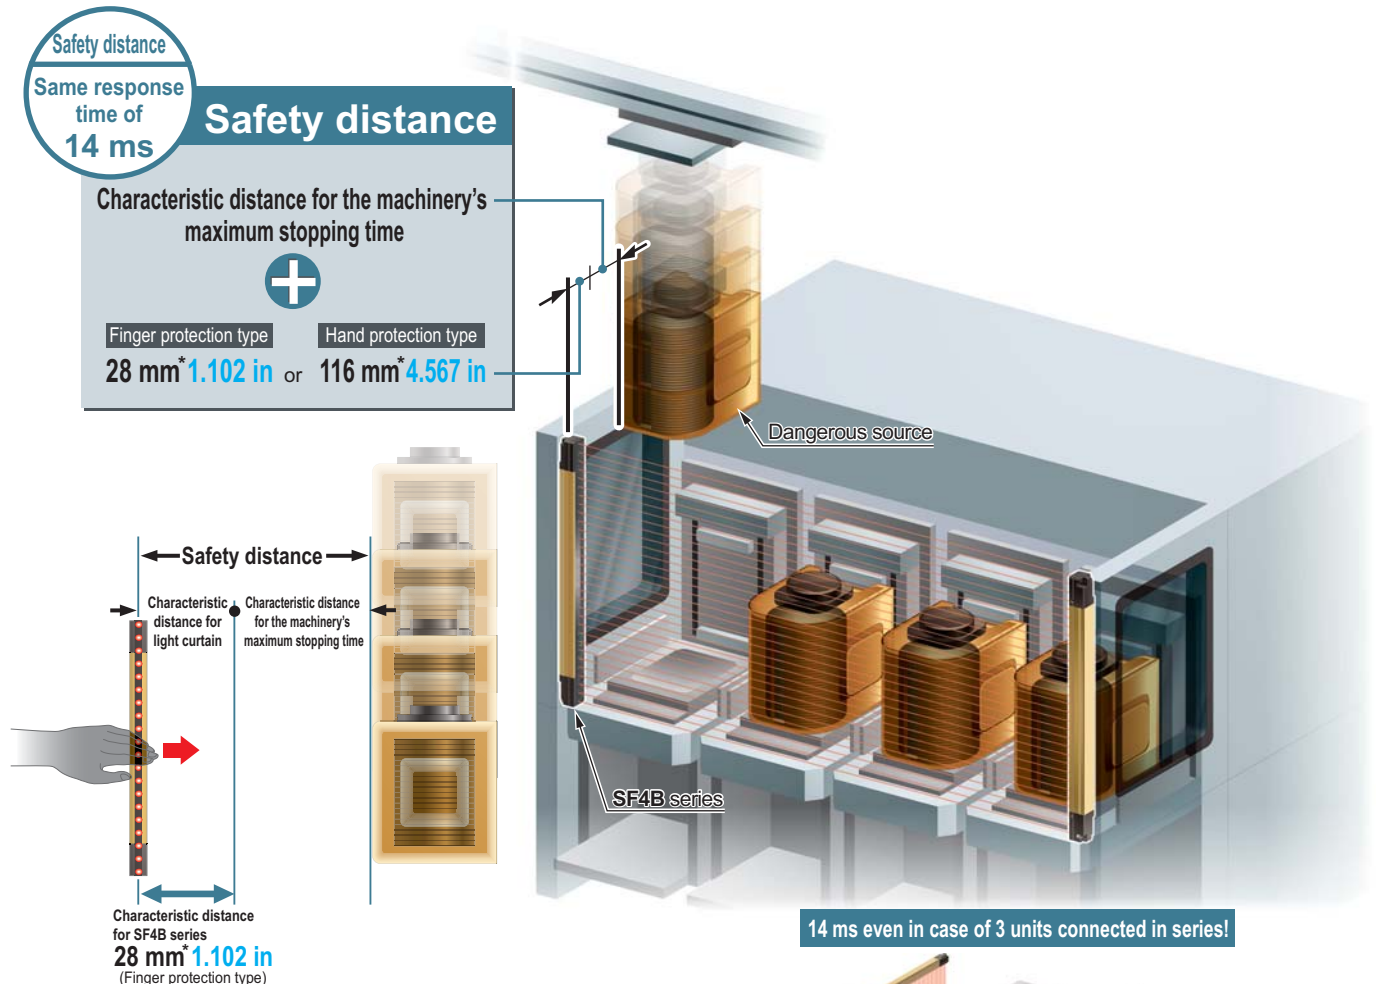

* This is the characteristic safety distance for the light curtain as defined by ISO 13855. Calculate the safety distance by including the machinery's maximum stopping time. Furthermore refer to the relevant standards of the region where this device is to be used, and then install this device.

* Series connection allows max. 3 sets or a total of up to 192 beam channels.

It is possible to select from among three types according to the worksite

A wide range of variations are available with protective heights of 230 to 1,910 mm (9.055 to 75.197 in (1,270 mm 50.000 in for the finger protection type)). Mixing three types in a series connection is also possible.



Finger protection type	SF4B-F□	Hand protection type	SF4B-H□	Arm / Foot protection type	SF4B-A□
Minimum sensing object ø14 mm ø0.551 in (10 mm 0.394 in beam pitch)		Minimum sensing object ø25 mm ø0.984 in (20 mm 0.787 in beam pitch)		Minimum sensing object ø45 mm ø1.772 in (40 mm 1.575 in beam pitch)	

Muting control function is built into light curtain

Safety circuits are selectable

A muting control function is provided to increase both safety and productivity


The light curtain is equipped with a muting control function that causes the line to stop only when a person passes through the light curtain, and does not stop the line when an object passes through. The muting sensors and muting lamps can be connected directly to the light curtain so that an exclusive controller is not required for muting. This both reduces costs and increases safety and productivity.

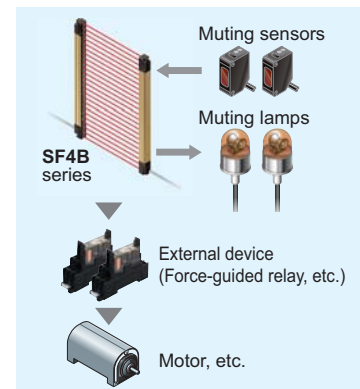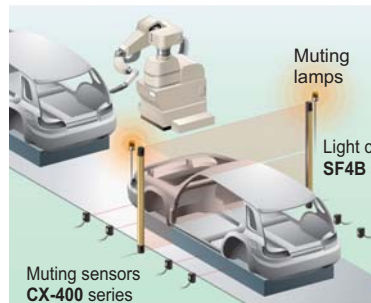


Override function allows the line to be restarted smoothly after it has stopped while muting control was active

In case the power turns off while the light curtain has been interrupted by an object or in case the line stops before the muting conditions have been established (if only one muting sensor has been interrupted), the line can be restarted smoothly without having to remove the object that is interrupting the light curtain.

(e.g.) When power turns off while light curtain was interrupted

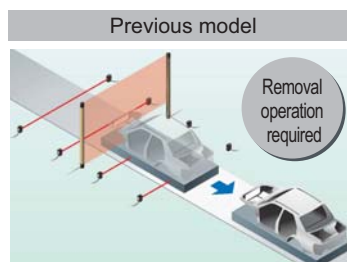



Object must be removed before restart

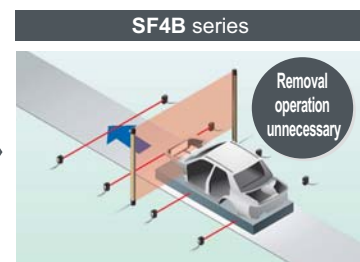


Smooth restart

Equipped with a safety circuit that does not require an exclusive safety relay unit

The light curtain has a built-in external device monitoring function (such as for fused relay monitoring) and an interlock function. The safety circuit is constructed so that a separate safety relay unit is not needed, and the control board has become smaller to help to contribute to lower costs.

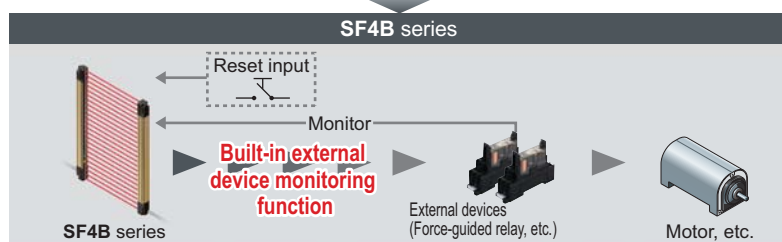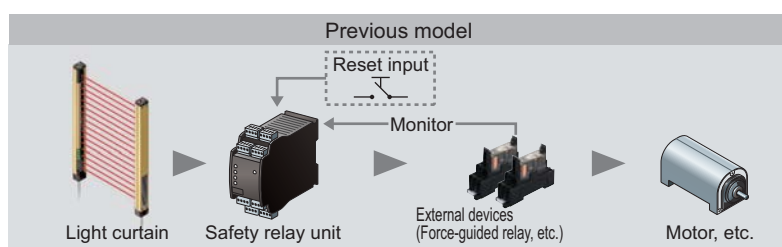


- Safety relay
Panasonic Electric Works Ltd.
SF series

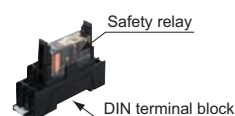

Note: Contact the manufacturers for details on the recommended products.

A universal design that can be used anywhere in the world

In Europe, America and Japan
PNP output and NPN output
in a single model!

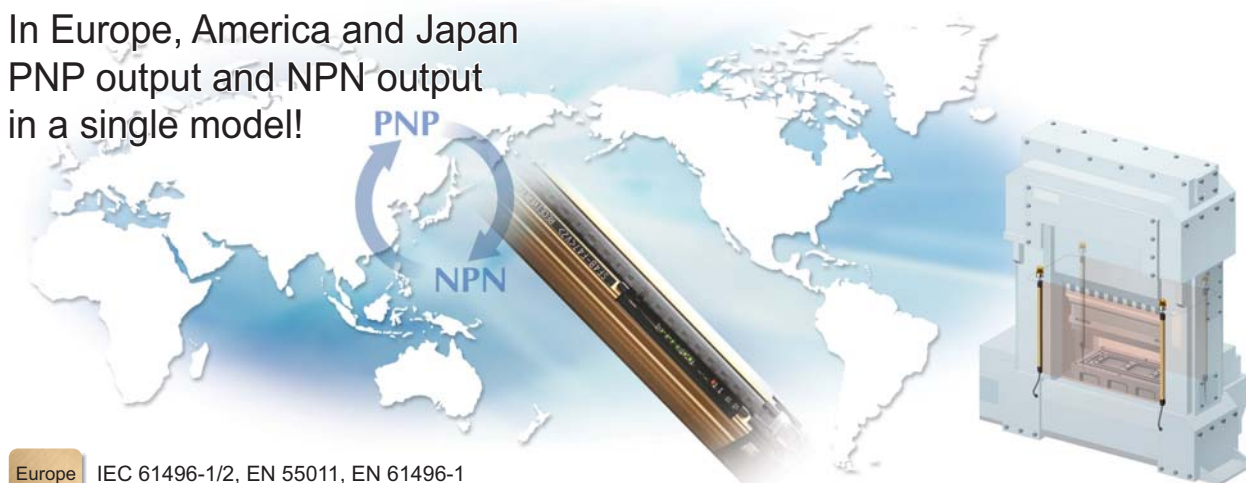


Europe	IEC 61496-1/2, EN 55011, EN 61496-1
North America	UL 61496-1/2, UL 1998, CSA, OSHA/ANSI
South Korea	SI-G-35-2005, S2-W-11-2003
China	GB 4584

Supports both PNP and NPN polarities in a single model

The **SF4B** series combines PNP transistor output and NPN transistor output in a single model. Overseas equipment that uses PNP, replacement with NPN sensors, factories that are positively grounded, and transfer of equipment overseas are all situations where the control circuits for a single model are suitable for use worldwide.

■ Polarity can be changed easily by changing wiring

When the output polarity setting wire (shielded) is connected to 0 V, PNP output is selected, and when it is connected to 24 V, it switches to NPN output.

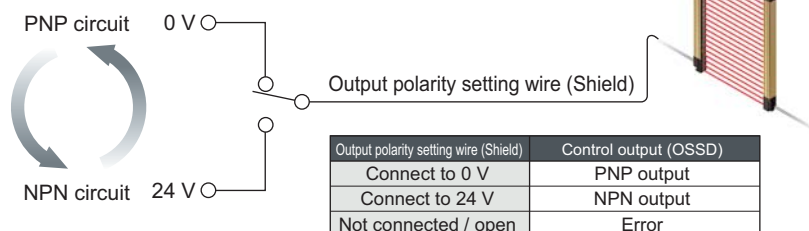


PNP / NPN polarity indicator

Either PNP or NPN side lights depending on which is selected.

A commitment to design that is easy to use


Beam-axis alignment indicators show the incident light position at a glance

Beam-axis alignment indicators display the beam channels of the light curtain in four blocks. When the beam channel at the bottommost channel (or topmost channel), which is used as a reference for beam-axis alignments, is correctly aligned, the LED blinks red. After this, each block lights red as the beam axes successively become aligned. When all channel beam axes are aligned, all LEDs light green. The display also has a stability indicator (STB) added so that setup can be carried out with greater stability.

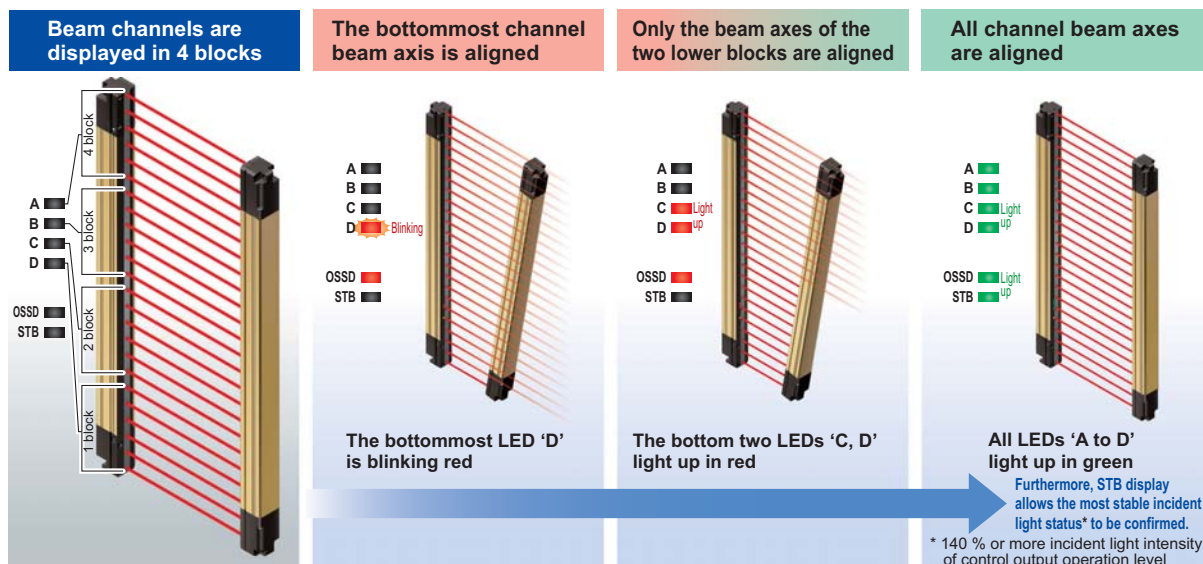


Laser alignment tool for easy installation

The tool performs beam-axis alignment using a laser beam spot. As the tool is battery-operated, it is possible to perform beam-axis alignment before actual powering on the equipment.

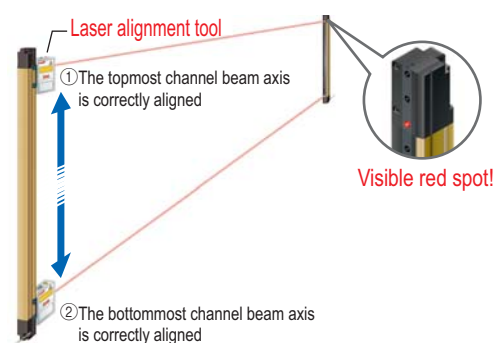


Greatly improved ease of installation

The hexagon-socket head bolts used for aligning the beam axis can be tightened from the front of the light curtain. Beam adjustment can be carried out easily while checking on the bolts. Also, the beam-axis alignment part is directly fixed by M5 bolts to prevent beam misalignment.

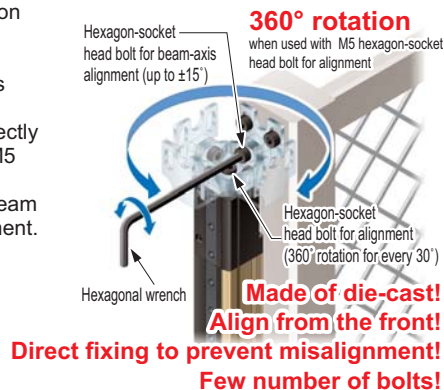

Easy to distinguish receiver and emitter

Emitter is in gray; receiver is in black. Whether during startup or maintenance, troubles due to incorrect wiring or false recognition can be greatly reduced. Moreover, model No. can be confirmed from the front face of the light curtain.

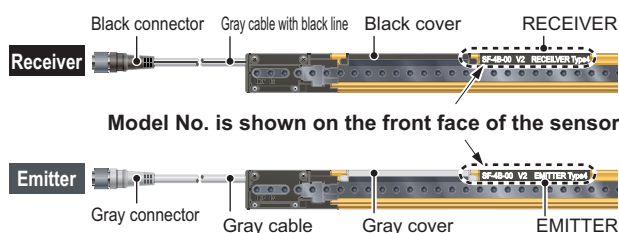

Mutual interference is reduced without needing for interference prevention lines

The light curtain is equipped with the ELCA (Extraneous Light Check & Avoid) function. Because it automatically shifts the scan timing of the light curtain in order to avoid interference, it is not necessary to wire interference prevention lines between machineries.

Reducing the number of malfunctions caused by extraneous light

Double scanning method and retry processing are two new functions exclusive to our company, which are effective in eliminating the effects of momentary extraneous light from peripheral equipment. The reduction in operating errors caused by extraneous light reduces frequent stopping of machinery.


Options exclusive for light curtain are available for an easy construction of safety circuit

Handy-controller SFB-HC* that enables the user to select a variety of settings **SFB-HC**

Separate muting control function for each beam channel

The handy-controller **SFB-HC*** (optional) can be used to carry out muting control for specified beam channels only. Because individual beam channel can be specified to suit the object, separate guards to prevent entry do not need to be set up.


While muting control is active (line operating)

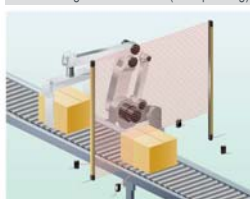

Line stopped




For example, depending on the height of the object, the muting function can be activated for 10 beam channels starting from the bottom, so that if the 11th or subsequent beam channels are interrupted, it is judged that a person has entered the area and the line stops.

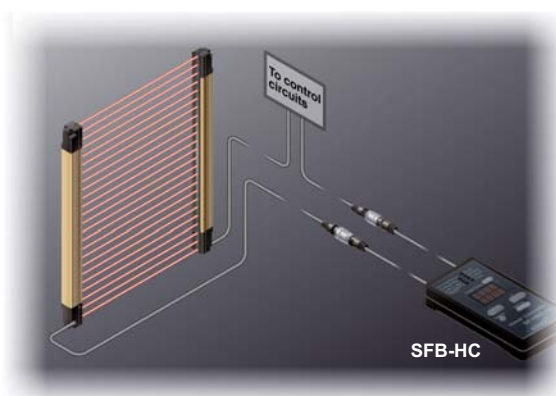

* A handy-controller cannot be used with the **SF4B-□-01<V2>** and the **SF-C14EX-01**.


Any valid beam channels can be selected The SF4B series incorporates a fixed blanking function.

The **SF4B** series is equipped with a fixed blanking function which allows specific beam channels to be selectively interrupted without causing the control output (OSSD) to output the OFF signal. This function is convenient for use with applications in which certain fixed obstacles tend to block specific beam channels. Furthermore, this function provides greater safety as the control output (OSSD) will automatically output the OFF signal if the fixed obstacles are subsequently removed from the sensing area.

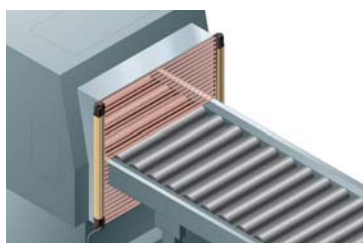

Non-specified beam channels can be deactivated The SF4B series incorporates a floating blanking function.

1, 2 or 3 non-specified beam channels can be deactivated. If the number of beam channels that are blocked is less than or equal to the set number of beam channels, then the control output (OSSD) will not output the OFF signal. This function is useful in the event when the positions of obstacles within the sensing area must be changed during object rearrangement, or when an object passes through the light curtain's sensing area.

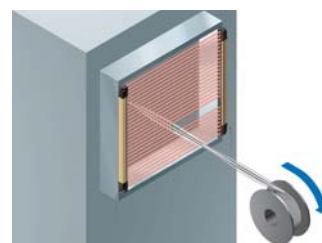

Note: When the floating blanking function is used, the size of the min. sensing object is changed. Refer to **"PRECAUTIONS FOR PROPER USE"** (p.34) for details.

Auxiliary output has selectable output configuration

Mode No.	Description
0	Negative logic of the control output (OSSD 1, OSSD 2) (factory setting)
1	Positive logic of the control output (OSSD 1, OSSD 2)
2	For emission: output ON, For non-emission: output OFF
3	For emission: output OFF, For non-emission: output ON
4	For unstable incident beam: OFF (Note 1)
5	For unstable incident beam: ON (Note 1)
6	For muting: ON
7	For muting: OFF
8	For beam received: ON, For beam interrupted: OFF (Note 2)
9	For beam received: OFF, For beam interrupted: ON (Note 2)

Notes: 1) The output cannot be used while the fix blanking function, floating blanking function or the muting function is activated.
2) This device outputs the beam received / interrupted state under activating the auxiliary output switching function using the handy controller irrespective of activating other functions, fixed blanking function, floating blanking function, and muting function.

A variety of other functions can be selected

Emission intensity control function

This function reduces the amount of emitting light. The two modes, normal mode and short mode, can be selected. The factory setting is set to the normal mode for the emission intensity control function.

Setting monitoring function

This function allows the user to confirm the details of each light curtain setting.

Protection function

Unless the password is not input, any setting change of the light curtain cannot be allowed. The factory setting is set to invalid for the protect function.

Copy function

Allows settings details to be copied into other light curtains. In the event that the same setting must be input into several different light curtains, this function will reduce the time required for the input of settings.

Muting lamp diagnosis setting

When the muting lamp diagnosis is disabled, the muting function will continue to operate even if the lamp is blown.


Lineup of exclusive control units



SF-C10 series


Supports both PNP and NPN polarities **SF-C10 series**

A single unit can be used for PNP / NPN input switching, reducing the number of parts that need to be registered.

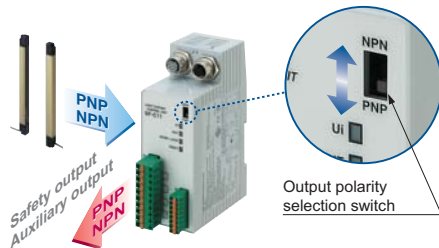

Plug-in connector type control unit **SF-C11**

Connecting to the light curtain is done using plug-in connector connections, which shorten setup and replacement time.

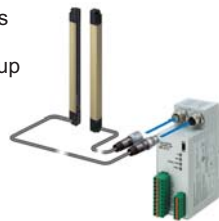

Robust type control unit **SF-C12**


The strong metal enclosure has a built-in safety relay. It has an IP65 protection structure, so that it can be set up individually without the need to be inserted into a control panel.



Connecting to the light curtain is done using plug-in connector connections

Slim type control unit **SF-C13**

Having a thickness of 22.5 mm **0.886 in**, it can be inserted even into narrow spaces inside panels.

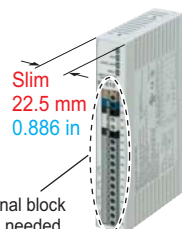

Spring-type terminal block
No torque control needed




SF-CL1T264T

Application expansion unit **SF-C14EX(-01)**


- ① Light curtain output
- ② Muting control
- ③ Emergency stop button

Three safety circuit systems are collected into a single unit.

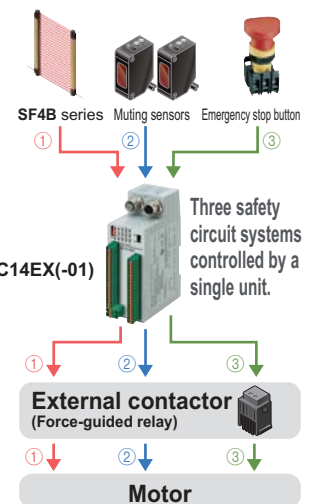

Remote I/O unit **SF-CL1T264T**


Connect light curtain and safety components to the safety field network, CC-Link Safety, and a single network is complete while achieving wire-saving.

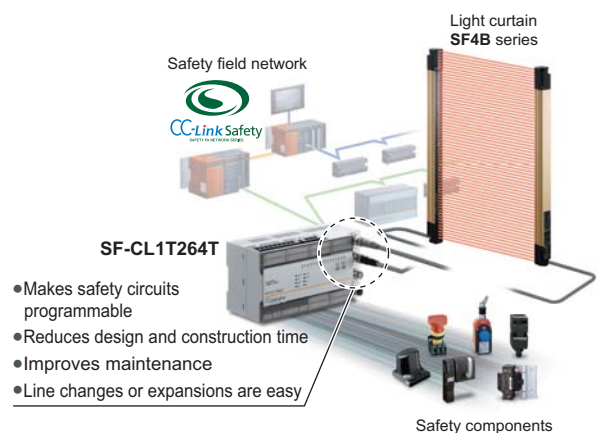

- Makes safety circuits programmable
- Reduces design and construction time
- Improves maintenance
- Line changes or expansions are easy


* Refer to **SF-CL1T264T** catalog or general catalog for details.

PRODUCT CONFIGURATION




Mounting bracket and mating cable are optional.

Standard components (8-core cable)

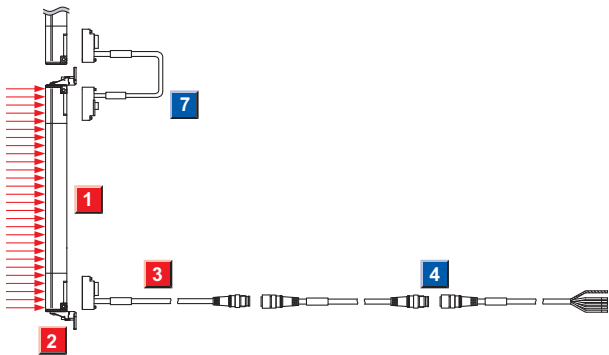

Component parts	
Required	1 Light curtain
	2 Mounting bracket (Optional)
	3 8-core bottom cap cable (Optional)
	4 8-core extension cable (Optional, use for cable extension)
	7 Cable for series connection (Optional, use for connection in series)

Muting control components (12-core cable, with interference prevention wire)

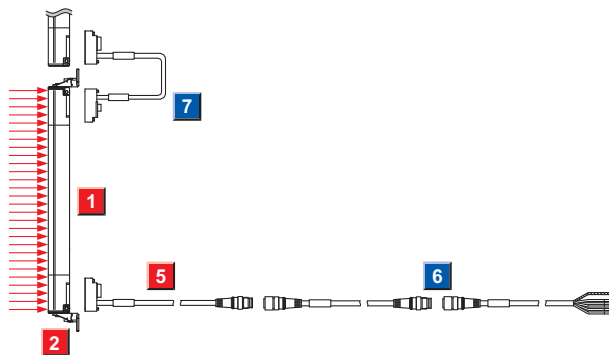


Component parts	
Required	1 Light curtain
	2 Mounting bracket (Optional)
	5 12-core bottom cap cable (Optional)
	6 12-core extension cable (Optional, use for cable extension)
	7 Cable for series connection (Optional, use for connection in series)

ORDER GUIDE

1 Light curtains Mounting bracket and bottom cap cable are not supplied with the light curtain. Be sure to order them separately.

Type		Appearance	Operating range (Note 1)	Model No. (Note 2)			Number of beam channels	Protective height (mm in)				
				SFB-HC non-compatible	Korean Press compliant (SFB-HC non-ompatible)							
Finger protection type	Min. sensing object $\phi 14$ mm $\phi 0.551$ in (10 mm 0.394 in beam pitch)			SF4B-F23<V2>	SF4B-F23-01<V2>	SF4B-F23-03<V2>	23	230 9.055				
				SF4B-F31<V2>	SF4B-F31-01<V2>	SF4B-F31-03<V2>	31	310 12.205				
				SF4B-F39<V2>	SF4B-F39-01<V2>	SF4B-F39-03<V2>	39	390 15.354				
				SF4B-F47<V2>	SF4B-F47-01<V2>	SF4B-F47-03<V2>	47	470 18.504				
				SF4B-F55<V2>	SF4B-F55-01<V2>	SF4B-F55-03<V2>	55	550 21.65				
				SF4B-F63<V2>	SF4B-F63-01<V2>	SF4B-F63-03<V2>	63	630 24.803				
				SF4B-F71<V2>	SF4B-F71-01<V2>	SF4B-F71-03<V2>	71	710 27.953				
				SF4B-F79<V2>	SF4B-F79-01<V2>	SF4B-F79-03<V2>	79	790 31.102				
				SF4B-F95<V2>	SF4B-F95-01<V2>	SF4B-F95-03<V2>	95	950 37.402				
				SF4B-F111<V2>	SF4B-F111-01<V2>	SF4B-F111-03<V2>	111	1,110 43.701				
				SF4B-F127<V2>	SF4B-F127-01<V2>	SF4B-F127-03<V2>	127	1,270 50.000				
				Hand protection type	Min. sensing object $\phi 25$ mm $\phi 0.984$ in (20 mm 0.787 in beam pitch)			SF4B-H12<V2>	SF4B-H12-01<V2>	SF4B-H12-03<V2>	12	230 9.055
SF4B-H16<V2>	SF4B-H16-01<V2>	SF4B-H16-03<V2>	16					310 12.205				
SF4B-H20<V2>	SF4B-H20-01<V2>	SF4B-H20-03<V2>	20					390 15.354				
SF4B-H24<V2>	SF4B-H24-01<V2>	SF4B-H24-03<V2>	24					470 18.504				
SF4B-H28<V2>	SF4B-H28-01<V2>	SF4B-H28-03<V2>	28					550 21.654				
SF4B-H32<V2>	SF4B-H32-01<V2>	SF4B-H32-03<V2>	32					630 24.803				
SF4B-H36<V2>	SF4B-H36-01<V2>	SF4B-H36-03<V2>	36					710 27.953				
SF4B-H40<V2>	SF4B-H40-01<V2>	SF4B-H40-03<V2>	40					790 31.102				
SF4B-H48<V2>	SF4B-H48-01<V2>	SF4B-H48-03<V2>	48					950 37.402				
SF4B-H56<V2>	SF4B-H56-01<V2>	SF4B-H56-03<V2>	56					1,110 43.701				
SF4B-H64<V2>	SF4B-H64-01<V2>	SF4B-H64-03<V2>	64					1,270 50.000				
SF4B-H72<V2>	SF4B-H72-01<V2>	SF4B-H72-03<V2>	72					1,430 56.299				
SF4B-H80<V2>	SF4B-H80-01<V2>	SF4B-H80-03<V2>	80					1,590 62.598				
SF4B-H88<V2>	SF4B-H88-01<V2>	SF4B-H88-03<V2>	88					1,750 68.898				
SF4B-H96<V2>	SF4B-H96-01<V2>	SF4B-H96-03<V2>	96					1,910 75.197				
Arm / Foot protection type	Min. sensing object $\phi 45$ mm $\phi 1.772$ in (40 mm 1.575 in beam pitch)							SF4B-A6<V2>	SF4B-A6-01<V2>	—	6	230 9.055
								SF4B-A8<V2>	SF4B-A8-01<V2>	—	8	310 12.205
								SF4B-A10<V2>	SF4B-A10-01<V2>	—	10	390 15.354
				SF4B-A12<V2>	SF4B-A12-01<V2>	—	12	470 18.504				
				SF4B-A14<V2>	SF4B-A14-01<V2>	—	14	550 21.654				
				SF4B-A16<V2>	SF4B-A16-01<V2>	—	16	630 24.803				
				SF4B-A18<V2>	SF4B-A18-01<V2>	—	18	710 27.953				
				SF4B-A20<V2>	SF4B-A20-01<V2>	—	20	790 31.102				
				SF4B-A24<V2>	SF4B-A24-01<V2>	—	24	950 37.402				
				SF4B-A28<V2>	SF4B-A28-01<V2>	—	28	1,110 43.701				
				SF4B-A32<V2>	SF4B-A32-01<V2>	—	32	1,270 50.000				
				SF4B-A36<V2>	SF4B-A36-01<V2>	—	36	1,430 56.299				
				SF4B-A40<V2>	SF4B-A40-01<V2>	—	40	1,590 62.598				
				SF4B-A44<V2>	SF4B-A44-01<V2>	—	44	1,750 68.898				
				SF4B-A48<V2>	SF4B-A48-01<V2>	—	48	1,910 75.197				

Notes: 1) The operating range is the possible setting distance between the emitter and the receiver. The light curtain can detect an object less than 0.3 m 0.984 ft away.

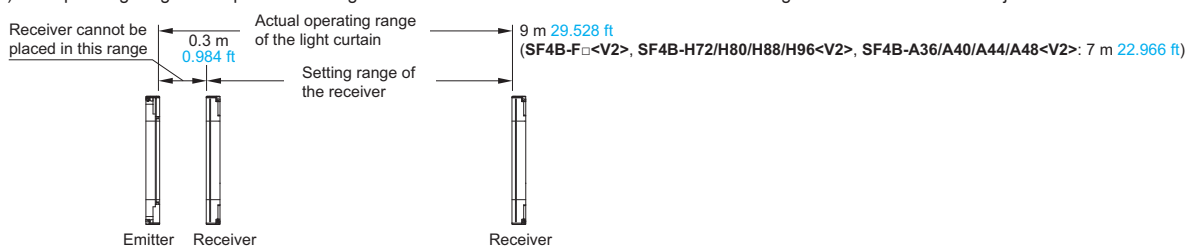

2) The model No. with "E" shown on the label affixed to the product is the emitter, "D" shown on the label is the receiver.
(e.g.) Emitter of SF4B-F23<V2>: SF4B-F23E<V2>, Receiver of SF4B-F23<V2>: SF4B-F23D<V2>.

ORDER GUIDE

2 Mounting brackets

Mounting bracket is not supplied with the light curtain. Be sure to order it separately.

Designation		Model No.	Description
Rear / side mounting bracket (Material: Iron)	M8 rear mounting bracket	MS-SFB-7-T	For rear direction. Allows the light curtain to be mounted at the rear with one M8 hexagon-socket-head bolt. (4 pcs. per set for emitter and receiver)
	M8 side mounting bracket	MS-SFB-8-T	For side direction. Allows the light curtain to be mounted at the side with one M8 hexagon-socket-head bolt. (4 pcs. per set for emitter and receiver)
	M8 rear / side mounting bracket set	MS-SFB-1-T2	Can be used as either a rear mounting bracket MS-SFB-7-T or a side mounting bracket MS-SFB-8-T depending on mounting direction. (4 pcs. per set for emitter and receiver)
360° mounting bracket (Material: Die-cast zinc alloy) * Light curtain can revolve 360° horizontally.	Standard mounting bracket	MS-SFB-1	Used to mount the light curtain on the rear surface and side surface. (4 pcs. per set for emitter and receiver)
	M8 mounting bracket	MS-SFB-1-T	Allows the light curtain to be mounted at the rear and side with one M8 hexagon-socket-head bolt. (4 pcs. per set for emitter and receiver)
	Pitch adapter bracket	MS-SFB-4	Used as the mounting bracket when changing over a previous light curtain with a protective height of 200 mm 7.874 in or more to the SF4B series. It is installed using two M5 hexagon-socket-head bolts. (4 pcs. per set for emitter and receiver)
	M8 pitch adapter bracket	MS-SFB-4-T	Used as the mounting bracket when changing over a previous light curtain with a protective height of 200 mm 7.874 in or more to the SF4B series. It is installed using one M8 hexagon-socket-head bolt. (4 pcs. per set for emitter and receiver)
Dead zoneless mounting bracket (Material: Die-cast zinc alloy)		MS-SFB-3	Mounting with no dead zone is possible so that the mounting bracket does not project past the protective height. (4 pcs. per set for emitter and receiver)


M8 rear mounting bracket

- **MS-SFB-7-T**
- **MS-SFB-1-T2 (Rear mounting)**

M8 rear mounting bracket


MS-SFB-7-T

MS-SFB-1-T2 (Rear mounting)

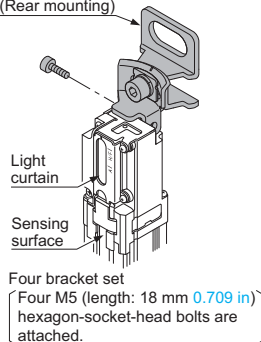


M8 side mounting bracket

- **MS-SFB-8-T**
- **MS-SFB-1-T2 (Side mounting)**

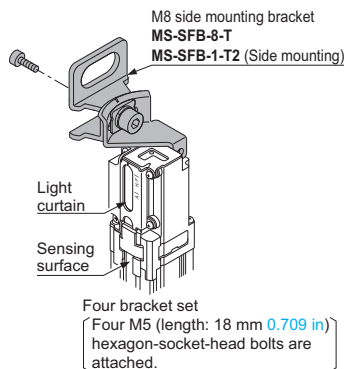


Standard mounting bracket

- **MS-SFB-1**

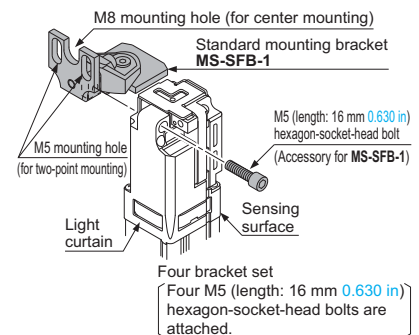


M8 mounting bracket

- **MS-SFB-1-T**

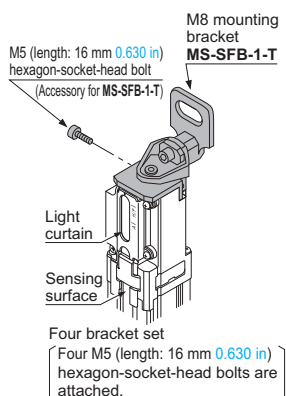


Pitch adapter bracket

- **MS-SFB-4**

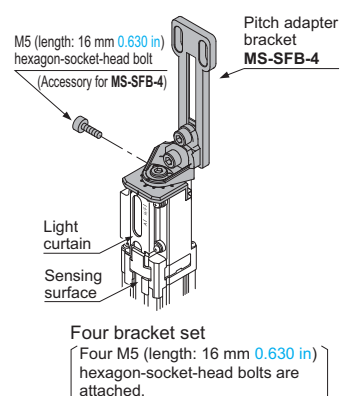


M8 pitch adapter bracket

- **MS-SFB-4-T**

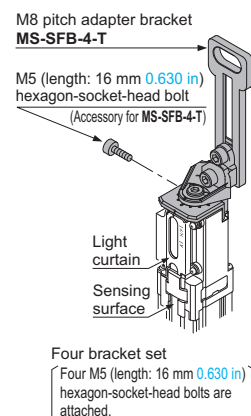









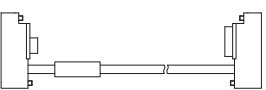
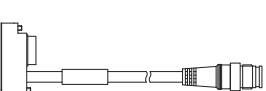
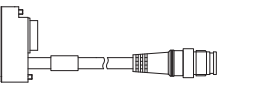
Dead zoneless mounting bracket

- **MS-SFB-3**

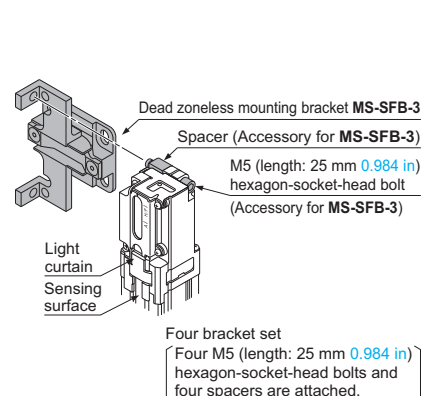

ORDER GUIDE

3 4 5 6 7 Mating cable / Extension cable / Cables for series connection Mating cable is not supplied with the light curtain. Be sure to order it separately.

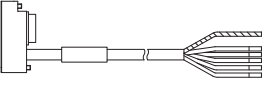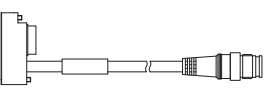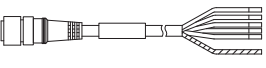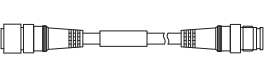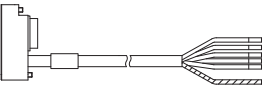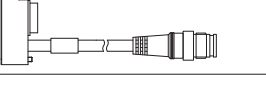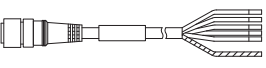Type	Appearance	Model No.	Description
Standard components (8-core cable)		SFB-CCB3	Length: 3 m 9.843 ft Net weight: 370 g approx. (2 cables)
		SFB-CCB7	Length: 7 m 22.966 ft Net weight: 820 g approx. (2 cables)
		SFB-CCB10	Length: 10 m 32.808 ft Net weight: 1,160 g approx. (2 cables)
		SFB-CCB15	Length: 15 m 49.213 ft Net weight: 1,710 g approx. (2 cables)
		SFB-CB05	Length: 0.5 m 1.640 ft Net weight: 95 g approx. (2 cables)
		SFB-CB5	Length: 5 m 16.404 ft Net weight: 620 g approx. (2 cables)
		SFB-CB10	Length: 10 m 32.808 ft Net weight: 1,200 g approx. (2 cables)
		SFB-CC3	Length: 3 m 9.843 ft Net weight: 380 g approx. (2 cables)
		SFB-CC10	Length: 10 m 32.808 ft Net weight: 1,200 g approx. (2 cables)
		SFB-CCJ3E	Length: 3 m 9.843 ft Net weight: 190 g approx. (1 cable)
		SFB-CCJ10E	Length: 10 m 32.808 ft Net weight: 580 g approx. (1 cable)
		SFB-CCJ3D	Length: 3 m 9.843 ft Net weight: 210 g approx. (1 cable)
		SFB-CCJ10D	Length: 10 m 32.808 ft Net weight: 600 g approx. (1 cable)
Mating control components (12-core cable, with interference prevention wire)		SFB-CCB3-MU	Length: 3 m 9.843 ft Net weight: 420 g approx. (2 cables)
		SFB-CCB7-MU	Length: 7 m 22.966 ft Net weight: 930 g approx. (2 cables)
		SFB-CB05-MU	Length: 0.5 m 1.640 ft Net weight: 110 g approx. (2 cables)
		SFB-CC3-MU	Length: 3 m 9.843 ft Net weight: 430 g approx. (2 cables)
		SFB-CC7-MU	Length: 7 m 22.966 ft Net weight: 1,000 g approx. (1 cables)
		SFB-CC10-MU	Length: 10 m 32.808 ft Net weight: 1,300 g approx. (2 cables)
		SFB-CCJ3E-MU	Length: 3 m 9.843 ft Net weight: 190 g approx. (1 cables)
		SFB-CCJ10E-MU	Length: 10 m 32.808 ft Net weight: 660 g approx. (1 cable)
		SFB-CCJ3D-MU	Length: 3 m 9.843 ft Net weight: 210 g approx. (1 cables)
		SFB-CCJ10D-MU	Length: 10 m 32.808 ft Net weight: 680 g approx. (1 cable)
Cable for series connection		SFB-CSL01	Length: 0.1 m 0.328 ft Net weight: 45 g approx. (2 cables)
		SFB-CSL05	Length: 0.5 m 1.640 ft Net weight: 95 g approx. (2 cables)
		SFB-CSL1	Length: 1 m 3.281 ft Net weight: 150 g approx. (2 cables)
		SFB-CSL5	Length: 5 m 16.404 ft Net weight: 630 g approx. (2 cables)
Exclusive mating cable for SF-C14EX		SFB-CB05-EX	Length: 0.5 m 1.640 ft Net weight: 95 g approx. (2 cables)
		SFB-CB5-EX	Length: 5 m 16.404 ft Net weight: 620 g approx. (2 cables)
		SFB-CB10-EX	Length: 10 m 32.808 ft Net weight: 1,200 g approx. (2 cables)
Adapter cable		SFB-CB05-A-P	Length: 0.5 m 1.640 ft Net weight: 110 g approx. (2 cables)
		SFB-CB05-A-N	
		SFB-CB05-B-P	
		SFB-CB05-B-N	

For details of mating cable of CC-Link Safety system remote I/O unit with connectors for light curtain **SF-CL1T264T**, refer to website.

Note: Where the cable color has not been specified precisely, it is black for emitter, gray with black line for receiver, outer diameter is $\phi 6$ mm **R0.236 in**, min. bending radius is R6 mm **R0.236 in**.

ORDER GUIDE

Spare parts (Accessories for light curtain)

Designation	Model No.	Description
Intermediate supporting bracket (Note)	MS-SFB-2	Used to mount the light curtain on the intermediate position. (2 pcs. per set for emitter and receiver) Mounting is possible behind or at the side of the light curtain.
Test rod ø14	SF4B-TR14	Min. sensing object for regular checking (ø14 mm ø0.551 in), with finger protection type (min. sensing object ø14 mm ø0.551 in)
Test rod ø25	SF4B-TR25	Min. sensing object for regular checking (ø25 mm ø0.984 in), with hand protection type (min. sensing object ø25 mm ø0.984 in)


Note: The number of sets required varies depending on the product.

- 1 set: **SF4B-F□<V2>** Light curtain with 79 to 111 beam channels
SF4B-H□<V2> Light curtain with 40 to 56 beam channels
SF4B-A□<V2> Light curtain with 20 to 28 beam channels
- 2 sets: **SF4B-F127□<V2>**
SF4B-H□<V2> Light curtain with 64 to 80 beam channels
SF4B-A□<V2> Light curtain with 32 to 40 beam channels
- 3 sets: **SF4B-H□<V2>** Light curtain with 88 to 96 beam channels
SF4B-A□<V2> Light curtain with 44 to 48 beam channels


Intermediate supporting bracket

• MS-SFB-2

<In case of rear mounting>


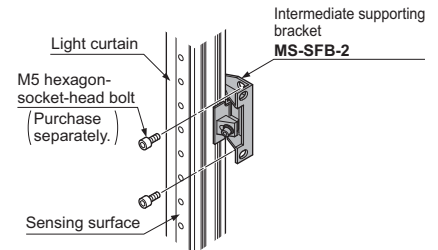

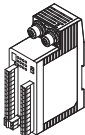
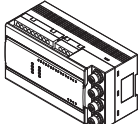


<In case of side mounting>

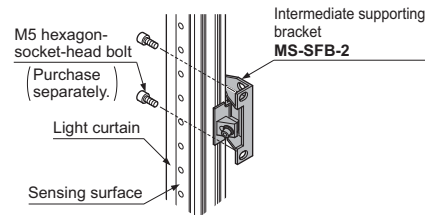

OPTIONS

Exclusive control units

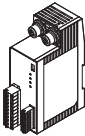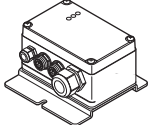Designation	Appearance	Model No.	Application cable	Description
Connector connection type control unit		SF-C11	Bottom cap cable: SFB-CB□ Extension cable: SFB-CCJ10□	Use 8-core cable with connector to connect to the light curtain. Compatible with up to Control Category 4. Interference prevention wires and muting function cannot be used.
Robust type control unit		SF-C12	Bottom cap cable: SFB-CB05-MU Extension cable: SFB-CCJ10□-MU	Use 12-core cable with connector to connect to the light curtain. Interference prevention wires can be used. Compatible with up to Control Category 4. Muting function cannot be used.
Slim type control unit		SF-C13	Bottom cap cable: SFB-CCB□(-MU) Extension cable: SFB-CC□(-MU)	Use a discrete wire cable to connect to the light curtain. Muting function and interference prevention wires can be used. Compatible with up to Control Category 4.
Application expansion unit for SF4B series		SF-C14EX	Bottom cap cable: SFB-CB□-EX Extension cable: SFB-CCJ10□	The muting control function and emergency stop input expand the applications of the light curtains. Use exclusive cable to connect to the light curtain. Compatible with up to Control Category 4. The handy-controller SFB-HC cannot be used with SF-C14EX-01 .
Handy-controller non-compatible type		SF-C14EX-01		
CC-Link Safety system remote I/O unit for light curtain (Note)		SF-CL1T264T	Bottom cap cable: SFB-CB□-CL Extension cable: SFB-CCJ10□-CL	This is a remote I/O unit that allows the safety field network "CC-Link Safety" to be connected to the light curtains or the safety components. Use exclusive cable to connect to the light curtain. Compatible with up to Control Category 4. Please contact our office for details.

Note: Refer to the our website for details of the remote I/O unit **SF-CL1T264T**.


OPTIONS

SF-C12 spare relay set

A set of spare relays (2 safety relays and 1 removal tool) is available for the safety relay that is built into the **SF-C12**.
Model No.: **SF-C12-RY**

Recommended safety relay

Safety relay
Panasonic Electric Works Ltd.
SF series

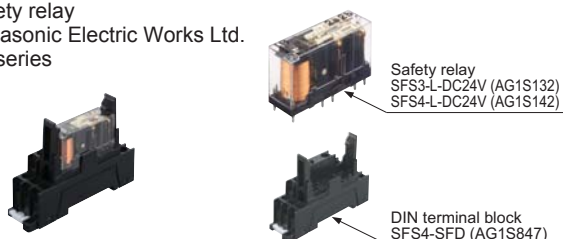


Note: Contact Panasonic Electric Works Co. Ltd. for details on the recommended products.

Item	Type	With LED indicator	
	Model No.	SFS3-L-DC24V	SFS4-L-DC24V
Contact arrangement		3a1b	4a2b
Rated nominal switching capacity		6 A / 250 V AC, 6 A / 30 V DC	
Min. switching capacity		1 mA / 5 V DC	
Coil rating		15 mA / 24 V DC	20.8 mA / 24 V PC
Rated power consumption		360 mW	500 mW
Operation time		20 ms or less	
Release time		20 ms or less	
Ambient temperature		-40 to +85 °C -40 to +185 °F (Humidity: 5 to 85 % RH)	
Applicable standards		UL, C-UL, TÜV	

Handy-controller

Designation	Appearance	Model No.
Handy-controller	 * Includes 2 adapter cables	SFB-HC

Note: A handy-controller cannot be used with the **SF4B-□-01<V2>**, the **SF4B-□-03<V2>** and the **SF-C14EX-01**.

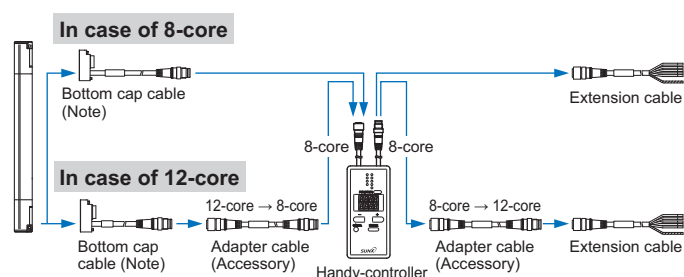

Note: If using a bottom cap cable with discrete wire, please order the **SFB-CC3/CC10** separately. Refer to the instruction manual for the light curtain for details on wiring.

Light curtain diagnosis software

Simply input the error number of the light curtain on the screen, and the section of maintenance needed will be located and coping process will be displayed.

* Free download available from our website.




Light curtain diagnosis software

Y-shaped connector


Type	Appearance	Model No.	Description
Wire-saving Y-shaped connector		SFB-WY1	Wire-saving connector for standard components (8-core cable). Cables of emitter and receiver are consolidated into one cable for wire-saving. Wiring has +24 V, 0 V, OSSD 1, OSSD 2, output polarity setting wire (shield). [Power wire and synchronization wire are connected inside the connector.] (Interlock is disabled (automatic reset).)
Cable with connector on one side		WY1-CCN3	Cable length: 3 m 9.843 ft Net weight: 200 g approx. (1 cable)
		WY1-CCN10	Cable length: 10 m 32.808 ft Net weight: 620 g approx. (1 cable)

By using the Y-shaped connector, the least required wires such as power or safety output are consolidated into one cable. Man-hours taken for wiring is eliminated to the minimum. Construction times as well as wiring mistakes are greatly reduced.

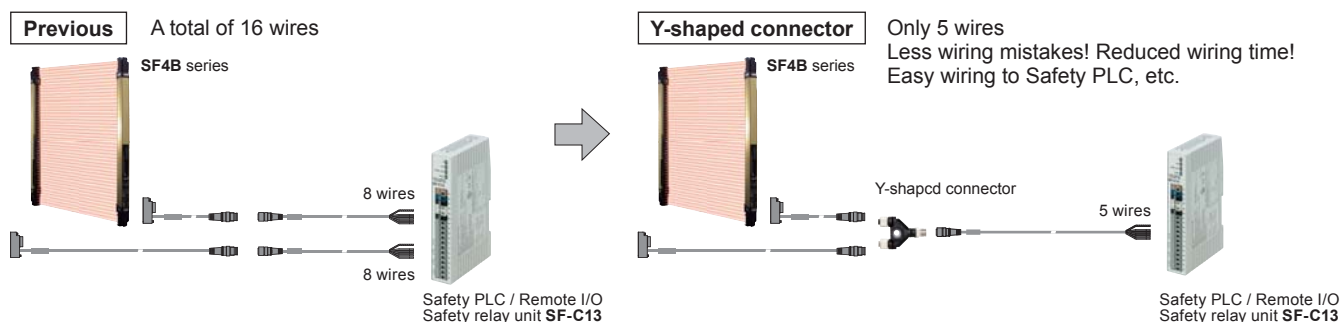

OPTIONS

Product configuration

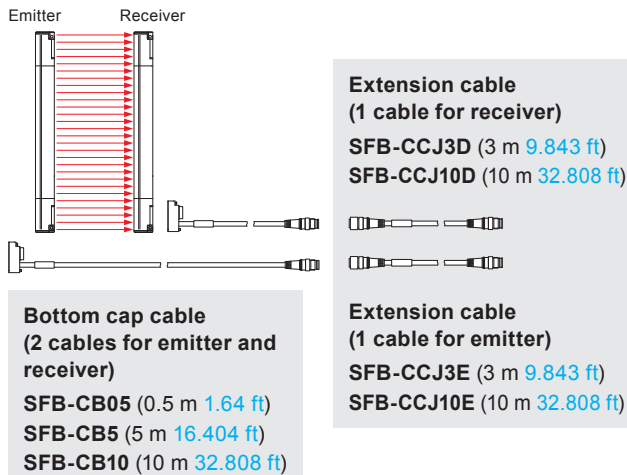

**Y-shaped connector
SFB-WY1**


Extension cable

SFB-CCJ3D (3 m 9.843 ft)
SFB-CCJ10D (10 m 32.808 ft)

Cable with connector on one side (Common for all models)

WY1-CCN3 (3 m 9.843 ft)
WY1-CCN10 (10 m 32.808 ft)

Connector pin layout

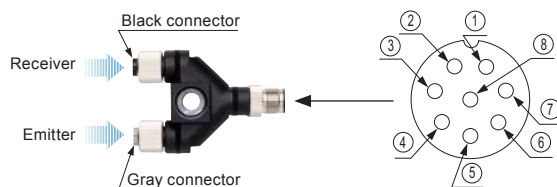


Connector pin No.	Description
①	OSSD 2
②	+24 V
③	OSSD 1
④	Not used
⑤	Not used
⑥	Not used
⑦	0 V
⑧	Output polarity setting wire (Shield)

Wiring diagram of control unit SF-C13

<For PNP output (minus ground)>


- Connect the light curtain control outputs OSSD 1 and OSSD 2 to S1 and S2 respectively.

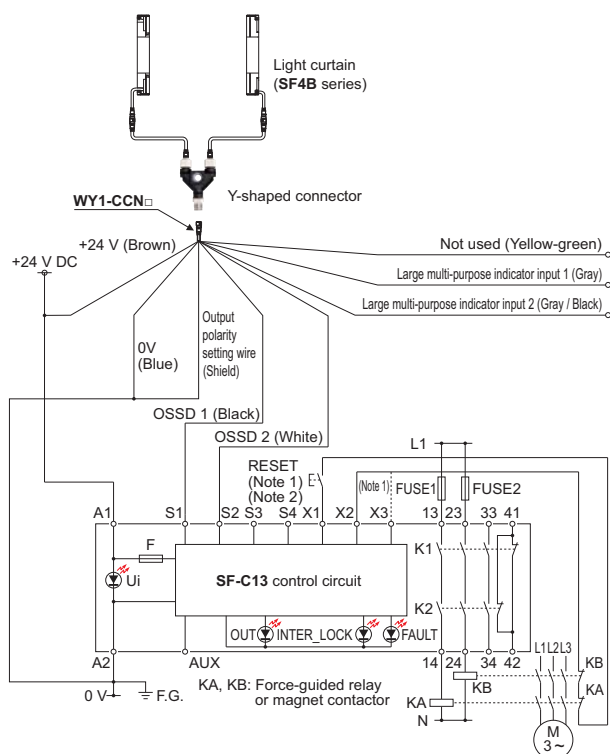

- Notes: 1) The above diagram is when using manual reset. If automatic reset is used, disconnect the lead from X2 and connect it to X3. In this case, a reset (RESET) button is not needed.
2) Use a momentary-type switch as the reset (RESET) button.
3) Unused wires must be insulated.

<For NPN output (plus ground)>

- Connect the light curtain control outputs OSSD 1 and OSSD 2 to S4 and S2 respectively and ground the + side.

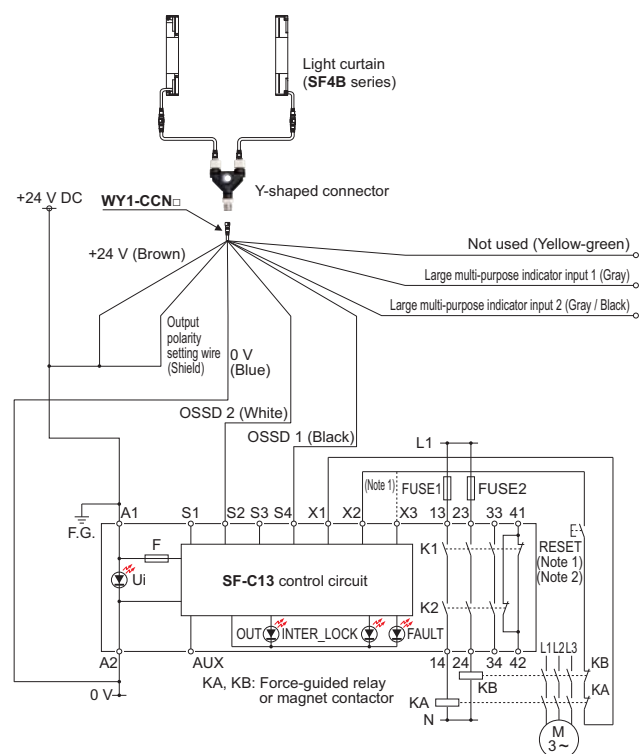

- Notes: 1) The above diagram is when using manual reset. If automatic reset is used, disconnect the lead from X2 and connect it to X3. In this case, a reset (RESET) button is not needed.
2) Use a momentary-type switch as the reset (RESET) button.
3) Unused wires must be insulated.

OPTIONS

Front protection cover / Protection bar set / Corner mirror

Designation			Front protection cover	Protection bar set	Rear / side protection bar set	Corner mirror	
Finger	Hand	Arm / Foot	Model No. (Note)	Model No. (Note)	Model No.	Model No.	Effective reflective surface
23	12	6	FC-SFBH-12	MC-SFBH-12	MC-SFBH-12-T	RF-SFBH-12	236 × 72 mm 9.291 × 2.835 in
31	16	8	FC-SFBH-16	MC-SFBH-16	MC-SFBH-16-T	RF-SFBH-16	316 × 72 mm 12.441 × 2.835 in
39	20	10	FC-SFBH-20	MC-SFBH-20	MC-SFBH-20-T	RF-SFBH-20	396 × 72 mm 15.591 × 2.835 in
47	24	12	FC-SFBH-24	MC-SFBH-24	MC-SFBH-24-T	RF-SFBH-24	476 × 72 mm 18.740 × 2.835 in
55	28	14	FC-SFBH-28	MC-SFBH-28	MC-SFBH-28-T	RF-SFBH-28	556 × 72 mm 21.890 × 2.835 in
63	32	16	FC-SFBH-32	MC-SFBH-32	MC-SFBH-32-T	RF-SFBH-32	636 × 72 mm 25.039 × 2.835 in
71	36	18	FC-SFBH-36	MC-SFBH-36	MC-SFBH-36-T	RF-SFBH-36	716 × 72 mm 28.189 × 2.835 in
79	40	20	FC-SFBH-40	MC-SFBH-40	MC-SFBH-40-T	RF-SFBH-40	796 × 72 mm 31.339 × 2.835 in
95	48	24	FC-SFBH-48	MC-SFBH-48	MC-SFBH-48-T	RF-SFBH-48	956 × 72 mm 37.638 × 2.835 in
111	56	28	FC-SFBH-56	MC-SFBH-56	MC-SFBH-56-T	RF-SFBH-56	1,116 × 72 mm 43.937 × 2.835 in
127	64	32	FC-SFBH-64	MC-SFBH-64	MC-SFBH-64-T	RF-SFBH-64	1,276 × 72 mm 50.236 × 2.835 in
—	72	36	FC-SFBH-72	MC-SFBH-72	MC-SFBH-72-T	RF-SFBH-72	1,436 × 72 mm 56.535 × 2.835 in
—	80	40	FC-SFBH-80	MC-SFBH-80	MC-SFBH-80-T	RF-SFBH-80	1,596 × 72 mm 62.835 × 2.835 in
—	88	44	FC-SFBH-88	MC-SFBH-88	MC-SFBH-88-T	RF-SFBH-88	1,756 × 72 mm 69.134 × 2.835 in
—	96	48	FC-SFBH-96	MC-SFBH-96	MC-SFBH-96-T	RF-SFBH-96	1,916 × 72 mm 75.433 × 2.835 in


Note: The model Nos. given above denote a single unit, not a pair of units. 2 units are required for use in mounting to the emitter / receiver. (Except for corner mirror)

Front protection cover

• FC-SFBH-□


Protects sensing surface of the light curtain from flying objects such as welding spatter.
The operating range reduces when the front protection cover is used.

Material: Polycarbonate

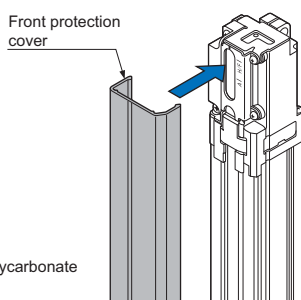

Protection bar set

• MC-SFBH-□

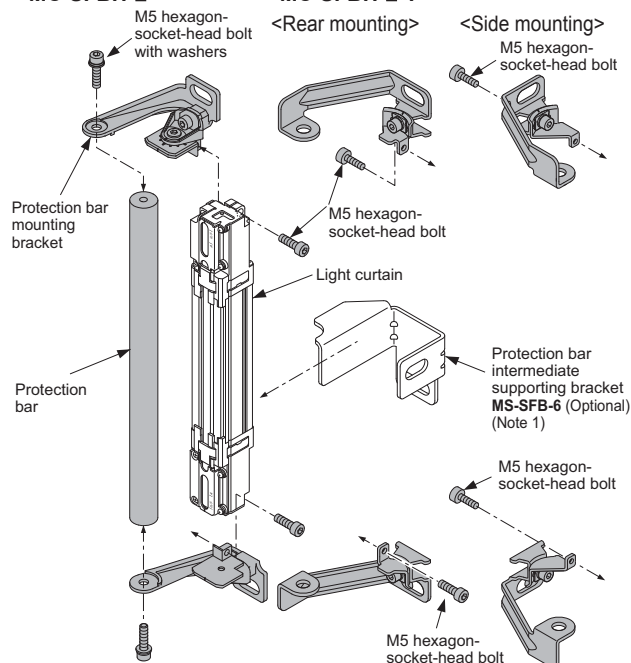

Rear / side protection bar set

• MC-SFBH-□-T

<Rear mounting>

<Side mounting>

Sensing range


	SF4B-F□	SF4B-H□		SF4B-A□	
		12 to 64 beam channels type	72 to 96 beam channels type	6 to 32 beam channels type	36 to 48 beam channels type
Only emitter installed	0.3 to 6 m 0.984 to 19.685 ft	0.3 to 7.5 m 0.984 to 24.606 ft	0.3 to 6 m 0.984 to 19.685 ft	0.3 to 7.5 m 0.984 to 24.606 ft	0.3 to 6 m 0.984 to 19.685 ft
Only receiver installed	0.3 to 6 m 0.984 to 19.685 ft	0.3 to 7.5 m 0.984 to 24.606 ft	0.3 to 6 m 0.984 to 19.685 ft	0.3 to 7.5 m 0.984 to 24.606 ft	0.3 to 6 m 0.984 to 19.685 ft
Both emitter and receiver installed	0.3 to 5.5 m 0.984 to 18.045 ft	0.3 to 7 m 0.984 to 22.966 ft	0.3 to 5.5 m 0.984 to 18.045 ft	0.3 to 7 m 0.984 to 22.966 ft	0.3 to 5.5 m 0.984 to 18.045 ft

Note: The operating range is the possible setting distance between the emitter and the receiver. The light curtain can detect an object less than 0.3 m 0.984 ft away.

Corner mirror

• RF-SFBH-□

Normally for L-shaped or U-shaped installation, 2 or 3 sets of light curtains are needed. With the use of a corner mirror reflecting the light, one set of light curtain is possible for L-shaped or U-shaped installation.

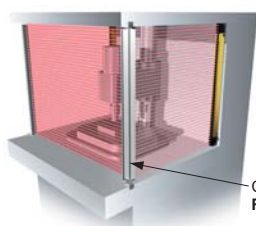

Corner mirror
RF-SFBH-□

Percent decline of the sensing range

With 1 mirror	Declined to 90 %
With 2 mirrors	Declined to 80 %

• Parts List

Designation	MC-SFBH-□		MC-SFBH-□-T	
	Number	Remarks	Number	Remarks
Protection bar	1 pc.	Material: Aluminum	1 pc.	Material: Aluminum
Protection bar mounting bracket (For left side, for right side)	1 pc. each	Material: Die-cast zinc alloy	1 pc. each (Note 1)	Material: Iron (Trivalent chrome plated)
Hexagon-socket-head bolt with washers	2 pcs.	M5 (length: 20 mm 0.787 in)	2 pcs.	M5 (length: 20 mm 0.787 in)
Hexagon-socket-head bolt	2 pcs.	M5 (length: 16 mm 0.630 in)	2 pcs.	M5 (length: 18 mm 0.709 in)
Protection bar intermediate supporting bracket MS-SFB-6 (Optional) (Note 2)	1 pc.	Material: Iron (Trivalent chrome plated)	1 pc.	Material: Iron (Trivalent chrome plated)

Notes: 1) Available as a spare part. Model No.: **MS-MCSFB-1-T**


2) The protection bar intermediate supporting bracket **MS-SFB-6** (optional) is installed to protection bars that are longer than the **MC-SFBH-48(-T)**. Use if there is much flexure bending in the protection bar. Please contact our office for details.

OPTIONS

Designation	Model No.	Description
Test rod ø45	SF4B-TR45	Min. sensing object for regular checking (ø45 mm ø1.772 in), with arm / foot protection type (min. sensing object ø45 mm ø1.772 in)
Laser alignment tool	SF-LAT-2N	Allows easy beam axis alignment using easy-to-see laser beam
Large display unit for light curtain	SF-IND-2	<p>With the auxiliary output of the light curtain, the operation is easily observable from various directions.</p> <p>Specifications</p> <ul style="list-style-type: none"> Supply voltage: 24 V DC $\pm 15\%$ Current consumption: 12 mA or less Indicators: Orange LED (8 pcs. used) [Light up when external contact is ON] Ambient temperature: -10 to $+55\text{ }^{\circ}\text{C}$ $+14$ to $+131\text{ }^{\circ}\text{F}$ (No dew condensation or icing allowed) Material: POM (Enclosure) Polycarbonate (Cover) Cold rolled carbon steel (SPCC) (Bracket) Cable: 0.3 mm² 2-core cabtyre cable, 3 m 9.843 ft long Weight: 70 g approx. (including bracket) <p>I/O circuit diagrams</p> <p><With NPN output type></p> <p><With PNP output type></p>


Laser alignment tool

• SF-LAT-2N

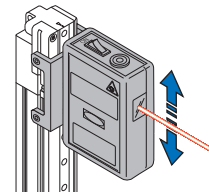

Large display unit for light curtain

• SF-IND-2

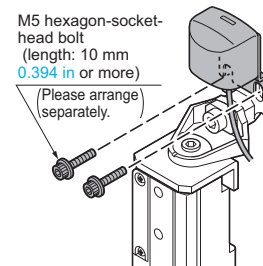

Attaches to top of light curtain.
Tighten together the mounting bracket provided with the light curtain **MS-SFB-1/4** and the attached mounting bracket of **SF-IND-2**.

SPECIFICATIONS

Light curtain individual specifications

SF4B-F□(-01)<V2>

Type		Min. sensing object ø14 mm ø0.551 in type (10 mm 0.394 in beam pitch)					
Item	Model No. (Note 2)	SF4B-F23(-01)<V2>	SF4B-F31(-01)<V2>	SF4B-F39(-01)<V2>	SF4B-F47(-01)<V2>	SF4B-F55(-01)<V2>	SF4B-F63(-01)<V2>
No. of beam channels		23	31	39	47	55	63
Protective height		230 mm 9.055 in	310 mm 12.205 in	390 mm 15.354 in	470 mm 18.504 in	550 mm 21.654 in	630 mm 24.803 in
Current consumption		Emitter: 80 mA or less, Receiver: 120 mA or less			Emitter: 100 mA or less, Receiver: 160 mA or less		
PFHD		2.56×10 ⁻⁹	2.96×10 ⁻⁹	3.36×10 ⁻⁹	3.75×10 ⁻⁹	4.15×10 ⁻⁹	4.55×10 ⁻⁹
MTTFd		100 years or more					
Net weight (Total of emitter and receiver)		510 g approx.	660 g approx.	810 g approx.	960 g approx.	1,100 g approx.	1,260 g approx.

Type		Min. sensing object ø14 mm ø0.551 in type (10 mm 0.394 in beam pitch)				
Item	Model No. (Note 2)	SF4B-F71(-01)<V2>	SF4B-F79(-01)<V2>	SF4B-F95(-01)<V2>	SF4B-F111(-01)<V2>	SF4B-F127(-01)<V2>
No. of beam channels		71	79	95	111	127
Protective height		710 mm 27.953 in	790 mm 31.102 in	950 mm 37.402 in	1,110 mm 43.701 in	1,270 mm 50.000 in
Current consumption		Emitter: 100 mA or less, Receiver: 160 mA or less		Emitter: 115 mA or less, Receiver: 190 mA or less		Emitter: 135 mA or less, Receiver: 230 mA or less
PFHD		4.95×10 ⁻⁹	5.35×10 ⁻⁹	6.15×10 ⁻⁹	6.94×10 ⁻⁹	7.74×10 ⁻⁹
MTTFd		100 years or more				
Net weight (Total of emitter and receiver)		1,420 g approx.	1,570 g approx.	1,870 g approx.	2,170 g approx.	2,470 g approx.

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of $+20\text{ }^{\circ}\text{C}$ **$+68\text{ }^{\circ}\text{F}$** .

2) The models with the suffix "**-01**" cannot be used with the handy-controller **SFB-HC**.

SPECIFICATIONS

Light curtain common specifications

SF4B-H□(-01)<V2>

Type	Min. sensing object ø25 mm $\phi 0.984$ in type (20 mm 0.787 in beam pitch)					
Item \ Model No. (Note 2)	SF4B-H12(-01)<V2>	SF4B-H16(-01)<V2>	SF4B-H20(-01)<V2>	SF4B-H24(-01)<V2>	SF4B-H28(-01)<V2>	SF4B-H32(-01)<V2>
No. of beam channels	12	16	20	24	28	32
Protective height	230 mm 9.055 in	310 mm 12.205 in	390 mm 15.354 in	470 mm 18.504 in	550 mm 21.654 in	630 mm 24.803 in
Current consumption	Emitter: 70 mA or less, Receiver: 95 mA or less			Emitter: 80 mA or less, Receiver: 115 mA or less		
PFHD	2.01×10^{-9}	2.21×10^{-9}	2.41×10^{-9}	2.61×10^{-9}	2.81×10^{-9}	3.01×10^{-9}
MTTFd	100 years or more					
Net weight (Total of emitter and receiver)	510 g approx.	660 g approx.	810 g approx.	960 g approx.	1,110 g approx.	1,260 g approx.

Type	Min. sensing object ø25 mm $\phi 0.984$ in type (20 mm 0.787 in beam pitch)				
Item \ Model No. (Note 2)	SF4B-H36(-01)<V2>	SF4B-H40(-01)<V2>	SF4B-H48(-01)<V2>	SF4B-H56(-01)<V2>	SF4B-H64(-01)<V2>
No. of beam channels	36	40	48	56	64
Protective height	710 mm 27.953 in	790 mm 31.102 in	950 mm 37.402 in	1,110 mm 43.701 in	1,270 mm 50.000 in
Current consumption	Emitter: 80 mA or less, Receiver: 115 mA or less		Emitter: 90 mA or less, Receiver: 140 mA or less		Emitter: 100 mA or less, Receiver: 160 mA or less
PFHD	3.21×10^{-9}	3.41×10^{-9}	3.80×10^{-9}	4.20×10^{-9}	4.60×10^{-9}
MTTFd	100 years or more				
Net weight (Total of emitter and receiver)	1,420 g approx.	1,570 g approx.	1,870 g approx.	2,170 g approx.	2,470 g approx.

Type	Min. sensing object ø25 mm $\phi 0.984$ in type (20 mm 0.787 in beam pitch)			
Item \ Model No. (Note 2)	SF4B-H72(-01)<V2>	SF4B-H80(-01)<V2>	SF4B-H88(-01)<V2>	SF4B-H96(-01)<V2>
No. of beam channels	72	80	88	96
Protective height	1,430 mm 56.299 in	1,590 mm 62.598 in	1,750 mm 68.898 in	1,910 mm 75.197 in
Current consumption	Emitter: 110 mA or less, Receiver: 180 mA or less		Emitter: 120 mA or less, Receiver: 200 mA or less	
PFHD	5.00×10^{-9}	5.40×10^{-9}	5.80×10^{-9}	6.20×10^{-9}
MTTFd	100 years or more			
Net weight (Total of emitter and receiver)	2,770 g approx.	3,070 g approx.	3,370 g approx.	3,670 g approx.

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C +68 °F.

2) The models with the suffix "-01" cannot be used with the handy-controller SFB-HC.

SF4B-A□(-01)<V2>

Type	Min. sensing object ø45 mm $\phi 1.772$ in type (40 mm 1.575 in beam pitch)					
Item \ Model No. (Note 2)	SF4B-A6(-01)<V2>	SF4B-A8(-01)<V2>	SF4B-A10(-01)<V2>	SF4B-A12(-01)<V2>	SF4B-A14(-01)<V2>	SF4B-A16(-01)<V2>
No. of beam channels	6	8	10	12	14	16
Protective height	230 mm 9.055 in	310 mm 12.205 in	390 mm 15.354 in	470 mm 18.504 in	550 mm 21.654 in	630 mm 24.803 in
Current consumption	Emitter: 65 mA or less, Receiver: 85 mA or less			Emitter: 70 mA or less, Receiver: 95 mA or less		
PFHD	1.71×10^{-9}	1.81×10^{-9}	1.91×10^{-9}	2.01×10^{-9}	2.11×10^{-9}	2.21×10^{-9}
MTTFd	100 years or more					
Net weight (Total of emitter and receiver)	510 g approx.	660 g approx.	810 g approx.	960 g approx.	1,110 g approx.	1,260 g approx.

Type	Min. sensing object ø45 mm $\phi 1.772$ in type (40 mm 1.575 in beam pitch)				
Item \ Model No. (Note 2)	SF4B-A18(-01)<V2>	SF4B-A20(-01)<V2>	SF4B-A24(-01)<V2>	SF4B-A28(-01)<V2>	SF4B-A32(-01)<V2>
No. of beam channels	18	20	24	28	32
Protective height	710 mm 27.953 in	790 mm 31.102 in	950 mm 37.402 in	1,110 mm 43.701 in	1,270 mm 50.000 in
Current consumption	Emitter: 70 mA or less, Receiver: 95 mA or less		Emitter: 75 mA or less, Receiver: 105 mA or less		Emitter: 80 mA or less, Receiver: 120 mA or less
PFHD	2.31×10^{-9}	2.41×10^{-9}	2.61×10^{-9}	2.81×10^{-9}	3.01×10^{-9}
MTTFd	100 years or more				
Net weight (Total of emitter and receiver)	1,420 g approx.	1,570 g approx.	1,870 g approx.	2,170 g approx.	2,470 g approx.

Type	Min. sensing object ø45 mm $\phi 1.772$ in type (40 mm 1.575 in beam pitch)			
Item \ Model No. (Note 2)	SF4B-A36(-01)<V2>	SF4B-A40(-01)<V2>	SF4B-A44(-01)<V2>	SF4B-A48(-01)<V2>
No. of beam channels	36	40	44	48
Protective height	1,430 mm 56.299 in	1,590 mm 62.598 in	1,750 mm 68.898 in	1,910 mm 75.197 in
Current consumption	Emitter: 85 mA or less, Receiver: 130 mA or less		Emitter: 95 mA or less, Receiver: 140 mA or less	
PFHD	3.21×10^{-9}	3.41×10^{-9}	3.61×10^{-9}	3.80×10^{-9}
MTTFd	100 years or more			
Net weight (Total of emitter and receiver)	2,770 g approx.	3,070 g approx.	3,370 g approx.	3,670 g approx.

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C +68 °F.

2) The models with the suffix "-01" cannot be used with the handy-controller SFB-HC.

SPECIFICATIONS

Light curtain common specifications

		Type	Min. sensing object ø14 mm ø0.551 in type	Min. sensing object ø25 mm ø0.984 in type	Min. sensing object ø45 mm ø1.772 in type
		Model No. (Note 3)	SF4B-F□(-01)<V2>	SF4B-H□(-01)<V2>	SF4B-A□(-01)<V2>
Item	Korean press compliant (Note 3)		SF4B-F□-03<V2>	SF4B-H□-03<V2>	————
Applicable standards (Note 2)	International standard		IEC 61496-1/2 (Type 4), ISO 13849-1 (Category 4, PLe), IEC 61508-1 to 7 (SIL3)		
	Japan		JIS B 9704-1/2 (Type 4), JIS B 9705-1 (Category 4), JIS C 0508-1 to 7 (SIL3)		
	Europe (EU)		EN 61496-1 (Type 4), EN ISO 13849-1 (Category 4, PLe), EN 61508-1 to 7 (SIL3), EN 55011, EN 50178, EN 61000-6-2		
	North America		ANSI/UL 61496-1/2 (Type 4), ANSI/UL 508, UL 1998 (Class 2), CAN/CSA 61496-1/2 (Type 4), CAN/CSA C22.2 No. 14, OSHA 1910.212, OSHA 1910.217(C), ANSI B11.1 to B11.19, ANSI/RIA 15.06		
	South Korea (S-Mark)		S1-G-35-2005, S2-W-11-2003 (SF4B-□<V2> only)		
	China (GB)		GB 4584 (SF4B-□<V2> , SF4B-□-01<V2> only)		
Operating range (Note 3)		0.3 to 7 m 0.984 to 22.966 ft	12 to 64 beam channels type: 0.3 to 9 m 0.984 to 29.528 ft 72 to 96 beam channels type: 0.3 to 7 m 0.984 to 22.966 ft	6 to 32 beam channels type: 0.3 to 9 m 0.984 to 29.528 ft 36 to 48 beam channels type: 0.3 to 7 m 0.984 to 22.966 ft	
Min. sensing object (Note 4)		ø14 mm ø0.551 in opaque object	ø25 mm ø0.984 in opaque object	ø45 mm ø1.772 in opaque object	
Effective aperture angle		±2.5° or less [for an operating range exceeding 3 m 9.843 ft (conforming to IEC 61496-2 / UL 61496-2)]			
Supply voltage		24 V DC ±10 % Ripple P-P 10 % or less			
Control outputs (OSSD 1, OSSD 2)		PNP open-collector transistor / NPN open-collector transistor (switching method) • When selecting PNP output: Max. source current 200 mA, When selecting NPN output: Max. sink current 200 mA • Applied voltage: same as supply voltage (When selecting PNP output: between the control output and +V,) 			

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C **+68 °F**.

2) PLe SIL3 compliant from production in August 2009.

3) The operating range is the possible setting distance between the emitter and the receiver. The light curtain can detect an object less than 0.3 m **0.984 ft** away.

4) When the floating blanking function is used, the size of the min. sensing object is changed. For details, refer to "Safety distance" (p.33~).

5) The outputs are not "OFF" when muting function is active even if the beam channel is interrupted.

6) In case the blanking function is valid, the operation mode is changed. For details, refer to "Safety distance" (p.33~).

7) Please use 12-core cable.

8) The manual reset and auto reset are possible to be switched depending on the wiring status.

9) In case of using optional function, the handy-controller (**SFB-HC**) (optional) is required. However, a handy-controller cannot be used with the **SF4B-□-01<V2>**, **SF4B-□-03<V2>** and the **SF-C14EX-01**.

10) The cable can be extended within 30 m **98.425 ft** (for emitter / receiver) when two light curtains are connected in series, within 20 m **65.617 ft** when three light curtains are connected in series. Furthermore, when the muting lamp is used, the cable can be extended within 40 m **131.234 ft** (for emitter / receiver).

11) The intermediate supporting bracket (**MS-SFB-2**) is enclosed with the following models. The quantity of the enclosed bracket differs depending on the model as follows:

1 set: **SF4B-F□<V2>** Light curtain with 79 to 111 beam channels, **SF4B-H□<V2>** Light curtain with 40 to 56 beam channels, **SF4B-A□<V2>** Light curtain with 20 to 28 beam channels

2 sets: **SF4B-F127<V2>**, **SF4B-H□<V2>** ...Light curtain with 64 to 80 beam channels, **SF4B-A□<V2>**...Light curtain with 32 to 40 beam channels

3 sets: **SF4B-H□<V2>** Light curtain with 88 to 96 beam channels, **SF4B-A□<V2>** Light curtain with 44 to 48 beam channels


SPECIFICATIONS

Control units


Item	Model No.	SF-C11 (Note 2)	SF-C12	SF-C13 (Note 2)
Connectable light curtains		SF4B / SF2B series	SF4B series	Light curtains manufactured by PEW SUNX
Applicable standards		IEC 61496-1, EN 61496-1, ANSI / UL 61496-1, CAN / CSA 61496-1, JIS B 9704-1		
Control category		ISO 13849-1 (EN ISO 13849-1, JIS B 9705-1) compliance up to Category 4, PLe standards		
Supply voltage / Current consumption		24 V DC $\pm 10\%$ Ripple P-P 10 % or less / 100 mA or less (excluding light curtain)		
Fuse (rating)		Built-in electronic fuse, Triggering current: 0.5 A or more, Reset after power down		
Enabling path		NO contact $\times 3$ (13-14, 23-24, 33-34)	NO contact $\times 2$ (13-14, 23-24)	NO contact $\times 3$ (13-14, 23-24, 33-34)
Utilization category		AC-15, DC-13 (IEC 60947-5-1)		
Rated operation voltage (Ue) / Rated operation current (Ie)		30 V DC / 6 A, 230 V AC / 6 A, resistive load (For inductive load, during contact protection) Min. applicable load: 10 mA (at 24 V DC) (Note 3)	24 V DC / 1 A, resistive load (For inductive load, during contact protection) Min. applicable load: 15 mA (at 24 V DC)	30 V DC / 4 A, 230 V AC / 4 A, resistive load (For inductive load, during contact protection) Min. applicable load: 10 mA (at 24 V DC) (Note3)
Contact resistance		100 m Ω or less (initial value)	50 m Ω or less (initial value)	100 m Ω or less (initial value)
Contact protection fuse rating		6 A (slow blow)	3 A (slow blow)	4 A (slow blow)
Pick-up delay (Auto reset / Manual reset)		80 ms or less / 90 ms or less	30 ms or less / 30 ms or less	80 ms or less / 90 ms or less
Response time		10 ms or less	14 ms or less	10 ms or less
Auxiliary output		Safety relay contact (NC contact) $\times 1$ (41-42) (Related to enabling path)	Safety relay contact (NC contact) $\times 1$ (31-32) (Related to enabling path)	Safety relay contact (NC contact) $\times 1$ (41-42) (Related to enabling path)
Rated operation voltage / current		24 V DC / 2 A, Min. applicable load: 10 mA (at 24 V DC)	30 V DC / 3 A, Min. applicable load: 15 mA (at 24 V DC)	24 V DC / 2 A, Min. applicable load: 10 mA (at 24 V DC)
Contact protection fuse rating		2 A (slow blow)	3 A (slow blow)	2 A (slow blow)
Semiconductor auxiliary output (AUX)		<Minus ground (Setting for PNP)> <Plus ground (Setting for NPN)> PNP open-collector transistor NPN open-collector transistor	—	PNP open-collector transistor
Output operation		Related to auxiliary output of light curtain	—	ON when the light curtain is interrupted
Excess voltage category		II	III	II
Polarity selection function (Note 4)		Incorporated (Sliding switch allows selection of plus / minus ground) Minus ground: Correspond to PNP output light curtain Plus ground: Correspond to NPN output light curtain	—	Incorporated (Cable connection allows selection of plus / minus ground) Minus ground: Correspond to PNP output light curtain Plus ground: Correspond to NPN output light curtain
Pollution degree		2		
Protection		Enclosure: IP40, Terminal: IP20	IP65	Enclosure: IP40, Terminal: IP20
Ambient temperature		-10 to +55 °C +14 to +131 °F (No dew condensation or icing allowed), Storage: -25 to +70 °C -13 to +158 °F		
Enclosure material		ABS	Die-cast aluminum	ABS
Weight		Net weight: 320 g approx.	Net weight: 1 kg approx.	Net weight: 200 g approx.

- Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C **+68 °F**.
2) **SF-C11** and **SF-C13** have acquired the Korea S-mark.
3) If several **SF-C11** or **SF-C13** units are being used in a line together, leave a space of 5 mm **0.197 in** or more between each unit. If the units are touching each other, reduce the rated operating current for safety output in accordance with the ambient operating temperature as shown in the graphs at right.
4) Please switch the sliding switch to the PNP side for minus ground and to the NPN side for plus ground.
5) For details of control unit **SF-C1□** (**SF-C10** series), refer to the website or general catalog.

Dilating when SF-C11 units are mounted close together

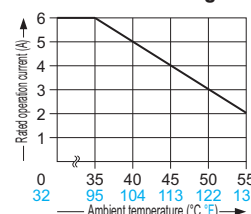

Dilating when SF-C13 units are mounted close together

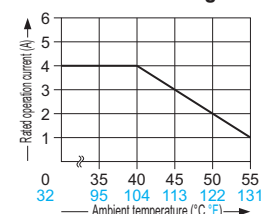

Item	Model No.	SF-C14EX-(01) (Note 2)
Connectable light curtains		SF4B series
Applicable standards		IEC 61496-1, EN 61496-1, ANSI / UL 61496-1, CAN / CSA 61496-1, JIS B 9704-1
Control category		ISO 13849-1 (EN ISO 13849-1, JIS B 9705-1) compliance up to Category 4, PLe standards
Supply voltage / Current consumption		24 V DC $\pm 10\%$ Ripple P-P 10 % or less / 0.2 A or less (Excluding light curtain and other external connecting device)
Enabling path (Enabling path 1, 2, 3)		PNP open-collector transistor 2 outputs $\times 3$ or NPN open-collector transistor 2 outputs $\times 3$ (selectable using a slider switch)
Operation mode (Output operation)		Enabling path 1: ON when the light curtain is in light receiving condition, OFF when the light curtain is in light interrupted condition (Note 3) Enabling path 2: ON when the light curtain is in light receiving condition or the muting function is valid OFF when the light curtain is in light interrupted condition and the muting function is invalid (Note 3) Enabling path 3: ON when the emergency stop is invalid, OFF when the emergency stop is valid
Response time		OFF response: 14 ms or less (Enabling path 1 and 2: including the response time of the light curtain) ON response: 90 ms or less (auto-reset) / 140 ms or less (manual reset) (Note 4)
Auxiliary outputs [Auxiliary output 1, 2, 3, 4 (Note 5)]		PNP open-collector transistor $\times 3$ or NPN open-collector transistor $\times 3$ (selectable using a slider switch) <When PNP output is selected> • Maximum source current: 60 mA or less • Applied voltage: same as supply voltage (between the auxiliary output and +V) • Residual voltage: 2 V or less (at 60 mA source current) <When NPN output is selected> • Maximum sink current: 60 mA or less • Applied voltage: same as supply voltage (between the auxiliary output and 0 V) • Residual voltage: 2 V or less (at 60 mA sink current)
Operation mode (Output operation)		Auxiliary output 1: ON when the muting function is invalid, OFF when the muting function is valid Auxiliary output 2: ON when the override function is invalid, OFF when the override function is valid Auxiliary output 3: ON when the muting lamp is normal, OFF when the muting lamp is error Auxiliary output 4: ON when the light curtain is in light interrupted condition, OFF when the light curtain is in light receiving condition (Note 5)
Muting lamp output		Applicable muting lamp: 24 V DC, 3.6 to 30 W (L1, L2 of each unit)
Protection		Enclosure: IP40, Terminal: IP20
Ambient temperature		-10 to +55 °C +14 to +131 °F (No dew condensation or icing allowed), Storage: -25 to +70 °C -13 to +158 °F
Material		Enclosure: ABS
Connection terminal		Detachable spring gauge terminal
Weight		Net weight: 250 g approx.

- Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C **+68 °F**.
2) **SF-C14EX-01** is Handy-controller non-compatible type.
3) Both enabling path 1 and 2 are OFF when the emergency stop is valid regardless of whether the light curtain is in the light receiving or light interrupted condition.
4) The auto-reset cannot be used with enabling path 3.
5) The auxiliary output incorporated in the **SF4B** series is outputted.

SPECIFICATIONS

Handy-controller

Item	Model No.	SFB-HC
Supply voltage		24 V DC $\pm 10\%$ Ripple P-P10 % or less (common to light curtain power supply)
Current consumption		65 mA or less
Communication method		RS-485 two-way communications (Specific procedure)
Digital display		4-digit red LED display $\times 2$ (Selected beam channels, setting contents etc. are displayed.)
Function indicator		Green LED $\times 9$ (set function is displayed.)
Functions		Fixed blanking (Factory setting: Disabled) / Floating blanking (Factory setting: Disabled) / Auxiliary output change (Factory setting: Negative Logic of OSSD) / Light emitting amount control (Factory setting: Disabled) / Muting setting change [Factory setting: All beam channels enabled, A = B, Setting of the muting lamp diagnosis function enabled (Ver. 2 or later), Muting sensor output operation setting N.O. / N.O. (Ver. 2.1 or later)] Interlock setting change (Factory setting: start / restart) / External device monitoring setting change (Factory setting: Enabled, 300 ms) / Override setting changing function 60 sec. (Ver. 2.1 only) / Setting detail monitoring / Protecting (Factory setting: Disabled)(Factory password setting: 0000) / Initialization / Copy
Ambient temperature		-10 to $+55\text{ }^{\circ}\text{C}$ $+14$ to $+131\text{ }^{\circ}\text{F}$ (No dew condensation or icing allowed), Storage: -25 to $+70\text{ }^{\circ}\text{C}$ -13 to $+158\text{ }^{\circ}\text{F}$
Ambient humidity		30 to 85 % RH, Storage: 30 to 85 % RH
Voltage withstandability		1,000 V AC for one min. between all supply terminals connected together and enclosure
Insulation resistance		20 M Ω , or more, with 500 V DC megger between all supply terminals connected together and enclosure
Cable		8-core shielded cable, 0.5 m 1.640 ft long, with a connector at the end (2 cables)
Weight		Net weight: 200 g approx.
Accessories		Adapter cable: 2 cables

Note: Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of $+20\text{ }^{\circ}\text{C}$ **$+68\text{ }^{\circ}\text{F}$** .

Laser alignment tool

Item	Model No.	SF-LAT-2N
Supply voltage		3 V (LR6 battery $\times 2$ pcs.)
Battery		1.5 V (LR6 battery) $\times 2$ pcs. (replaceable)
Battery lifetime		30 hours approx. of continuous operation (LR6 battery, at $+25\text{ }^{\circ}\text{C}$ $+77\text{ }^{\circ}\text{F}$ ambient temperature)
Light source		Red semiconductor laser: Class 2 (IEC / JIS), Class II (FDA) (Max. output: 1 mW, Peak emission wavelength: 650 nm 0.026 mil) (Note 2)
Spot diameter		10 mm 0.394 in approx. (at 5 m 16.404 ft distance)
Ambient temperature		0 to $+40\text{ }^{\circ}\text{C}$ $+32$ to $+104\text{ }^{\circ}\text{F}$ (No dew condensation), Storage: 0 to $+55\text{ }^{\circ}\text{C}$ $+32$ to $+131\text{ }^{\circ}\text{F}$
Ambient humidity		35 to 85 % RH, Storage: 35 to 85 % RH
Material		Enclosure: ABS, Mounting part: Aluminum
Weight		Net weight: 200 g approx. (including batteries)
Accessories		LR6 battery: 2 pcs.

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of $+20\text{ }^{\circ}\text{C}$ **$+68\text{ }^{\circ}\text{F}$** .

2) As for FDA regulation, the product complies with 21 CFR 1040.10 and 1040.11 based on Laser Notice No. 50, dated June 24, 2007, issued by CDRH under the FDA.

Corner mirror


Item	Model No.	RF-SFBH-□
Attenuation rate of sensing range		With one mirror: Declined to 90 %, With two mirrors: Declined to 80 % (When used in combination with the SF4B series)
Environmental resistance	Ambient temperature	-10 to $+55\text{ }^{\circ}\text{C}$ $+14$ to $+131\text{ }^{\circ}\text{F}$ (No dew condensation or icing allowed), Storage: -25 to $+70\text{ }^{\circ}\text{C}$ -13 to $+158\text{ }^{\circ}\text{F}$
	Ambient humidity	30 to 85 % RH, Storage: 30 to 95 % RH
	Vibration resistance	10 to 55 Hz frequency, 0.75 mm 0.030 in amplitude in X, Y and Z directions for two hours each
	Shock resistance	300 m/s ² acceleration (30 G approx.) in X, Y and Z directions for three times each
Material		Enclosure: Aluminium, Mounting bracket: Stainless steel, Mirror (rear surface mirror): Glass, Side cover: EPDM
Accessories		Intermediate supporting bracket: 1 set (RF-SFBH-40/48/56/64), 2 sets (RF-SFBH-72/80/88/96)

Note: Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of $+20\text{ }^{\circ}\text{C}$ **$+68\text{ }^{\circ}\text{F}$** .

I/O CIRCUIT AND WIRING DIAGRAMS

I/O circuit diagram

<In case of using I/O circuit for PNP output>

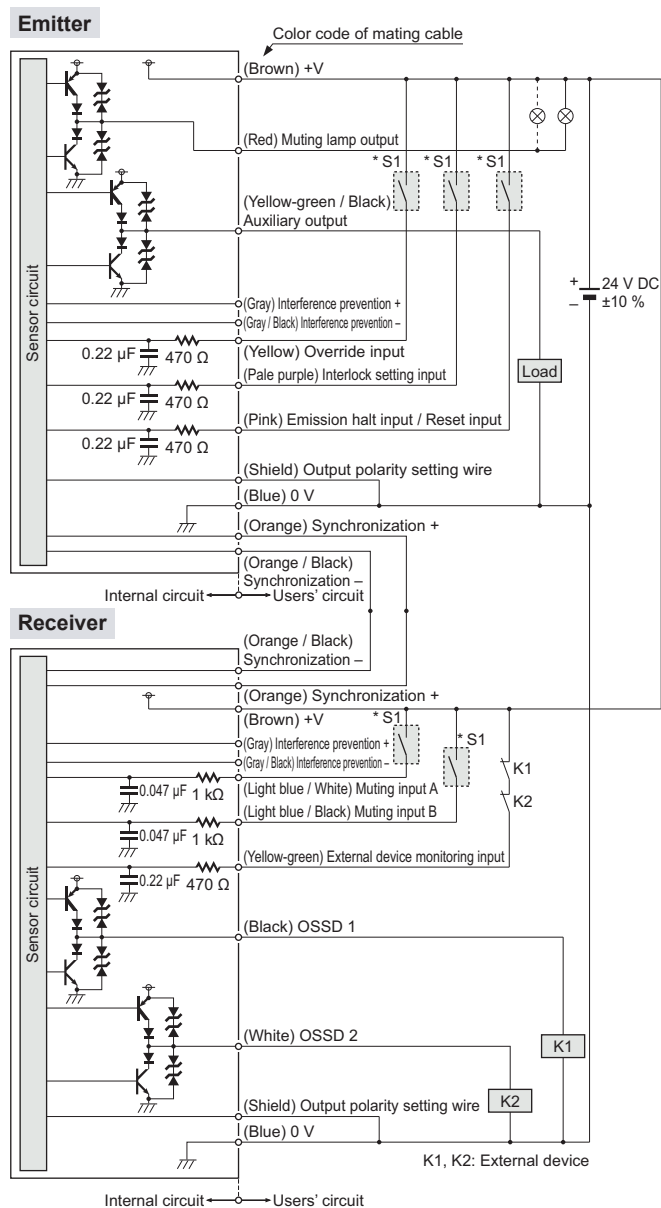

Note: The above diagram is when using a 12-core cable. If an 8-core cable is used, the red, yellow, gray, gray / black, light blue / white and light blue / black lead wires are absent.

* S1


Switch S1

- Emission halt input / Reset input
For manual reset
Vs to Vs - 2.5 V (sink current 5 mA or less): Emission halt (Note 1)
Open: Emission
For automatic reset
Vs to Vs - 2.5 V (sink current 5 mA or less): Emission (Note 1)
Open: Emission halt
- Interlock setting input, Override input, Muting input A / B, External device monitoring input
Vs to Vs - 2.5 V (sink current 5 mA or less): Enabled (Note 1)
Open: Disabled

Notes: 1) Vs is the applying supply voltage.

2) Switch S1 can be connected to either "+V" or "0 V". The above diagram shows a connection to "+V" as an example.

<In case of using I/O circuit for NPN output>

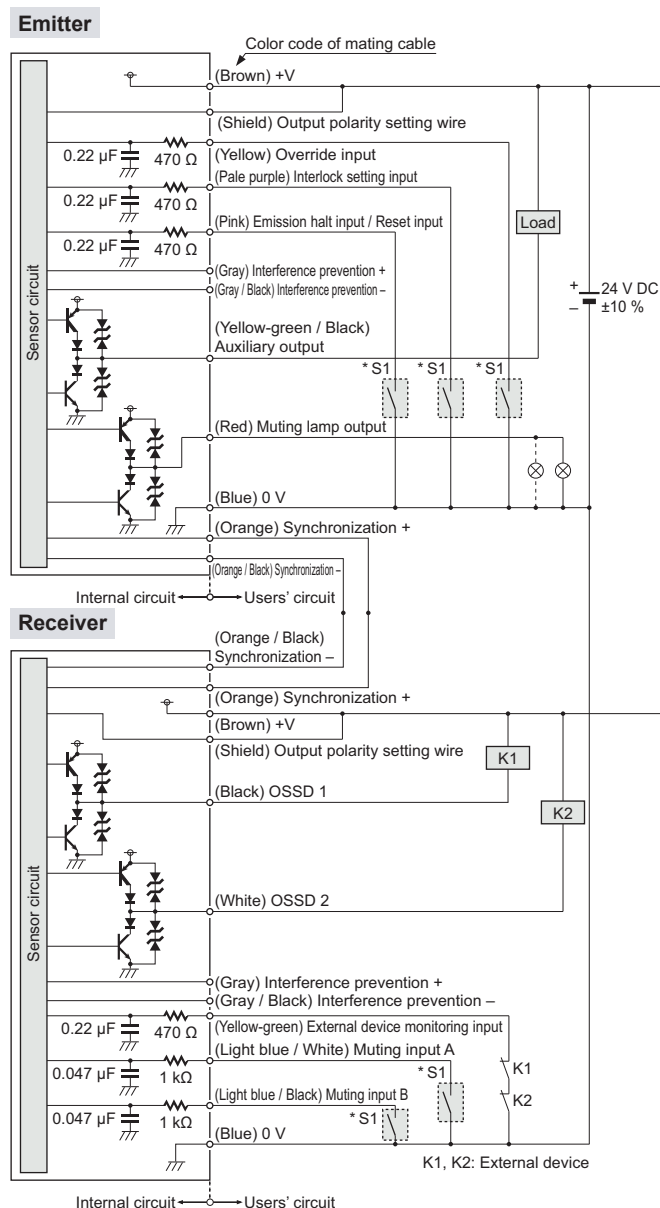

Note: The above diagram is when using a 12-core cable. If an 8-core cable is used, the red, yellow, gray, gray / black, light blue / white and light blue / black lead wires are absent.

* S1

Switch S1

- Emission halt input / Reset input
For manual reset
0 to +1.5 V (source current 5 mA or less): Emission halt
Open: Emission
For automatic reset
0 to +1.5 V (source current 5 mA or less): Emission
Open: Emission halt
- Interlock setting input, Override input, Muting input A / B, External device monitor input
0 to +1.5 V (source current 5 mA or less): Enabled
Open: Disabled


Note: Switch S1 can be connected to either "+V" or "0 V". The above diagram shows a connection to "0 V" as an example.

I/O CIRCUIT AND WIRING DIAGRAMS

Connection example

Standard components (8-core cable): Interlock function “enabled (manual reset)”, external device monitoring function “enabled”

<In case of using I/O circuit for PNP output>

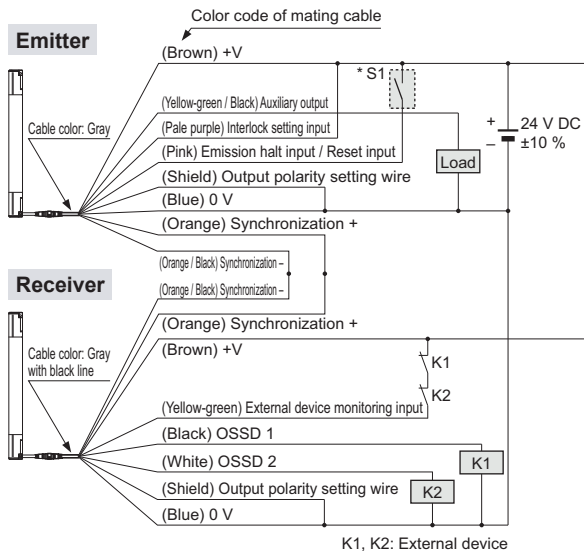


* S1

- Switch S1
- Emission halt input / Reset input
 - For manual reset
 - Vs to Vs – 2.5 V (sink current 5 mA or less): Emission halt (Note)
 - Open: Emission
 - For automatic reset
 - Vs to Vs – 2.5 V (sink current 5 mA or less): Emission (Note)
 - Open: Emission halt

Note: Vs is the applying supply voltage.


The diagram at left shows the configuration when using PNP output, interlock function “enabled (manual reset)” and external device monitoring function “enabled”.

In case of setting the interlock function to “disabled (automatic reset)”

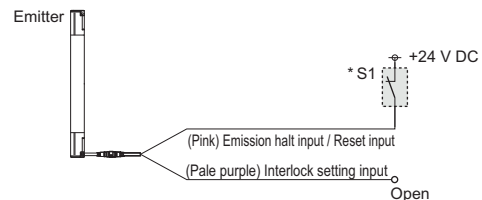


* Refer to p.28 for details of the interlock function.

In case of setting the external device monitoring function to “disabled”

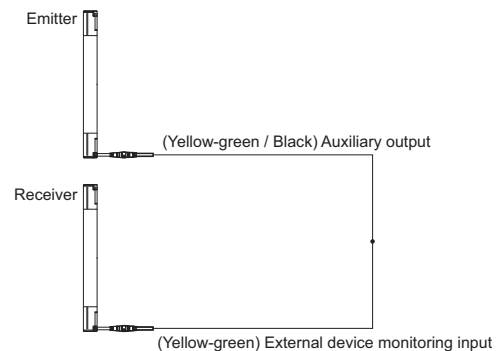

* Refer to p.29 for details of the external device monitoring function.

<In case of using I/O circuit for NPN output>

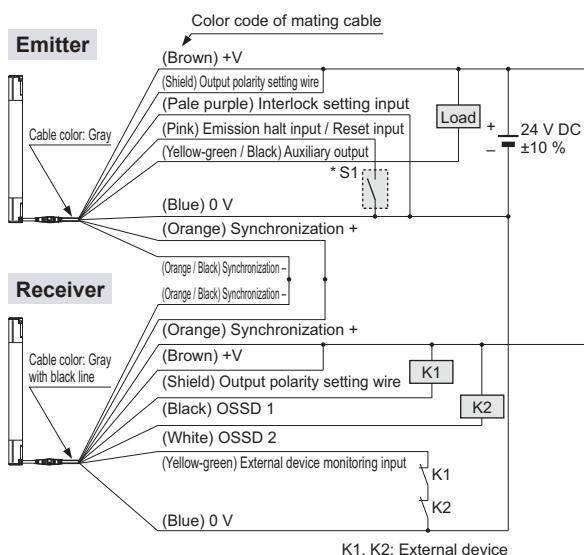


* S1

- Switch S1
- Emission halt input / Reset input
 - For manual reset
 - 0 to +1.5 V (source current 5 mA or less): Emission halt
 - Open: Emission
 - For automatic reset
 - 0 to +1.5 V (source current 5 mA or less): Emission
 - Open: Emission halt


The diagram at left shows the configuration when using NPN output, interlock function “enabled (manual reset)” and external device monitoring function “enabled”.

In case of setting the interlock function to “disabled (automatic reset)”

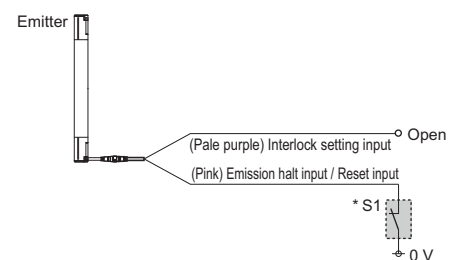

* Refer to p.28 for details of the interlock function.

In case of setting the external device monitoring function to “disabled”

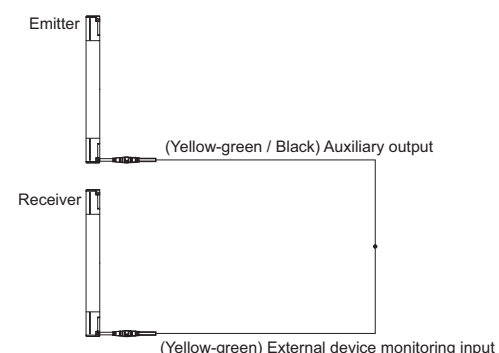


* Refer to p.29 for details of the external device monitoring function.

I/O CIRCUIT AND WIRING DIAGRAMS

Connection example

Muting control components (12-core cable, with interference prevention wires): Interlock function "disabled (automatic reset)", external device monitoring function "disabled"

<In case of using I/O circuit for PNP output>

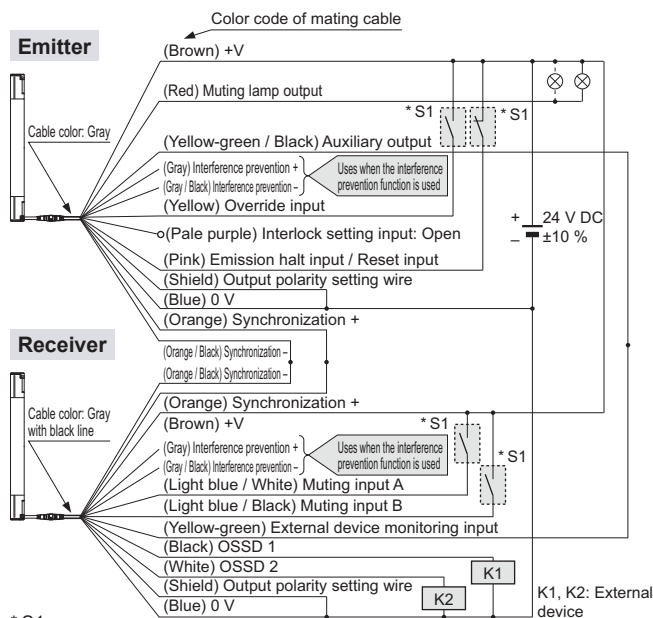


* S1

Switch S1

- Emission halt input / Reset input
- For manual reset
- Vs to Vs - 2.5 V (sink current 5 mA or less): Emission halt (Note), Open: Emission
- For automatic reset
- Vs to Vs - 2.5 V (sink current 5 mA or less): Emission (Note), Open: Emission halt
- Override input, Muting input A / B, External device monitoring input
- Vs to Vs - 2.5 V (sink current 5 mA or less): Enabled (Note), Open: Disabled

Note: Vs is the applying supply voltage.

<In case of using I/O circuit for NPN output>

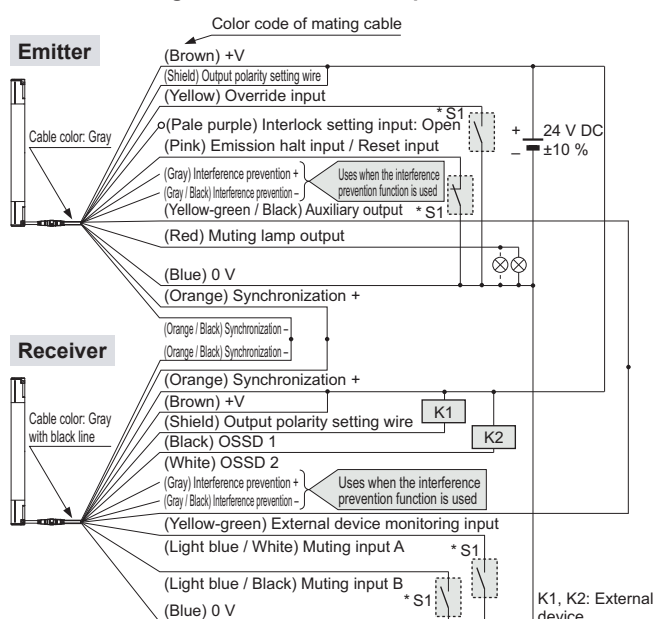

* S1


Switch S1

- Emission halt input / Reset input
- For manual reset
- 0 to +1.5 V (source current 5 mA or less): Emission halt, Open: Emission
- For automatic reset
- 0 to +1.5 V (source current 5 mA or less): Emission, Open: Emission halt
- Override input, Muting input A / B, External device monitoring input
- 0 to +1.5 V (source current 5 mA or less): Enabled, Open: Disabled

The diagram at left shows the configuration when using PNP output, interlock function "disabled (automatic reset)" and external device monitoring function "disabled".


In case of setting the interlock function to "enabled (manual reset)"

- When the interlock function is "enabled (manual reset)", the override function cannot be used.

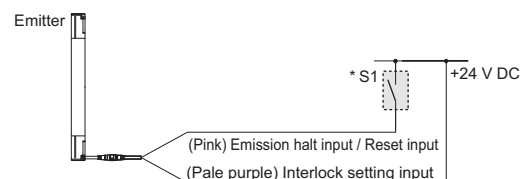

* Refer to p.28 for details of the interlock function.

In case of setting the external device monitoring function to "enabled"

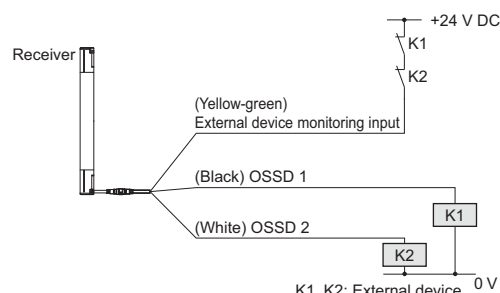


* Refer to p.29 for details of the external device monitoring function.

The diagram at left shows the configuration when using NPN output, interlock function "disabled (automatic reset)" and external device monitoring function "disabled".


In case of setting the interlock function to "enabled (manual reset)"

- When the interlock function is "enabled (manual reset)", the override function cannot be used.

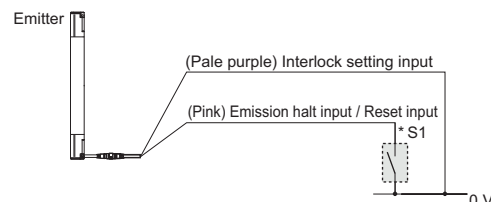

* Refer to p.28 for details of the interlock function.

In case of setting the external device monitoring function to "enabled"

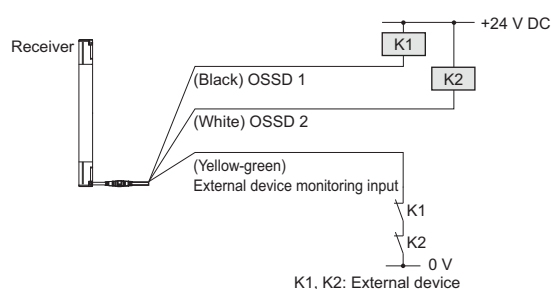

* Refer to p.29 for details of the external device monitoring function.


I/O CIRCUIT AND WIRING DIAGRAMS

SF-C11

SF4B series wiring diagram (Control Category 4)

For PNP output (minus ground)


- Set the light curtain input polarity selection switch to the PNP side and ground the 0 V line.

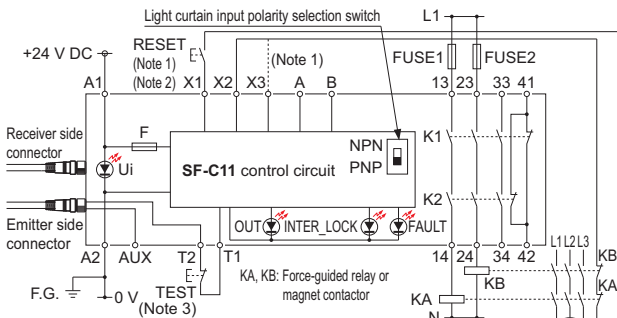

- Notes: 1) The above diagram is when using manual reset. If automatic reset is used, disconnect the lead from X2 and connect it to X3. In this case, a reset (RESET) button is not needed.
- 2) Use a momentary-type switch as the reset (RESET) button.
- 3) Emission halt occurs when the test (TEST) button is open, and emission occurs when the test (TEST) button is short-circuited. If not using the test (TEST) button, short-circuit T1 and T2.

For NPN output (plus ground)

- In the above diagram, set the light curtain input polarity selection switch to the NPN side and ground the + side.

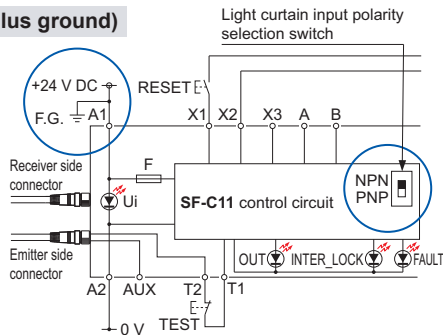


SF-C12

SF4B series wiring diagram (Control Category 4)

For PNP output (minus ground)

- Set the two light curtain input polarity select switches to the PNP side and connect the FG terminal to the 0 V line.

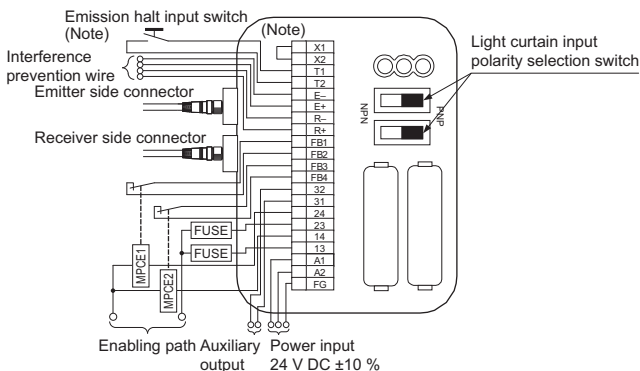


Note: The above diagram is when using manual reset. If automatic reset is used, connect a normally closed type pushbutton switch between T1 and T2 and leave between X1 and X2 open.

For NPN output (plus ground)

- In the above diagram, set the two light curtain input polarity selection switches to the NPN side and connect the F.G. terminal to the + side.


When SF-C11 is connected to the light curtain, be sure to use the following mating cable.
SFB-CB□, SFB-CCJ10□

Terminal arrangement diagram

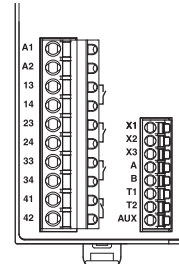

Terminal	Function
A1	+24 V DC
A2	0 V
13-14, 23-24, 33-34	Enabling path (NO contact × 3)
41-42	Auxiliary output (NC contact × 1)
X1	Reset output terminal
X2	Reset input terminal (Manual)
X3	Reset input terminal (Automatic)
A	Not used
B	
T1	Test output terminal
T2	Test input terminal
AUX	Semiconductor auxiliary output

Pin layout for light curtain connectors

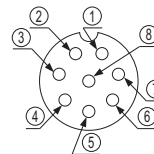

Connector pin No.	Emitter side connector	Receiver side connector
①	Interlock	OSSD 2
②	+24 V DC	+24 V DC
③	Emission halt	OSSD 1
④	Auxiliary output	EDM (External relay monitor)
⑤	Synchronization wire +	Synchronization wire +
⑥	Synchronization wire -	Synchronization wire -
⑦	0 V	0 V
⑧	Shield wire	Shield wire


When SF-C12 is connected to the light curtain, be sure to use the following mating cable.
SFB-CB05-MU, SFB-CCJ10□-MU

Terminal arrangement diagram



Terminal	Function	Terminal	Function
FG	Frame ground (F.G.) terminal	R+	Interference prevention wire - (Receiver side)
A2	0 V	R-	Interference prevention wire + (Receiver side)
A1	+24 V DC	E+	Interference prevention wire - (Emitter side)
13-14, 23-24	Enabling path (NO contact × 2)	E-	Interference prevention wire + (Emitter side)
31-32	Auxiliary output (NC contact × 1)	T2	Emission halt input terminal
FB4	External relay monitor terminal 2	T1	Automatic reset / manual reset selection terminal
FB3	External relay monitor terminal 1	X2	
FB2	External relay monitor terminal 1	X1	Manual reset: X1 - X2 short-circuited
FB1			

Pin layout for light curtain connectors

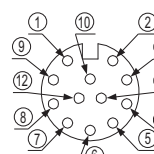

Note: Input and output for pin Nos. ⑪ and ⑫ are not used by this product.

Connector pin No.	Emitter side connector	Receiver side connector
①	Interlock	OSSD 2
②	+24 V DC	+24 V DC
③	Emission halt	OSSD 1
④	Auxiliary output	EDM (External relay monitor)
⑤	Synchronization wire +	Synchronization wire +
⑥	Synchronization wire -	Synchronization wire -
⑦	0 V	0 V
⑧	Shield wire	Shield wire
⑨	Interference prevention wire +	Interference prevention wire +
⑩	Interference prevention wire -	Interference prevention wire -
⑪	(Muting lamp output)	(Muting input 1)
⑫	(Override input)	(Muting input 2)


I/O CIRCUIT AND WIRING DIAGRAMS

SF-C13

SF4B series wiring diagram (Control Category 4)

For PNP output (minus ground)


- Connect the light curtain control outputs OSSD 1 and OSSD 2 to S1 and S2 respectively.

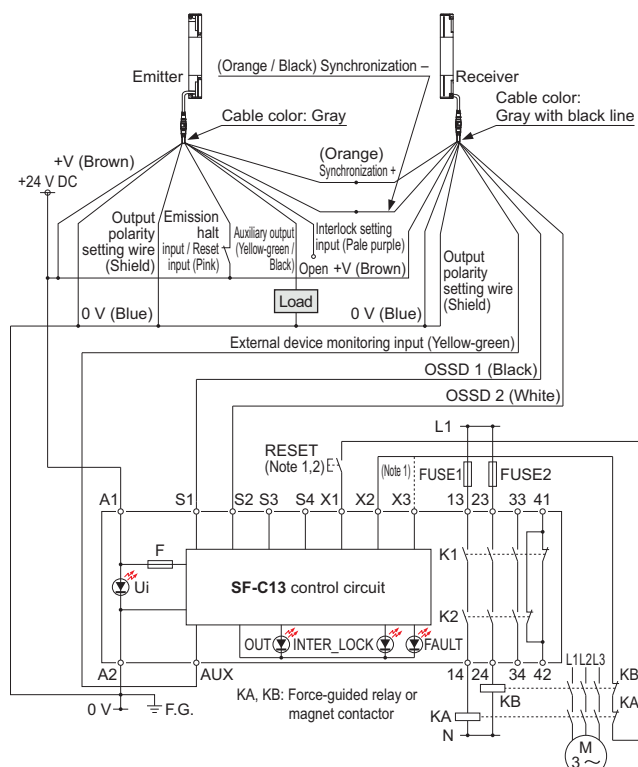

- Notes: 1) The above diagram is when using manual reset. If automatic reset is used, disconnect the lead from X2 and connect it to X3. In this case, a reset (RESET) button is not needed.
- 2) Use a momentary-type switch as the reset (RESET) button.

For NPN output (plus ground)

- Connect the light curtain control outputs OSSD 1 and OSSD 2 to S4 and S2 respectively and ground the + side.

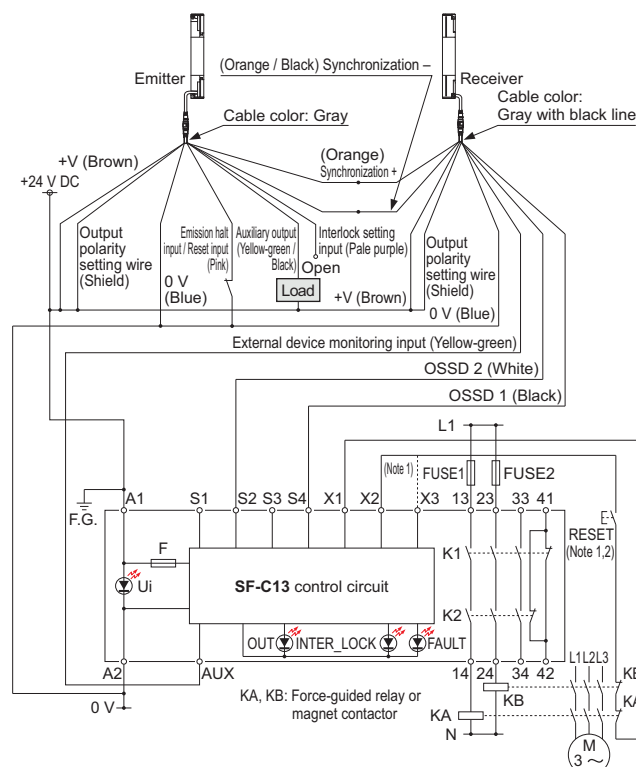

- Notes: 1) The above diagram is when using manual reset. If automatic reset is used, disconnect the lead from X2 and connect it to X3. In this case, a reset (RESET) button is not needed.
- 2) Use a momentary-type switch as the reset (RESET) button.

Terminal arrangement diagram

Terminal	Function
A1	+24 V DC
A2	0 V
S1	Light curtain control output (OSSD) input terminal
S2	
S3	
S4	
AUX	Semiconductor auxiliary output
X1	Reset output terminal
X2	Reset input terminal (Manual)
X3	Reset input terminal (Automatic)
13	
14	
23	
24	
33	
34	
41	
42	

Use a separate terminal block to carry out wiring for light curtains that cannot be connected to the SF-C13.

When SF-C13 is connected to the light curtain, be sure to use the following discrete wire mating cable.
SFB-CCB□(-MU), SFB-CC□(-MU)


I/O CIRCUIT AND WIRING DIAGRAMS

SF-C14EX(-01)

SF4B series wiring diagram (Control Category 4)

For PNP output (minus ground)


- Set the output polarity selection switch to the PNP side and ground the 0 V line.

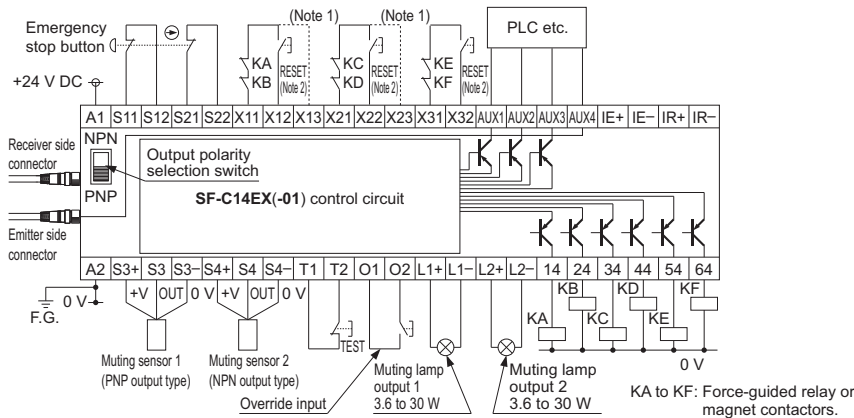

Notes: 1) The above diagram is when using manual reset. If automatic reset is used, disconnect the lead from X12 and X22, and connect them to X13 and X23, as shown by the dotted lines. In this case, a reset (RESET) button is not needed. Terminals X31 to X32 are for manual reset only.
2) Use a momentary-type switch for the reset (RESET) button.


For NPN output (plus ground)

- Set the output polarity selection switch to the NPN side and ground the side of the power supply input.

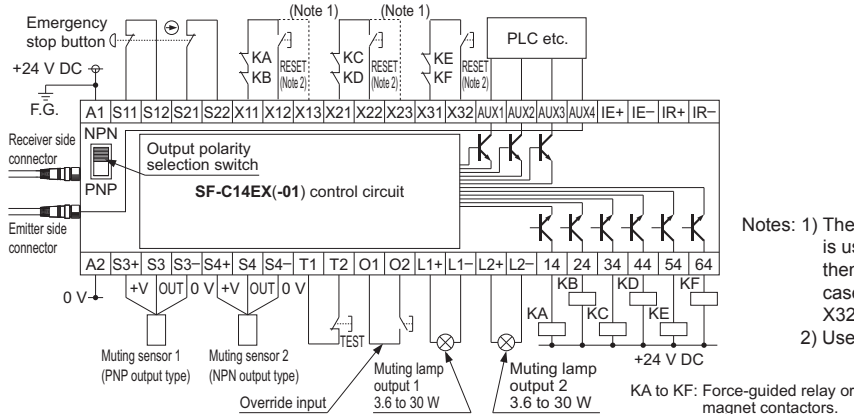


Notes: 1) The left diagram is when using manual reset. If automatic reset is used, disconnect the lead from X12 and X22, and connect them to X13 and X23, as shown by the dotted lines. In this case, a reset (RESET) button is not needed. Terminals X31 to X32 are for manual reset only.
2) Use a momentary-type switch for the reset (RESET) button.

Terminal arrangement diagram

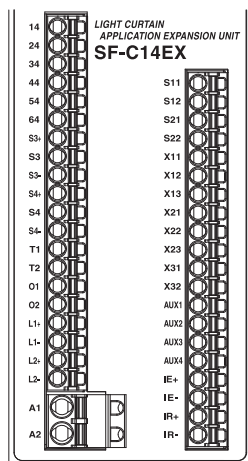

Terminal	Function	Terminal	Function
14	Enabling path 1, Beam received / Beam interrupted output of the light curtain	S11	Emergency stop contact input 2 NC input
24		S12	Between S11 and S12
34	Enabling path 2, light curtain output including the muting function	S21	Between S21 and S22
44		S22	
54	Enabling path 3	X11	Enabling path 1 reset input
64	Emergency stop output	X12	X11 - X12: Manual reset
S3+	Muting sensor input 1 (PNP output type)	X13	X11 - X13: Automatic reset
S3	S3+, S3-: Power supply	X21	Enabling path 2 reset input
S3-	S3: Sensor output	X22	X21 - X22: Manual reset
S4+	Muting sensor input 2 (NPN output type)	X23	X21 - X23: Automatic reset
S4	S4+, S4-: Power supply	X31	Enabling path 3 reset input
S4-	S4: Sensor output	X32	X31 - X32: Manual reset
T1	Test input terminal	AUX1	Auxiliary output 1, Muting output
T2	Open: Test mode	AUX2	Auxiliary output 2, Override output
O1	Override input terminal	AUX3	Auxiliary output 3, Blown lamp output
O2	Open: Invalid	AUX4	Auxiliary output 4, Light curtain auxiliary output
L1+	Muting lamp output 1	IE+	Interference prevention terminal, Emitter side +
L1-		IE-	Interference prevention terminal, Emitter side -
L2+	Muting lamp output 2	IR+	Interference prevention terminal, Receiver side +
L2-		IR-	Interference prevention terminal, Receiver side -
A1	+24 V DC		
A2	0 V		

Pin layout for light curtain connectors

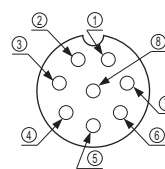

Connector pin No.	Emitter side connector	Receiver side connector
①	Interference prevention wire +	Interference prevention wire +
②	+24 V DC	+24 V DC
③	Interference prevention wire -	Interference prevention wire -
④	Auxiliary output	Not used
⑤	Synchronization wire +	Synchronization wire +
⑥	Synchronization wire -	Synchronization wire -
⑦	0 V	0 V
⑧	Shield wire	Shield wire

PRECAUTIONS FOR PROPER USE

Interlock function

- The selection of manual reset / automatic reset is available by applying the interlock input wiring. The interlock becomes available by selecting manual reset.

Interlock setting input wire (pale purple)	Interlock function
When selecting PNP output: Connected to +V When selecting NPN output: Connected to 0 V	Manual reset
Open	Automatic reset




In case of using the interlock function, be sure there exists no operator inside of the dangerous area. It causes death or serious injury without the confirmation.

Manual reset

- The control output (OSSD 1, OSSD 2) is not turned ON automatically even though this device is received the light. When this device is reset in light received state [open the emission halt input / reset input → short-circuit the device to 0 V or +V → open], the control output (OSSD 1, OSSD 2) is turned ON.
(Refer to p.22~ for wiring diagrams.)


<Time chart>

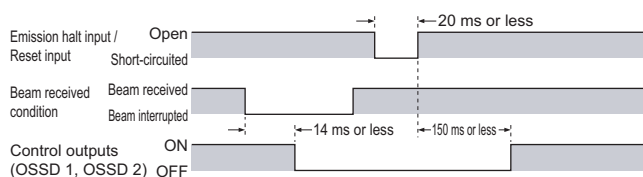

The reset switch shall be placed in area where all over the dangerous zone shall be comprehend and out side of the dangerous zone.

Automatic reset

- The control output (OSSD 1, OSSD 2) is turned ON automatically when this device receives the light.

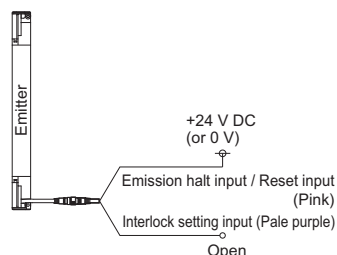

In case that this light curtain is used under automatic reset mode, set the system not to be auto reset by the safety relay unit, etc. (conforming to EN 60204-1)

- It is also possible to set the external device monitoring function into invalid by using the handy-controller **SFB-HC** (optional). However, a handy-controller cannot be used with the **SF4B-□-01<V2>**, the **SF4B-□-03<V2>** and the **SF-C14EX-01**.


Emission halt function

- This function stops the emission process of the emitter. You can select whether emission is on or halted by means of the connection status for the emission halt input / reset input wire (pink).

Interlock function	Emission halt input / reset input wire (pink)	Emission halt	Control output status (OSSD 1, OSSD 2)
Manual reset	Open	Invalid	ON
	When selecting PNP output: Connected to +V When selecting NPN output: Connected to 0 V	Valid	OFF
Automatic reset	Open	Valid	OFF
	When selecting PNP output: Connected to +V When selecting NPN output: Connected to 0 V	Invalid	ON

- During emission halt, the control outputs (OSSD 1, OSSD 2) become OFF status.
- By using this function, malfunction due to extraneous noise or abnormality in the control outputs (OSSD 1, OSSD 2) and the auxiliary output can be determined even from the machinery side.
- Normal operation is restored when the emission halt input / reset input wire (pink) is connected to 0 V or +V.

<Time chart (automatic reset)>

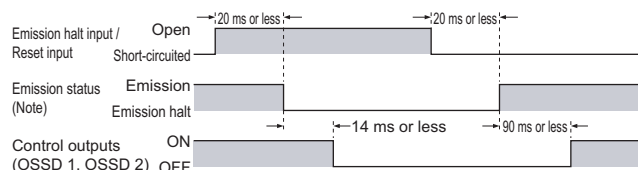

Note: This time chart shows the operation in automatic reset. In manual reset, the light curtain performs emission under open status and performs emission halt under short-circuit status.




Do not use the emission halt function for the purpose of stopping the machine in which the **SF4B<V2>** series is installed. Failure to do so could result in death or serious injury.

Auxiliary output (Non-safety output)

- This light curtain incorporates the auxiliary output (yellow-green / black) for the non-safety output. The auxiliary output is incorporated with the emitter.

Auxiliary output setting	Normal mode			Lockout
	Emission halt	Control outputs (OSSD 1, OSSD 2) status		
		Beam received	Beam interrupted	
Negative logic of OSSD (Factory setting)	ON	OFF	ON	ON

<Time chart>

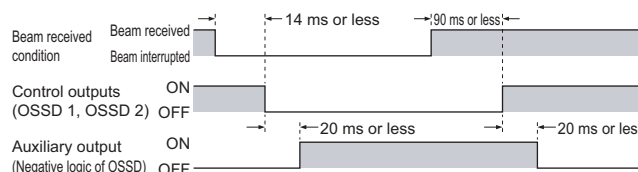

Do not use the auxiliary output for the purpose of stopping the device with **SF4B<V2>** installed. Failure to do so could result in serious injury or death.

PRECAUTIONS FOR PROPER USE

External device monitoring function


- This is the function for checking whether the external safety relay connected to the control outputs (OSSD 1, OSSD 2) perform normally in accordance with the control outputs (OSSD 1, OSSD 2) or not. Monitor the contacting point "b" of the external safety relay, and if any abnormality such as deposit of the contacting point, etc. is detected, change the status of the light curtain into lockout one, and turn OFF the control outputs (OSSD 1, OSSD 2).

In case of setting the external device monitoring function to enabled

- Connect the external device monitoring input (yellow-green) to the external safety relay connected the control outputs (OSSD 1, OSSD 2). Refer to p.21~ for wiring diagrams.


In case of not using the external device monitoring function

- Connect the external device monitoring input (yellow-green) to the auxiliary output (yellow-green / black). At this time, set the auxiliary output as [negative logic of control outputs (OSSD 1, OSSD 2)] (factory setting).
- The auxiliary output cannot be connected to external devices.

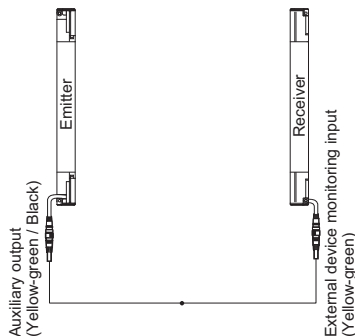


- It is also possible to set the external device monitoring function into invalid by using the handy-controller **SFB-HC** (optional). However, a handy-controller cannot be used with the **SF4B-□-01<V2>**, the **SF4B-□-03<V2>** and the **SF-C14EX-01**.

<Time chart (normal)>

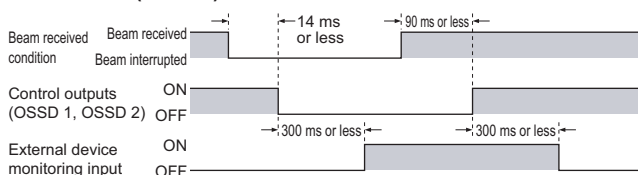


- The time set for external device monitoring is 300 ms or less. Exceeding 300 ms turns the device into lockout status. It can be set within 100 to 600 ms (in units of 10 ms) by using the handy-controller (**SFB-HC**) (optional). However, a handy-controller cannot be used with the **SF4B-□-01<V2>**, the **SF4B-□-03<V2>** and the **SF-C14EX-01**.

<Time chart (Error ①)>

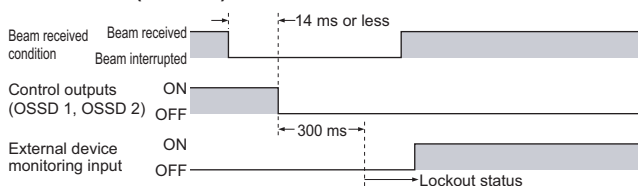

<Time chart (Error ②)>

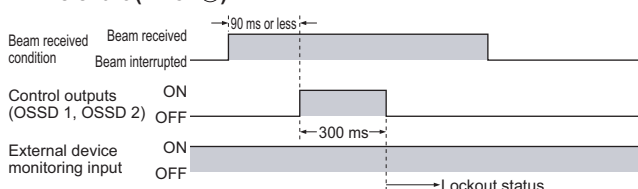

Muting function



- Incorrect use of the muting control may cause accidents. Please understand the muting control fully, and use it. As for the muting control, the following international standards define the requirements.
ISO 13849-1 (EN ISO 13849-1 / JIS B 9705-1)
IEC 61496-1 (ANSI / UL 61496 / JIS B 9704-1)
IEC 60204-1 (JIS B 9960-1)
EN 415-4
ANSI B11.19-1990
ANSI / RIA R15.06-1999
- Use the muting control while the machine cycle is not in danger mode. Maintain safety with the other measure while the muting control is activated.
- For the application that the muting control is activated when a workpiece passes through the sensor, place the muting sensor so that the conditions for the muting control cannot be satisfied by intrusion of personnel when the workpiece is passing through the sensor or the workpiece is not passing through it.
- The muting lamp should be installed in a position where it can always be seen by operators who set or adjust the machine.
- Be sure to check the operation of the muting function before its use. Furthermore, check the state of the muting lamp (cleanliness or brightness etc.).

- This function turns the safety function of this light curtain into disabled temporarily. When the control outputs (OSSD 1, OSSD 2) are ON, this function is available for passing the workpiece through the sensing area of the light curtain without stopping the machinery. The muting function becomes valid when all the conditions listed below are satisfied. However, this function cannot be used with the **SF4B-□-03<V2>**.

- The control outputs (OSSD 1, OSSD 2) shall be ON.
- The incandescent lamp with 3 to 10 W shall be connected to the muting lamp output (red) (Note 1).
- The output of the muting sensors A and B shall be changed from OFF (open) to ON. At this time, the time difference occurred by changing the output of the muting sensors A and B into ON status shall be within 0.03 to 3 sec. (Note 2)

- The following devices, photoelectric sensor with semiconductor output, inductive proximity sensor, position switch on N.O. (Normally open) contact, etc. are available for applying to the muting sensor.
- In case of using the muting function, please order 12-core cable.

- Notes: 1) Using handy-controller (**SFB-HC**) (optional) Ver.2 or later can configure muting lamp diagnosis function. If setting muting lamp diagnosis function to ineffective, muting function continues even when the lamp is out or not connected.
- 2) By using handy-controller (**SFB-HC**) (optional) Ver.2.1 or later, and connecting normally open (N.O.) type muting sensor to muting input A, and normally closed (N.C.) type muting sensor to muting input B, then muting function can be used for 0 to 3 sec.

Output operation for muting sensor


	Operation when sensor is ON	Operation when sensor is OFF
NO (Normal Open) type ON with "Dark-ON" condition (photoelectric sensor, etc.) ON with "Normally open" condition (inductive proximity sensor, etc.) ON with object contacted condition (position switch, etc.)	Output 0 V or +V	Open

PRECAUTIONS FOR PROPER USE




- Be sure to use the muting sensor that satisfies the previous table "Output operation for muting sensor". If the other muting sensor not satisfying the specification above, the muting function might become enabled with the timing that the machine designer cannot expect and could result in serious injury or death.
- The muting lamp shall be connected without fail. The muting function is invalid for activating with the muting lamp not connected.
- It is recommended that two muting lamps should be connected in parallel. However, take care not to exceed 10 W in total.

Installation condition of muting sensor

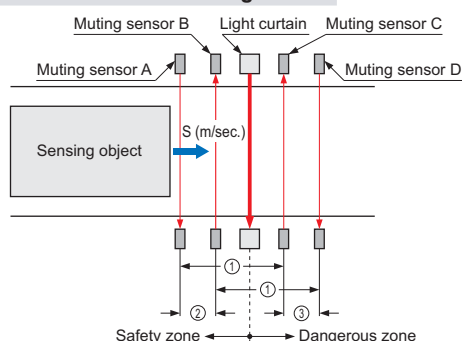


- ① Shorten the distances between muting sensors A to C and between B to D than the whole length of the sensing object.
- ② The transit time of the sensing object to be passed through the muting sensors A to B shall be 0.03 ms to less than 3 sec. S (m/sec.) is the moving speed of the sensing object, then distance (m) between A and B: less than $S \times 3$ (sec.)
- ③ The transit time of the sensing object to be passed through the muting sensors C to D shall be under 3 sec. S (m/sec.) is the moving speed of the sensing object, then distance (m) between C and D: less than $S \times 3$ (sec.)


<In case of PNP output>

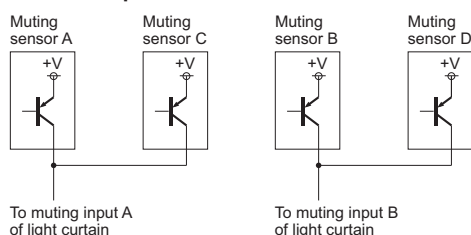

<In case of NPN output>

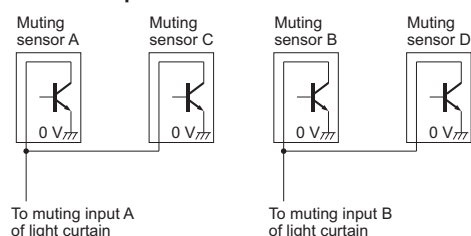

<Time chart>

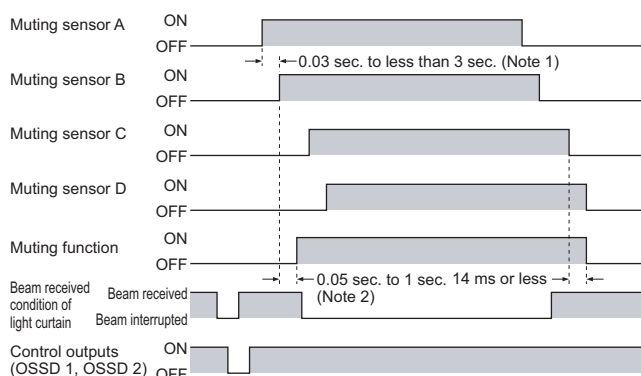

- It is possible to set the muting function into disabled per beam channel respectively and to specify the output order of the muting sensor to be set into enabled by using the handy-controller (SFB-HC) (optional). However, a handy-controller cannot be used with the SF4B-□-01<V2>, the SF4B-□-03<V2> and the SF-C14EX-01.

Notes: 1) By using handy-controller (SFB-HC) (optional) Ver.2.1 or later, and connecting normally open (N.O.) type muting sensor to muting input A, and normally closed (N.C.) type muting sensor to muting input B, then muting function can be used for 0 to 3 sec.
2) This is when the muting lamp diagnosis function is valid. If the muting lamp does not light up even if 1 sec. is passed, the muting function becomes invalid. When the muting lamp diagnosis function is invalid, the muting function becomes valid 0.05 sec. after the input conditions of the muting sensor A (C) and B (D) were satisfied.

Override function

- This function sets the safety function of this light curtain enabled forcibly. When using the muting function, the override function can be used to start the machinery at times such as when the control outputs (OSSD 1 and OSSD 2) are OFF or when the muting sensors are ON when the line is to be started.

The override function becomes valid when all the conditions listed below are satisfied.

However, this function cannot be used with the SF4B-□-03<V2>.

- ① The incandescent lamp with 3 to 10 W shall be connected to the muting lamp output (red) (Note 1).
- ② The signal shall be input to either muting sensor A, B, or A and B.
- ③ The override input (yellow) shall be short-circuited to 0 V or +V, and the emission halt input / reset input (pink) shall be opened. (3 sec. continuously)

If one of the three conditions above becomes enabled or timing exceeds 60 sec. (Note 2), the override function becomes enabled.

- The override function only operates when the interlock function is disabled (automatic reset).
- For using the override function, please order 12-core cable.


Notes: 1) Using handy-controller (SFB-HC) (optional) Ver.2 or later can configure muting lamp diagnosis function. If setting muting lamp diagnosis function to ineffective, muting function continues even when the lamp is out or not connected.
2) By using handy-controller (SFB-HC) (optional) Ver.2.1 or later, a change between 60 and 600 sec. by 10 sec. per unit is possible.



- Make sure manually to operate system for starting override function. Furthermore, the system shall be placed in area where all over the dangerous zone shall be comprehend and out side of the dangerous zone.
- Using override function, make sure that there exist no operator in the dangerous zone, which may result in death or serious injury.

PRECAUTIONS FOR PROPER USE

<Time chart>

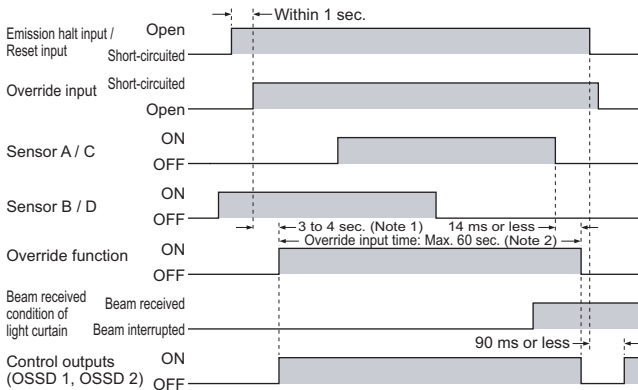

- Notes: 1) This is when the muting lamp diagnosis function is valid. If the muting lamp does not light up even if 1 sec. is passed, the muting function becomes invalid. When the muting lamp diagnosis function is invalid, the muting function becomes valid 3 sec. after the input conditions of the muting sensor A (C) and B (D) were satisfied.
- 2) By using handy-controller (**SFB-HC**) (Optional) Ver.2.1 or later, a change between 60 and 600 sec. by 10 sec. per unit is possible.


Series connection

Connectable up to 3 sets of light curtains (however, 192 beam channels max.)

- This is the configuration for connecting multiple sets of emitters and receivers facing each other in series. It is used when the dangerous part can be entered from two or more directions. The control outputs (OSSD 1, OSSD 2) turn OFF if any of the light curtain is interrupted.



For series connection, connect the emitter and emitter, receiver and receiver respectively using the exclusive cable (**SFB-CSL□**) for series connection. Wrong connection could generate the non-sensing area, resulting in serious injury or death.

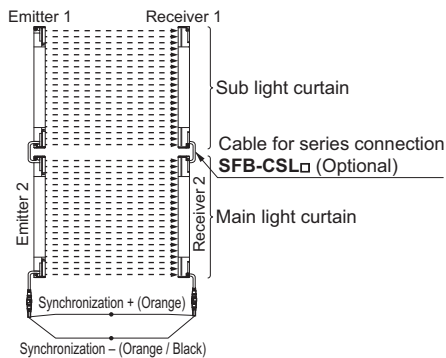


Parallel connection

Connectable up to 3 sets of light curtains

- This is the configuration for connecting multiple sets of emitter and receiver facing each other in parallel. It is used when there are two dangerous parts and each dangerous part can be entered from only one direction. By connecting the interference prevention wire, up to three sets of the light curtains can be connected. The control outputs (OSSD 1, OSSD 2) turn only its output to OFF if the light curtain is interrupted. However, **SF4B-□-03<V2>** does not apply.



For parallel connection, connect the one receiver to the other connection using the interference prevention wire as shown in the next figure. Wrong connection could generate the non-sensing area, resulting in serious injury or death.

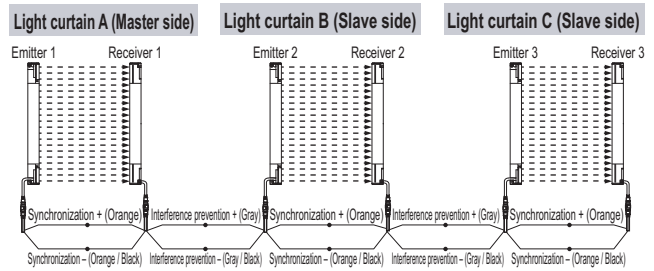

- Notes: 1) Because of using the interference prevention wire, please order 12-core cable.
- 2) If the interference prevention wire is extended, use a 0.2 mm², or more, shielded twist pair-cable.

Series and parallel mixed connection


Connectable up to 3 sets of light curtains (however, 192 beam channels max.)

- This is the configuration for connecting multiple sets of emitter and receiver facing each other in mixed series and parallel combination. It is used when there are two or more dangerous parts that can be entered from two or more directions. Up to three sets of light curtains in total of the series connection and parallel connection can be connected in combination. However, the total number of beam channels is a maximum of 192. The control outputs (OSSD 1, OSSD 2) turn only its output to OFF if the light curtain is interrupted. However, **SF4B-□-03<V2>** does not apply.




For parallel connection, connect the one receiver to the other connection using the interference prevention wire as shown in the figure below. Wrong connection could generate the non-sensing area, resulting in serious injury or death.

Light curtain A

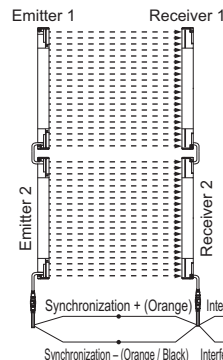

Light curtain B

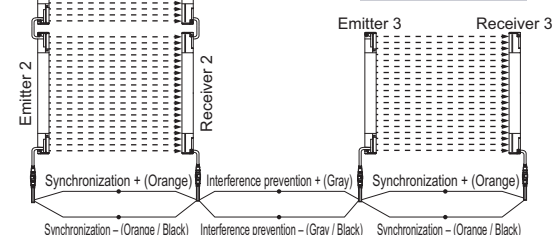

- Notes: 1) Because of using the interference prevention wire, please order 12-core cable.
- 2) If the interference prevention wire is extended, use a 0.2 mm², or more, shielded twist pair-cable.

Wiring




Refer to the applicable regulations for the region where this device is to be used when setting up the device. In addition, make sure that all necessary measures are taken to prevent possible dangerous operating errors resulting from earth faults.

- Make sure to carry out the wiring in the power supply off condition.
- Verify that the supply voltage variation is within the rating.
- If power is supplied from a commercial switching regulator, ensure that the frame ground (F.G.) terminal of the power supply is connected to an actual ground.
- In case noise generating equipment (switching regulator, inverter motor, etc.) is used in the vicinity of this sensor, connect the frame ground (F.G.) terminal of the equipment to an actual ground.
- Do not run the wires together with high-voltage lines or power lines or put them in the same raceway. This can cause malfunction due to induction.

PRECAUTIONS FOR PROPER USE

Part description and function

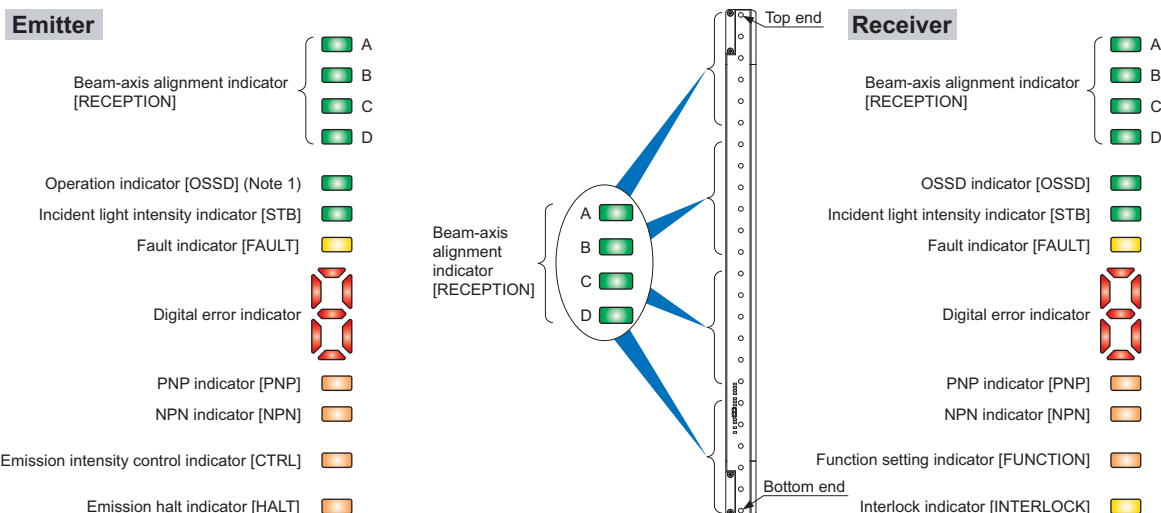

Description	Function	
Beam-axis alignment indicator (Red / Green) [RECEPTION]	A	When light curtain top receives light: lights up in red When light curtain top end receives light: blinks in red When control output is ON: lights up in green
	B	When light curtain upper middle receives light: lights up in red When control output is ON: lights up in green
	C	When light curtain lower middle receives light: lights up in red When control output is ON: lights up in green
	D	When light curtain bottom receives light: lights up in red When light curtain bottom end receives light: blinks in red When control output is ON: lights up in green
Operation indicator (Red / Green) [OSSD] (Note 1)	Lights up while light curtain operation is as follows [sequential operation]: When control output is OFF: lights up in red When control output is ON: lights up in green	
Incident light intensity indicator (Orange / Green) [STB]	When sufficient light is received (incident light: 130 % or more) (Note 2): lights up in green When stable light is received (incident light: 115 to 130 %) (Note 2): OFF When unstable light is received (incident light: 100 to 115 %) (Note 2): lights up in orange When light is interrupted: OFF (Note 3)	
Fault indicator (Yellow) [FAULT] (Note 4)	When fault occurs in the light curtain: lights up or blinks	
Digital error indicator (Red) (Note 4)	When device is lockout: lights up for incident error content	
PNP indicator (Orange) [PNP]	When PNP output is set: lights up	
NPN indicator (Orange) [NPN]	When NPN output is set: lights up	
Emission intensity control indicator (Orange) [CTRL]	When light is emitted under short mode: lights up When light is emitted under normal mode: lights off	
Emission halt indicator (Orange) [HALT]	When light emission is halt: lights up When light is emitted: OFF	

Description	Function	
Beam-axis alignment indicator (Red / Green) [RECEPTION]	A	When light curtain top receives light: lights up in red When light curtain top end receives light: blinks in red When control output is ON: lights up in green
	B	When light curtain upper middle receives light: lights up in red When control output is ON: lights up in green
	C	When light curtain lower middle receives light: lights up in red When control output is ON: lights up in green
	D	When light curtain bottom receives light: lights up in red When light curtain bottom end receives light: blinks in red When control output is ON: lights up in green
OSSD indicator (Red / Green) [OSSD]	When control output is OFF: lights up in red When control output is ON: lights up in green	
Incident light intensity indicator (Orange / Green) [STB]	When sufficient light is received (incident light: 130 % or more) (Note 2): lights up in green When stable light is received (incident light: 115 to 130 %) (Note 2): OFF When unstable light is received (incident light: 100 to 115 %) (Note 2): lights up in orange When light is interrupted: OFF (Note 3)	
Fault indicator (Yellow) [FAULT] (Note 4)	When fault occurs in the light curtain: lights up or blinks	
Digital error indicator (Red) (Note 4)	When device is lockout: lights up for incident error content	
PNP indicator (Orange) [PNP]	When PNP output is set: lights up	
NPN indicator (Orange) [NPN]	When NPN output is set: lights up	
Function setting indicator (Orange) [FUNCTION]	When blanking function is used: lights up (Note 5) When handy-controller is connected: blinks	
Interlock indicator (Yellow) [INTERLOCK]	When device is interlocked: lights up Other cases: OFF	

Notes: 1) Since the color of the operation indicator changes according to the ON / OFF status of the control outputs (OSSD 1, OSSD 2), the operation indicator is marked as "OSSD" on the light curtain.
 2) The threshold value where the control outputs (OSSD 1, OSSD 2) change from OFF to ON is applied as 100 % incident light intensity.
 3) The status when light is interrupted refers to the status that the some obstacle is existed in the sensing area.
 4) Refer to instruction manual enclosed with this product for details.
 5) The blanking function is set by using the handy-controller **SFB-HC** (optional). Please order the handy-controller separately. However, a handy-controller cannot be used with the **SF4B-□-01<V2>**, the **SF4B-□-03<V2>** and the **SF-C14EX-01**.
 6) The description given in [] is marked on the light curtain.

Others

- Do not use during the initial transient time (2 sec.) after the power supply is switched on.
- Avoid dust, dirt and steam.
- Take care that the light curtain does not come in direct contact with water, oil, grease, or organic solvents, such as, thinner, etc.

- Take care that the light curtain is not directly exposed to fluorescent light from a rapid-starter lamp or a high frequency lighting device, as it may affect the sensing performance.

PRECAUTIONS FOR PROPER USE



- When this device is used in the “PSDI mode”, an appropriate control circuit must be configured between this device and the machinery. For details, be sure to refer to the standards or regulations applicable in each region or country.
- To use this product in the U.S.A., refer to OSHA 1910. 212 and OSHA 1910. 217 for installation, and in Europe, refer to EN 999 as well. Observe your national and local requirements before installing this product.

- This catalog is a guide to select a suitable product. Be sure to read instruction manual attached to the product prior to its use.
- Both emitter and receiver are combined adjusted on factory setting, please apply both emitter and receiver with the same serial No. The serial No. is indicated on the plates of both emitter and receiver. (Indicated under model No.)


- Make sure to carry out the test run before regular operation.
- This safety system is for use only on machinery in which the dangerous parts can be stopped immediately, either by an emergency stop unit or by disconnecting the power supply. Do not use this system with machinery which cannot be stopped at any point in its operation cycle.

Sensing area




- Make sure to install this product such that any part of the human body must pass through its sensing area in order to reach the dangerous parts of the machinery. If the human body is not detected, there is a danger of serious injury or death.
- Do not use any reflective type or retroreflective type arrangement.
- Furthermore, facing several receivers towards one emitter, or vice versa, could produce a non-sensing area or cause mutual interference, which may result in serious injury or death.

Correct mounting method

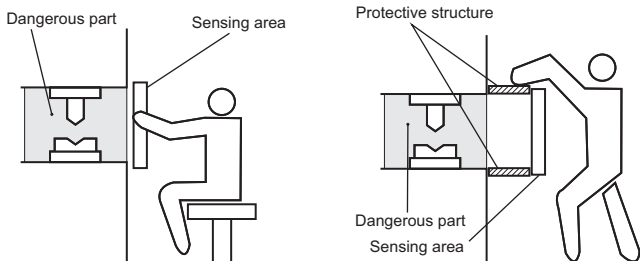


Wrong mounting method

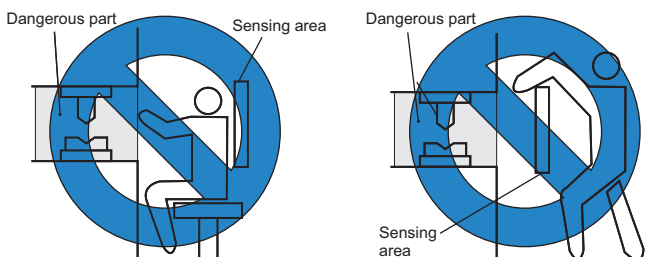

Safety distance



- Calculate the safety distance correctly, and always maintain a distance which is equal to or greater than the safety distance, between the sensing area of this light curtain and the dangerous parts of the machinery. (Please check the latest standards for the equation.) If the safety distance is miscalculated or if sufficient distance is not maintained, there is a danger of serious injury or death.
- Before designing the system, refer to the relevant standards of the region where this device is to be used and then install this device. Also, the below calculation is valid only when the intrusion direction is perpendicular to the sensing area. In case the intrusion direction is not perpendicular to the sensing area, be sure to refer to the relevant standard (regional standard, specification of the machine, etc.) for details of the calculation.

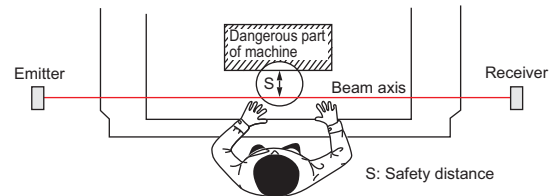

The sizes of the minimum sensing objects for this device vary depending on whether or not the floating blanking function is being used. Calculate the safety distance with the proper size of the minimum sensing object and appropriate equation.

Size of minimum sensing object when applying floating blanking function

	Min. sensing object when applying floating blanking function			
	Invalid	Setting (Note)		
		1 beam channel	2 beam channels	3 beam channels
SF4B-F□ (Min. sensing object ø14 mm ø0.551 in)	ø14 mm ø0.551 in	ø24 mm ø0.945 in	ø34 mm ø1.339 in	ø44 mm ø1.732 in
SF4B-H□ (Min. sensing object ø25 mm ø0.984 in)	ø25 mm ø0.984 in	ø45 mm ø1.772 in	ø65 mm ø2.559 in	ø85 mm ø3.346 in
SF4B-A□ (Min. sensing object ø45 mm ø1.772 in)	ø45 mm ø1.772 in	ø85 mm ø3.346 in	ø125 mm ø4.921 in	ø165 mm ø6.496 in

Note: Refer to p.7 for details of the floating blanking function. However, the floating blanking function cannot be used with the SF4B-□-01<V2>, the SF4B-□-03<V2> and SF-C14EX-01.

For use in Europe (EU) (as EN 999)] (Also applicable to ISO 13855 / JIS B 9715)

For intrusion direction perpendicular to the sensing area
 <In case that the minimum sensing object is ø40 mm ø1.575 in or less>

- Equation ① $S = K \times T + C$
 S: Safety distance (mm)
 Minimum required distance between the sensing area surface and the dangerous parts of the machine
 K: Intrusion velocity of operator's body or object (mm/sec.)
 Normally taken as 2,000 (mm/sec.) for calculation
 T: Response time of total equipment (sec.)
 $T = T_m + T_{SF4B}$
 T_m: Maximum halting time of machinery (sec.)
 T_{SF4B}: Response time of the SF4B<V2> series (sec.)
 C: Additional distance calculated from the size of the minimum sensing object of the light curtain (mm)
 However, the value of “C” cannot be less than 0.
 $C = 8 \times (d - 14)$
 d: Minimum sensing object diameter (mm)

PRECAUTIONS FOR PROPER USE

- For calculating the safety distance “S”, there are the following five cases.
First calculate by substituting the value $K = 2,000$ (mm/sec.) in the equation above. Then, classify the obtained value of “S” into three cases, 1) $S < 100$, 2) $100 \leq S \leq 500$, and 3) $S > 500$. For Case 3) $S > 500$, recalculate by substituting the value $K = 1,600$ (mm/sec.). After that, classify the calculation result into two cases, 4) $S \leq 500$ and 5) $S > 500$. For details, refer to the instruction manual enclosed with this product. For calculating “T_m” (maximum halt time of the machinery), use a special device called a “brake monitor”.
When this device is used in the “PSDI mode”, an appropriate safety distance “S” must be calculated. For details, be sure to refer to the standards or regulations applicable in each region or country.

<In the case that the minimum sensing object is $\phi 40$ mm $\phi 1.575$ in or more>

- Equation $S = K \times T + C$
S: Safety distance (mm)
K: Intrusion velocity of operator's body or object (mm/sec.)
Taken as 1,600 (mm/sec.) for calculation
T: Response time of total equipment (sec.)
 $T = T_m + T_{SF4B}$
T_m: Maximum halting time of machinery (sec.)
T_{SF4B}: Response time of the SF4B<V2> series (sec.)
C: Additional distance calculated from the size of the minimum sensing object of the light curtain (mm)
C = 850 (mm) (Constant)

For use in the United States of America (as per ANSI B11.19)


- Equation ② $S = K \times (T_s + T_c + T_{SF4B} + T_{bm}) + D_{pf}$
S: Safety distance (mm)
Minimum required distance between the sensing area surface and the dangerous parts of the machine
K: Intrusion velocity {Recommended value in OSHA is 63 (inch/sec.) $\approx 1,600$ (mm/sec.)}
ANSI B11.19 does not define the intrusion velocity “K”. When determining “K”, consider possible factors including physical ability of operators.
T_s: Halting time calculated from the operation time of the control element (air valve, etc.) (sec.)
T_c: Maximum response time of the control circuit required for functioning the brake (sec.)
T_{SF4B}: Response time of light curtain (sec.)
T_{bm}: Additional halting time tolerance for the brake monitor (sec.)
The following equation holds when the machine is equipped with a brake monitor.
 $T_{bm} = T_a - (T_s + T_c)$
T_a: Setting time of brake monitor (sec.)
When the machine is not equipped with a brake monitor, it is recommended that 20 % or more of (T_s + T_c) is taken as additional halting time.
D_{pf}: Additional distance calculated from the size of the minimum sensing of the
SF4B-F□<V2>: D_{pf} = 23.8 mm 0.937 in
SF4B-H□<V2>: D_{pf} = 61.2 mm 2.409 in
SF4B-A□<V2>: D_{pf} = 129.2 mm 5.087 in
 $D_{pf} = 3.4 \times (d - 0.276)$ (inch)
 $\approx 3.4 \times (d - 7)$ (mm)
d: Minimum sensing object diameter 0.552 (inch) ≈ 14 (mm) SF4B-F□<V2>
Minimum sensing object diameter 0.985 (inch) ≈ 25 (mm) SF4B-H□<V2>
Minimum sensing object diameter 1.772 (inch) ≈ 45 (mm) SF4B-A□<V2>

Output waveform [Control outputs (OSSD 1, OSSD 2) ON]

- Since the receiver performs the self-diagnosis of the output circuit when the light curtain is in beam receiving status (ON status), the output transistor becomes OFF status periodically. (Refer to the figure below.)
When the OFF signal is fed back, the receiver judges the output circuit as normal. When the OFF signal is not fed back, the receiver judges either the output circuit or wiring as error, and the control outputs (OSSD 1, OSSD 2) maintain OFF status.



Since the OFF signal of this device might cause malfunction, perform the connection paying attention to the input response time of the machine to be connected to this device.

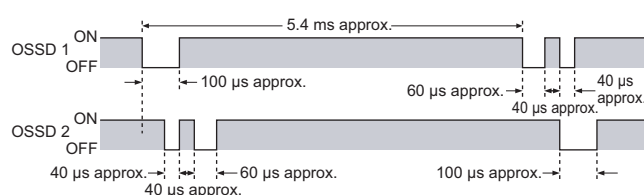


Influence of reflective surfaces





Install the light curtain by considering the effect of nearby reflective surfaces, and take countermeasures such as painting, masking, or changing the material of the reflective surface, etc. Failure to do so may cause the light curtain not to detect, resulting in serious body injury or death.

- Install this device at a distance of at least A (m) (given below) away from reflective surfaces such as metal walls, floors, ceilings, workpiece, covers, panels or glass surfaces.

Side view

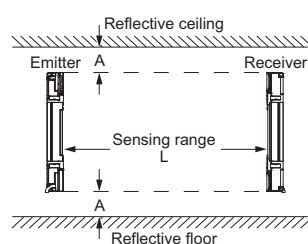

Top view

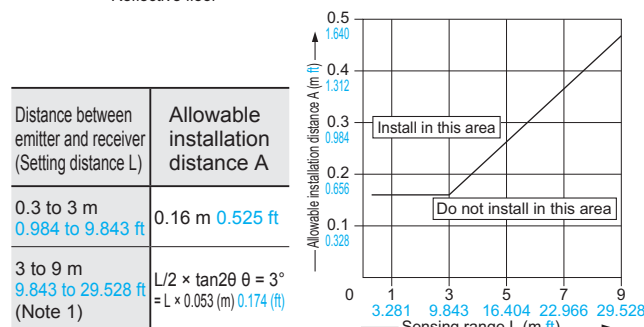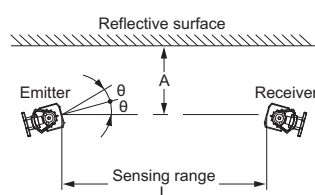

- Notes: 1) The setting distance “L” varies depending on the type of unit. Refer to “ORDER GUIDE” on p.10 for details.
2) The effective aperture θ angle for this device is $\pm 2.5^\circ$ or less (when $L > 3$ m 9.843 ft) as required by IEC 61496-2, ANSI / UL 61496-2.
However, install this device away from reflective surfaces considering an effective aperture angle of $\pm 3^\circ$ to take care of beam misalignment, etc. during installation.

PRECAUTIONS FOR PROPER USE

Handy-controller



This device enables to set each function using the handy-controller **SFB-HC** (optional). (However, a handy-controller cannot be used with the **SF4B-□-01<V2>**, the **SF4B-□-03<V2>** and the **SF-C14EX-01**.) Among the functions, the contents related to the safety distance such as the size of the minimum sensing object and response time are varied depending on the setting condition. When setting each function, re-calculate the safety distance, and make enough space larger than the calculated safety distance. Failure to do so might cause the accident that the device cannot stop quickly before reaching the dangerous area of the machinery, resulting in the serious injury or death.

- Refer to the instruction manual enclosed with the handy-controller for details of the function settings for using handy-controller **SFB-HC** (optional).

Troubleshooting quick reference sheet

Digital error indicator	Possible cause
0	Affected by noise. Handy-controller setting error.
1	Incorrect combination of emitter and receiver (e.g. number of beam channels) Output polarity setting wires (shield) connected incorrectly.
2	Series connection cable connected incorrectly. Problem with upper light curtain connected in series.
3	The number of light curtains connected in series and the total number of beam channels is outside the specification range.
4	<Emitter side lights up> Interlock setting input or emission halt input / reset input connected incorrectly. <Receiver side lights up> Affected by extraneous light, or mutual interference occurring.
5 or 9	<Emitter side lights up> Muting lamp output connected incorrectly. <Receiver side lights up> Control outputs (OSSD1, OSSD2) connected incorrectly.
6	Output polarity setting wires (shield) connected incorrectly.
7	External device monitoring input connected incorrectly. Malfunction with connection relay.
8	Synchronizing wires connected incorrectly. <Emitter side lights up> Problem at receiver side. <Receiver side lights up> Problem at emitter side.
F	Affected by noise. Power supply-related problem. Light curtain malfunction. * Please contact our office.
(STB)	Drop in incident light intensity due to dirty sensing surface or beam axis misalignment. (Beam axis input is erratic.)
(HALT)	Light emission halted.
(INTERLOCK)	Interlock active.
(PNP)	Control output is set to PNP output.
(NPN)	Control output is set to NPN output.

* Refer to the instruction manual for details.

Corner mirror



- Be sure to carry out maintenance while referring to the instruction manual for the **SF4B** series of light curtains.
- Do not use if dirt, water, or oil, etc. is attached to the reflective surface of this product. Appropriate sensing range may not be maintained due to diffusion or refraction.
- Make sure that you have read the instruction manual for the corner mirror thoroughly before setting up the corner mirrors and light curtains, and follow the instructions given. If the equipment is not set up correctly as stipulated in the instruction manual, incident light errors may result in unexpected situations which may result in serious injury or death.
- Please download the instruction manuals from our website.
- Light curtain **SF4B** series cannot be used as a retroreflective type. Avoid installing the light curtain as a retroreflective type when this product is applied.
- The mirror part of this product is made of glass. Note that if it is broken, the glass shards may fly apart.
- Do not use if crack or breakage appears on the reflective surface of this product. Proper sensing range may not be maintained due to diffusion or refraction.
If crack or breakage appears on the reflective surface of this product, replace the product.
- When adjusting beam channels with a laser alignment tool, etc., take sufficient care that the laser beam reflected by this product does not enter the eyes.
- Failure to follow the above items may result in death or serious injury.

DIMENSIONS (Unit: mm in)

The CAD data in the dimensions can be downloaded from the website:
panasonic-electric-works.net/sunx


SF4B-□<V2>

Light curtain


Assembly dimensions

Mounting drawing for the light curtain on which the standard mounting brackets **MS-SFB-1** (optional) and the intermediate supporting brackets are mounted.

<Rear mounting>

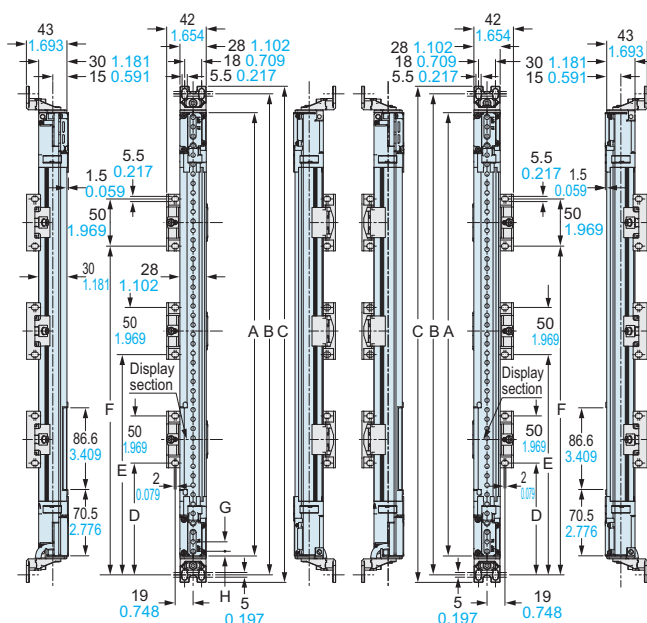

<Side mounting>

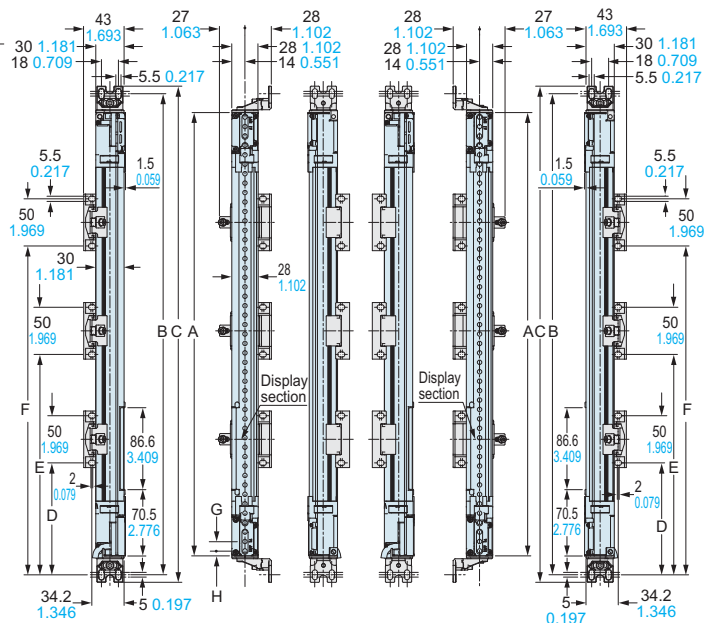

Emitter

Receiver

Emitter

Receiver

Model No.			Protective height (Main body length)	Mounting pitch	Total length	Intermediate supporting bracket mounting pitch		
			A	B	C	D	E	F
SF4B-F23□<V2>	SF4B-H12□<V2>	SF4B-A6□<V2>	230 9.055	270 10.630	286 11.260	—	—	—
SF4B-F31□<V2>	SF4B-H16□<V2>	SF4B-A8□<V2>	310 12.205	350 13.780	366 14.406	—	—	—
SF4B-F39□<V2>	SF4B-H20□<V2>	SF4B-A10□<V2>	390 15.354	430 16.929	446 17.559	—	—	—
SF4B-F47□<V2>	SF4B-H24□<V2>	SF4B-A12□<V2>	470 18.504	510 20.079	526 20.709	—	—	—
SF4B-F55□<V2>	SF4B-H28□<V2>	SF4B-A14□<V2>	550 21.654	590 23.228	606 23.858	—	—	—
SF4B-F63□<V2>	SF4B-H32□<V2>	SF4B-A16□<V2>	630 24.803	670 26.378	686 27.008	—	—	—
SF4B-F71□<V2>	SF4B-H36□<V2>	SF4B-A18□<V2>	710 27.953	750 29.528	766 30.157	—	—	—
SF4B-F79□<V2>	SF4B-H40□<V2>	SF4B-A20□<V2>	790 31.102	830 32.677	846 33.307	390 15.354	—	—
SF4B-F95□<V2>	SF4B-H48□<V2>	SF4B-A24□<V2>	950 37.402	990 38.976	1,006 39.606	470 18.504	—	—
SF4B-F111□<V2>	SF4B-H56□<V2>	SF4B-A28□<V2>	1,110 43.701	1,150 45.276	1,166 45.905	550 21.654	—	—
SF4B-F127□<V2>	SF4B-H64□<V2>	SF4B-A32□<V2>	1,270 50.000	1,310 51.575	1,326 52.505	418 16.457	842 33.150	—
—	SF4B-H72□<V2>	SF4B-A36□<V2>	1,430 56.299	1,470 57.874	1,486 58.504	472 18.583	948 37.323	—
—	SF4B-H80□<V2>	SF4B-A40□<V2>	1,590 62.598	1,630 64.173	1,646 64.803	525 20.669	1,055 41.535	—
—	SF4B-H88□<V2>	SF4B-A44□<V2>	1,750 68.898	1,790 70.472	1,806 71.102	433 17.047	870 34.252	1,308 51.496
—	SF4B-H96□<V2>	SF4B-A48□<V2>	1,910 75.197	1,950 76.772	1,966 77.401	473 18.622	950 37.402	1,428 56.220

Model No.	Beam pitch	First beam channel position
	G	H
SF4B-F□<V2>	10 0.394	5 0.197
SF4B-H□<V2>	20 0.787	5 0.197
SF4B-A□<V2>	40 1.575	15 0.591

DIMENSIONS (Unit: mm in)

The CAD data in the dimensions can be downloaded from the website:
panasonic-electric-works.net/sunx


SF4B-□<V2>

Light curtain

Assembly dimensions

Mounting drawing for the light curtain on which the dead zoneless brackets **MS-SFB-3** (optional) and the intermediate supporting brackets are mounted.


<Rear mounting>

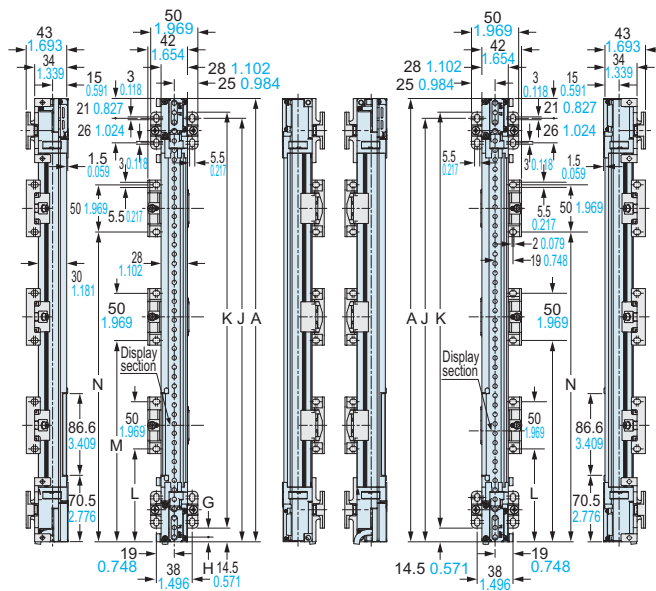

Emitter

Receiver

<Side mounting>

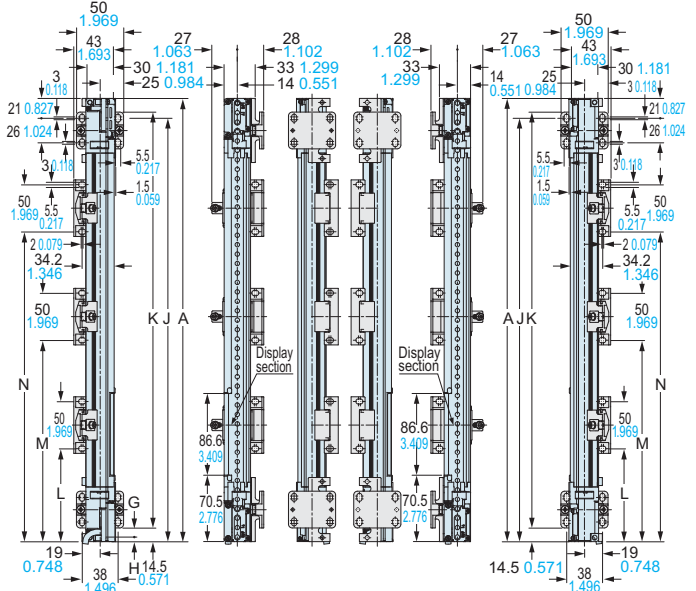

Emitter

Receiver

Model No.			Protective height (Main body) length	Mounting pitch	Total length	Intermediate supporting bracket mounting pitch		
			A	J	K	L	M	N
SF4B-F23□<V2>	SF4B-H12□<V2>	SF4B-A6□<V2>	230 9.055	209 8.228	201 7.913	—	—	—
SF4B-F31□<V2>	SF4B-H16□<V2>	SF4B-A8□<V2>	310 12.205	289 11.378	281 11.063	—	—	—
SF4B-F39□<V2>	SF4B-H20□<V2>	SF4B-A10□<V2>	390 15.354	369 14.528	361 14.213	—	—	—
SF4B-F47□<V2>	SF4B-H24□<V2>	SF4B-A12□<V2>	470 18.504	449 17.677	441 17.362	—	—	—
SF4B-F55□<V2>	SF4B-H28□<V2>	SF4B-A14□<V2>	550 21.654	529 20.827	521 20.512	—	—	—
SF4B-F63□<V2>	SF4B-H32□<V2>	SF4B-A16□<V2>	630 24.803	609 23.976	601 23.661	—	—	—
SF4B-F71□<V2>	SF4B-H36□<V2>	SF4B-A18□<V2>	710 27.953	689 27.126	681 26.811	—	—	—
SF4B-F79□<V2>	SF4B-H40□<V2>	SF4B-A20□<V2>	790 31.102	769 30.276	761 29.961	370 14.567	—	—
SF4B-F95□<V2>	SF4B-H48□<V2>	SF4B-A24□<V2>	950 37.402	929 36.575	921 36.260	450 17.717	—	—
SF4B-F111□<V2>	SF4B-H56□<V2>	SF4B-A28□<V2>	1,110 43.701	1,089 42.874	1,081 42.559	530 20.866	—	—
SF4B-F127□<V2>	SF4B-H64□<V2>	SF4B-A32□<V2>	1,270 50.000	1,249 49.173	1,241 48.858	398 15.669	822 32.362	—
—	SF4B-H72□<V2>	SF4B-A36□<V2>	1,430 56.299	1,409 55.472	1,401 55.157	452 17.795	928 36.535	—
—	SF4B-H80□<V2>	SF4B-A40□<V2>	1,590 62.598	1,569 61.772	1,561 61.457	505 19.882	1,035 40.748	—
—	SF4B-H88□<V2>	SF4B-A44□<V2>	1,750 68.898	1,729 68.071	1,721 67.756	413 16.260	850 33.465	1,288 50.709
—	SF4B-H96□<V2>	SF4B-A48□<V2>	1,910 75.197	1,889 74.370	1,881 74.055	453 17.835	930 36.614	1,408 55.433

Model No.	Beam pitch	First beam channel position
	G	H
SF4B-F□<V2>	10 0.394	5 0.197
SF4B-H□<V2>	20 0.787	5 0.197
SF4B-A□<V2>	40 1.575	15 0.591

SF4B-□


Light curtain

Protection bar set MC-SFBH-□ assembly dimensions

Mounting drawing for the light curtain on which the front protection unit (**MC-SFBH-□**) is mounted.

<MC-SFBH-□(L)>

<MC-SFBH-□(R)>

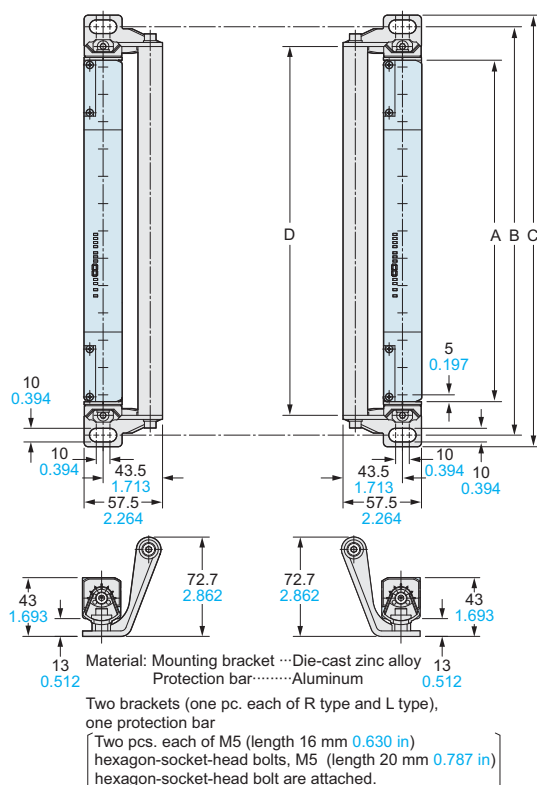

Model No.	Applicable light curtain model No.			A	B	C	D
MC-SFBH-12(-T)	SF4B-F23□<V2>	SF4B-H12□<V2>	SF4B-A6□<V2>	230 9.055	279 10.984	296 11.654	250 9.843
MC-SFBH-16(-T)	SF4B-F31□<V2>	SF4B-H16□<V2>	SF4B-A8□<V2>	310 12.205	359 14.134	376 14.803	330 12.991
MC-SFBH-20(-T)	SF4B-F39□<V2>	SF4B-H20□<V2>	SF4B-A10□<V2>	390 15.354	439 17.283	456 17.953	410 16.142
MC-SFBH-24(-T)	SF4B-F47□<V2>	SF4B-H24□<V2>	SF4B-A12□<V2>	470 18.504	519 20.433	536 21.102	490 19.291
MC-SFBH-28(-T)	SF4B-F55□<V2>	SF4B-H28□<V2>	SF4B-A14□<V2>	550 21.654	599 23.583	616 24.252	570 22.441
MC-SFBH-32(-T)	SF4B-F63□<V2>	SF4B-H32□<V2>	SF4B-A16□<V2>	630 24.803	679 26.732	696 27.402	650 25.591
MC-SFBH-36(-T)	SF4B-F71□<V2>	SF4B-H36□<V2>	SF4B-A18□<V2>	710 27.953	759 29.882	776 30.551	730 28.740
MC-SFBH-40(-T)	SF4B-F79□<V2>	SF4B-H40□<V2>	SF4B-A20□<V2>	790 31.102	839 33.031	856 33.701	810 31.890
MC-SFBH-48(-T)	SF4B-F95□<V2>	SF4B-H48□<V2>	SF4B-A24□<V2>	950 37.402	999 39.331	1,016 40.000	970 38.189
MC-SFBH-56(-T)	SF4B-F111□<V2>	SF4B-H56□<V2>	SF4B-A28□<V2>	1,110 43.701	1,159 45.630	1,176 46.299	1,130 44.488
MC-SFBH-64(-T)	SF4B-F127□<V2>	SF4B-H64□<V2>	SF4B-A32□<V2>	1,270 50.000	1,319 51.929	1,336 52.598	1,290 50.787
MC-SFBH-72(-T)	——	SF4B-H72□<V2>	SF4B-A36□<V2>	1,430 56.299	1,479 58.228	1,496 58.898	1,450 57.087
MC-SFBH-80(-T)	——	SF4B-H80□<V2>	SF4B-A40□<V2>	1,590 62.598	1,639 64.527	1,656 65.197	1,610 63.386
MC-SFBH-88(-T)	——	SF4B-H88□<V2>	SF4B-A44□<V2>	1,750 68.898	1,799 70.827	1,816 71.496	1,770 69.685
MC-SFBH-96(-T)	——	SF4B-H96□<V2>	SF4B-A48□<V2>	1,910 75.197	1,959 77.126	1,976 77.795	1,930 75.984


Protection bar set for rear / side mounting MC-SFBH-□-T assembly dimensions

Mounting drawing for the light curtain on which the front protection unit (**MC-SFBH-□-T**) is mounted.

Rear mounting

<MC-SFBH-□-T(L)>


<MC-SFBH-□-T(R)>

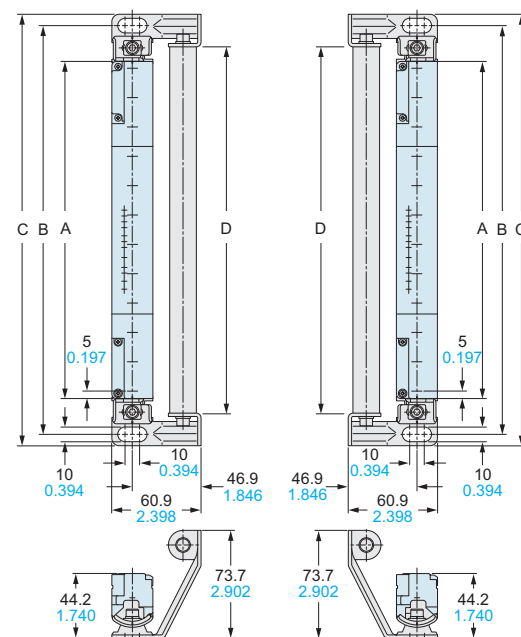

Side mounting

<MC-SFBH-□-T(L)>

<MC-SFBH-□-T(R)>

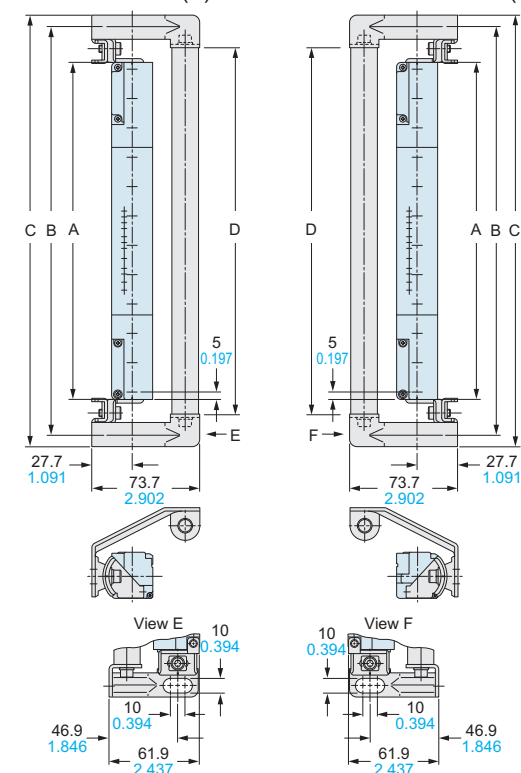

Material: Mounting bracketIron (Trivalent chrome plated)
Protection bar.....Aluminum

Two brackets (one pc. each of R type and L type),


Two pcs. each of M5 (length 18 mm **0.709 in**) hexagon-socket-head bolts, M5 (length 20 mm **0.787 in**) hexagon-socket-head bolt are attached.

■ DIMENSIONS (Unit: mm in)

The CAD data in the dimensions can be downloaded from the website:
panasonic-electric-works.net/sunx

RF-SFBH-□


Corner mirror (Optional)

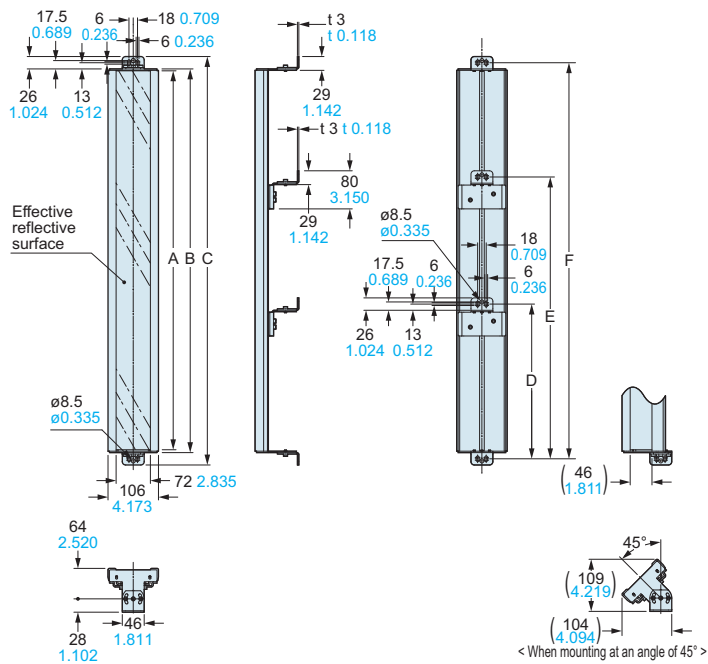

Model No.	A	B	C	D	E	F	Net weight
RF-SFBH-12	236 9.291	246 9.685	298 11.732	—	—	272 10.709	970 g approx.
RF-SFBH-16	316 12.441	326 12.835	378 14.882	—	—	352 13.858	1,170 g approx.
RF-SFBH-20	396 15.591	406 15.984	458 18.031	—	—	432 17.008	1,370 g approx.
RF-SFBH-24	476 18.740	486 19.134	538 21.181	—	—	512 20.157	1,570 g approx.
RF-SFBH-28	556 21.890	566 22.283	618 24.331	—	—	592 23.307	1,770 g approx.
RF-SFBH-32	636 25.039	646 25.433	698 27.480	—	—	672 26.457	1,970 g approx.
RF-SFBH-36	716 28.189	726 28.583	778 30.630	—	—	752 29.606	2,170 g approx.
RF-SFBH-40	796 31.339	806 31.732	858 33.779	458 ±50 18.031 ±1.969	—	832 32.756	2,660 g approx.
RF-SFBH-48	956 37.638	966 38.031	1,018 40.079	538 ±50 21.181 ±1.969	—	992 39.055	3,060 g approx.
RF-SFBH-56	1,116 43.937	1,126 44.331	1,178 46.378	618 ±50 24.331 ±1.969	—	1,152 45.354	3,460 g approx.
RF-SFBH-64	1,276 50.236	1,286 50.630	1,338 52.677	698 ±50 27.480 ±1.969	—	1,312 51.653	3,890 g approx.
RF-SFBH-72	1,436 56.535	1,446 56.929	1,498 58.976	538 ±50 21.181 ±1.969	1,018 ±50 40.079 ±1.969	1,472 57.953	4,550 g approx.
RF-SFBH-80	1,596 62.835	1,606 63.228	1,658 65.275	591 ±50 23.268 ±1.969	1,125 ±50 44.291 ±1.969	1,632 64.252	4,950 g approx.
RF-SFBH-88	1,756 69.134	1,766 69.527	1,818 71.575	645 ±50 25.394 ±1.969	1,231 ±50 48.464 ±1.969	1,792 70.551	5,350 g approx.
RF-SFBH-96	1,916 75.433	1,926 75.827	1,978 77.874	698 ±50 27.480 ±1.969	1,338 ±50 52.677 ±1.969	1,952 76.850	5,750 g approx.


MS-SFB-1

Standard mounting bracket (Optional)

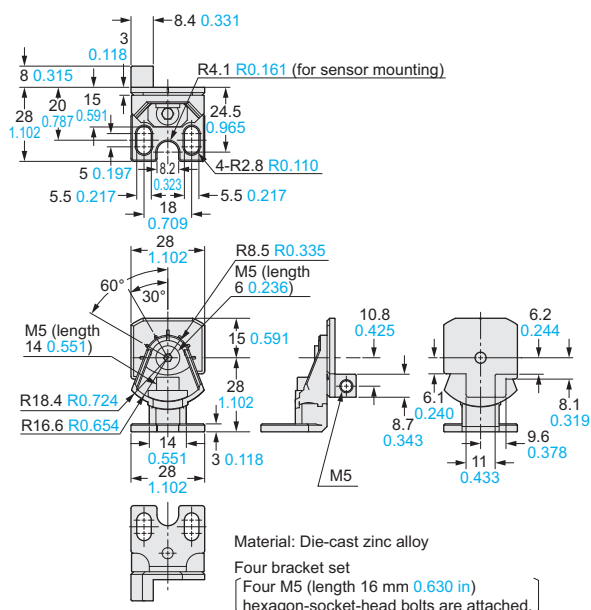

MS-SFB-1-T

M8 mounting bracket (Optional)

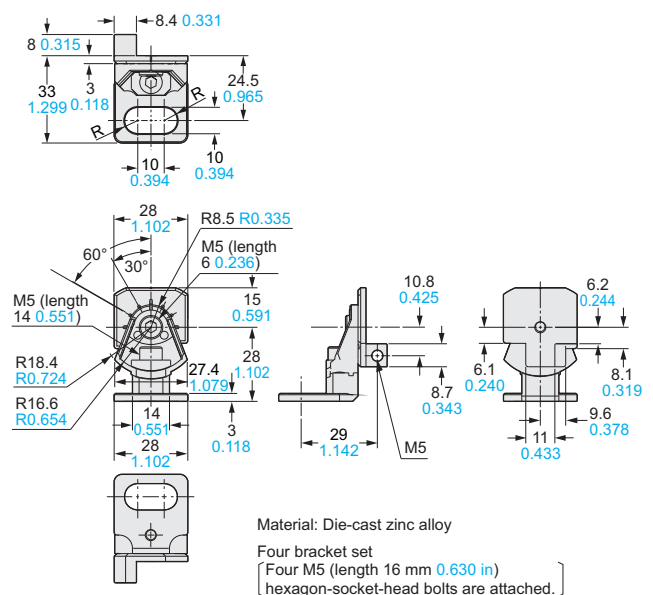


DIMENSIONS (Unit: mm in)

The CAD data in the dimensions can be downloaded from the website:
panasonic-electric-works.net/sunx

MS-SFB-2

Intermediate supporting bracket (Accessory for light curtain)

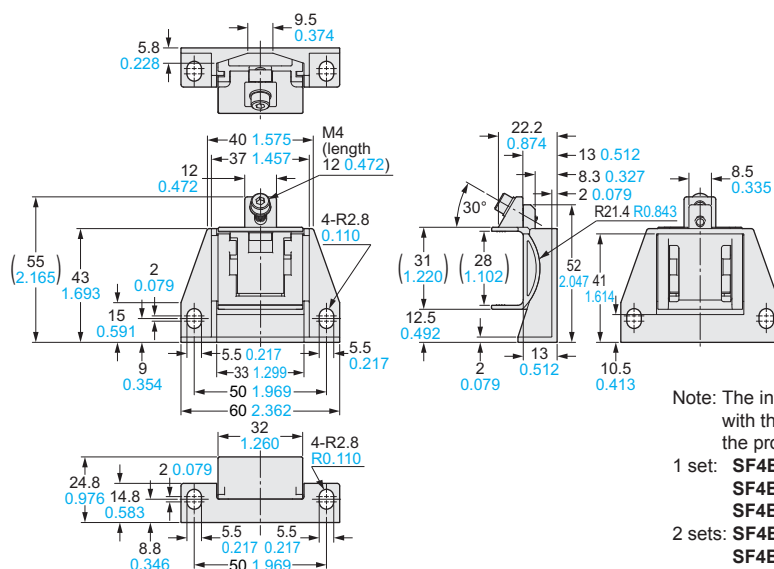

Material: Die-cast zinc alloy


Note: The intermediate supporting bracket (MS-SFB-2) is enclosed with the following products. The quantity differs depending on the product as shown below:

- 1 set: SF4B-F□<V2> ... Light curtain with 79 to 111 beam channels
- SF4B-H□<V2> ... Light curtain with 40 to 56 beam channels
- SF4B-A□<V2> ... Light curtain with 20 to 28 beam channels
- 2 sets: SF4B-F127<V2>
- SF4B-H□<V2> ... Light curtain with 64 to 80 beam channels
- SF4B-A□<V2> ... Light curtain with 32 to 40 beam channels
- 3 sets: SF4B-H□<V2> ... Light curtain with 88 to 96 beam channels
- SF4B-A□<V2> ... Light curtain with 44 to 48 beam channels


MS-SFB-3

Dead zoneless mounting bracket (Optional)

Main body

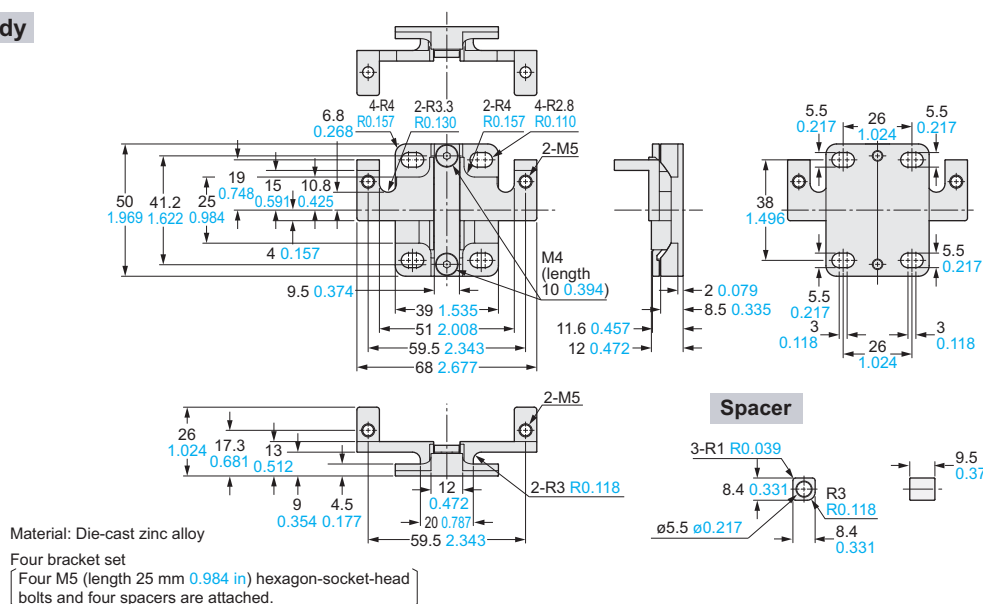


L-shaped mounting

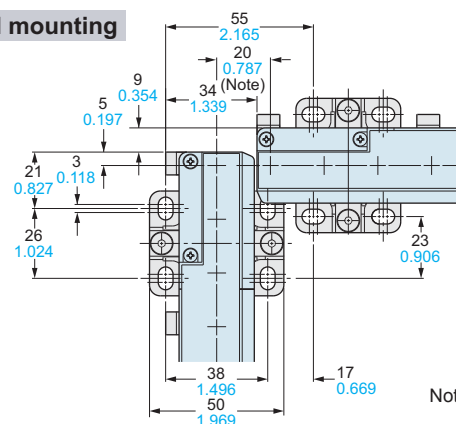

Mounting adjustment range

The adjustment range of the light curtain angle is up to ± 15 degrees.

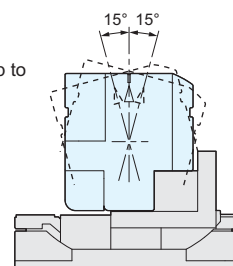


Note: The finger protection type has a beam pitch of 10 mm 0.394 in, which produces a dead zone. Additional measures will be required, such as using a protection cover.

DIMENSIONS (Unit: mm in)

The CAD data in the dimensions can be downloaded from the website:
panasonic-electric-works.net/sunx

MS-SFB-4

Pitch adapter bracket (Optional)

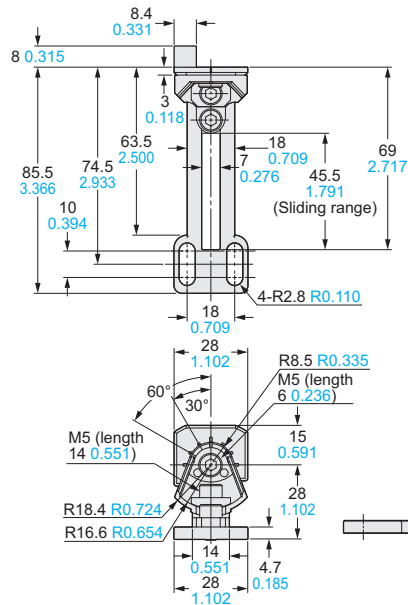


Material: Die-cast zinc alloy

Four bracket set
 [Four M5 (length 16 mm 0.630 in)
 hexagon-socket-head bolts are attached.]

MS-SFB-4-T

M8 pitch adapter bracket (Optional)

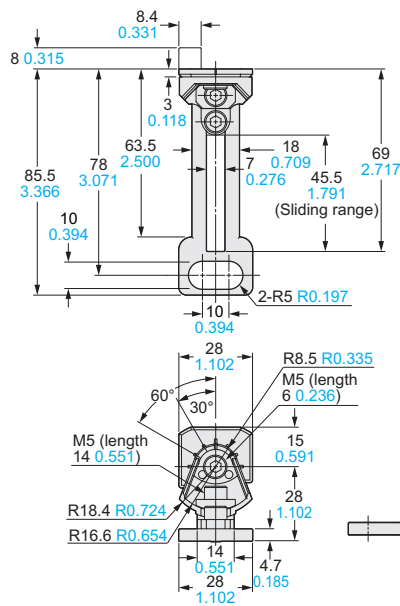


Material: Die-cast zinc alloy

Four bracket set
 [Four M5 (length 16 mm 0.630 in)
 hexagon-socket-head bolts are attached.]

MS-SFB-7-T MS-SFB-1-T2 (Rear mounting)


M8 rear mounting bracket (Optional) M8 rear / side mounting brackets set (Optional)

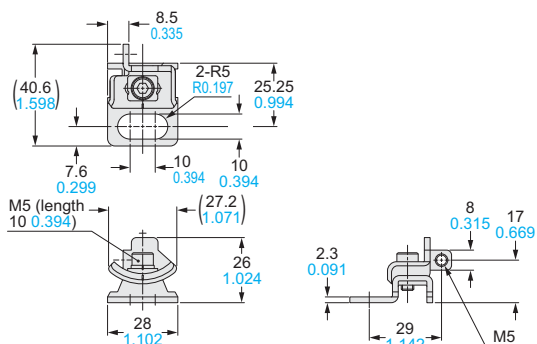

Material: Iron (Trivalent chrome plated)

Four bracket set
 [Four M5 (length 18 mm 0.709 in)
 hexagon-socket-head bolts are attached.]

Mounting adjustment range

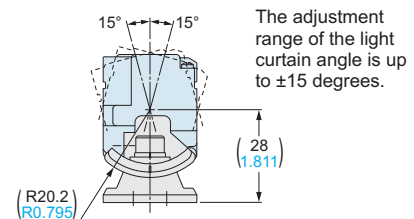

The adjustment range of the light curtain angle is up to ± 15 degrees.

DIMENSIONS (Unit: mm in)




The CAD data in the dimensions can be downloaded from the website:
panasonic-electric-works.net/sunx

MS-SFB-8-T MS-SFB-1-T2 (Side mounting)

M8 side mounting bracket (Optional) M8 rear / side mounting brackets set (Optional)

<MS-SFB-8-T(R)>

<MS-SFB-8-T(L)>

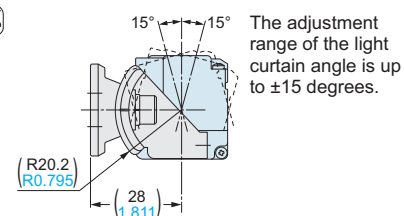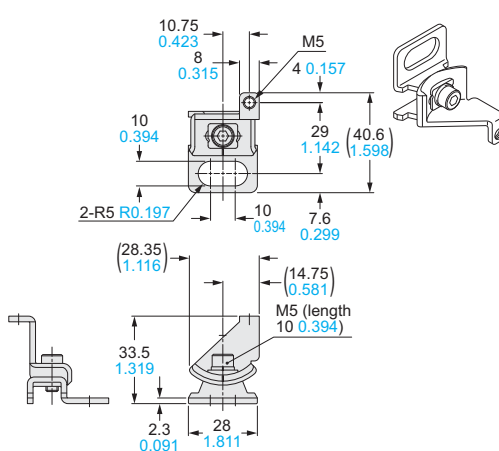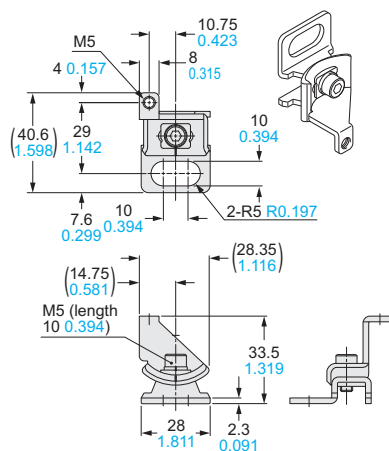
Mounting adjustment range

Material: Iron (Trivalent chrome plated)

Four bracket
 (two pcs. each of R type and L type) set
 Four M5 (length 18 mm 0.709 in)
 hexagon-socket-head bolts are attached.

SF-C11


Control unit (Optional)

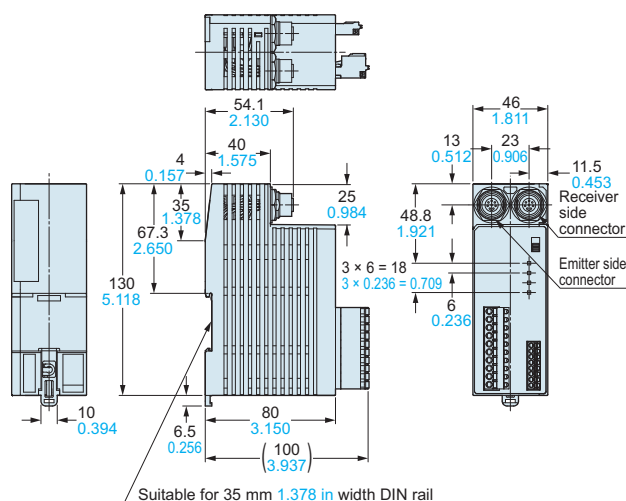


Suitable for 35 mm 1.378 in width DIN rail

SF-C12

Control unit (Optional)

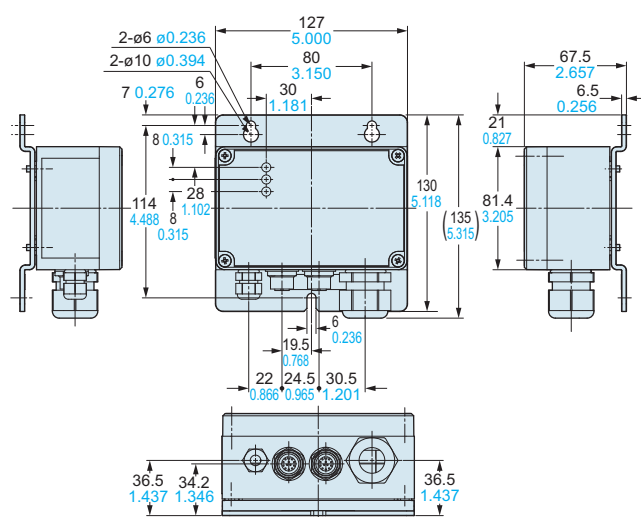**SF-C13**


Control unit (Optional)

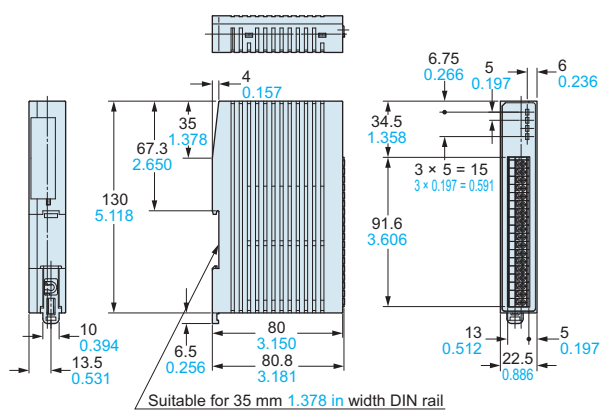

Suitable for 35 mm 1.378 in width DIN rail

SF-C14EX(-01)

Application expansion unit (Optional)

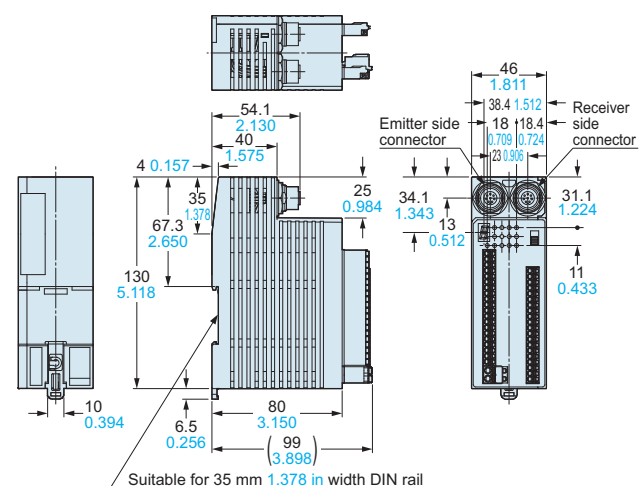


Suitable for 35 mm 1.378 in width DIN rail

DIMENSIONS (Unit: mm in)


The CAD data in the dimensions can be downloaded from the website:
panasonic-electric-works.net/sunx

SFB-HC

Handy-controller (Optional)

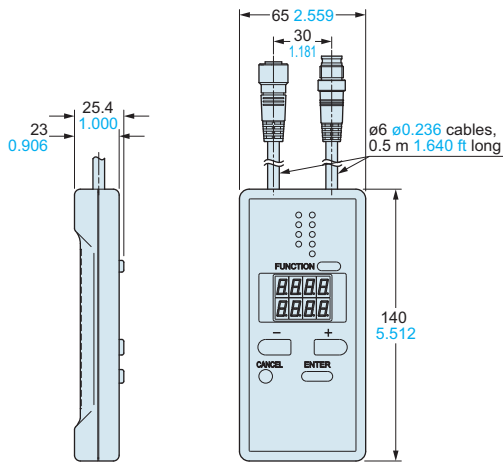**SFB-WY1**


Y-shaped connector

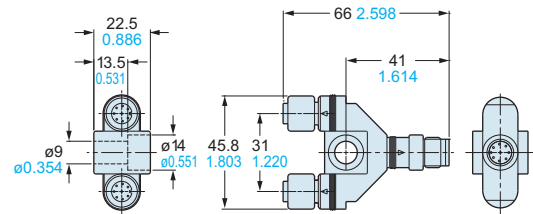


Net weight: 35 g approx.

SF-LAT-2N

Laser alignment tool (Optional)

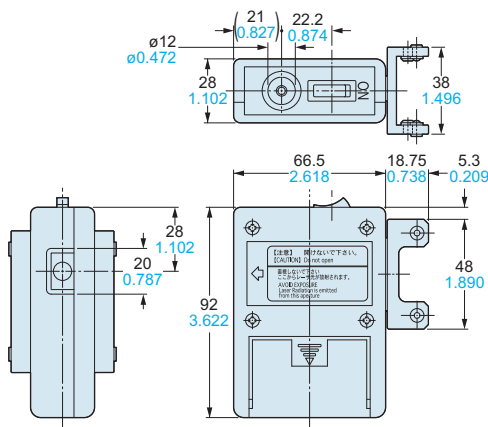**SF-IND-2**

Large display unit for light curtain (Optional)

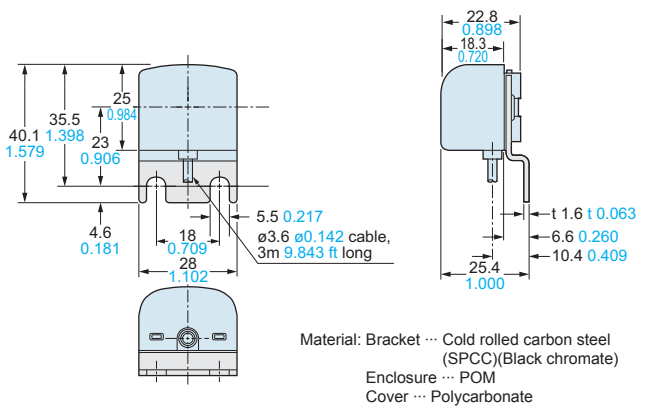

Please contact

Panasonic Electric Works SUNX Co., Ltd.

2431-1 Ushiyama-cho, Kasugai-shi, Aichi, 486-0901, Japan
 ■Telephone: +81-568-33-7211 ■Facsimile: +81-568-33-2631
 Overseas Marketing Department
 ■Telephone: +81-568-33-7861 ■Facsimile: +81-568-33-8591
panasonic-electric-works.net/sunx

Panasonic®